

# Dell™ G2410H Flat Panel Monitor User's Guide

[About Your Monitor](#)

[Setting Up the Monitor](#)

[Operating the Monitor](#)

[Troubleshooting](#)

[Appendix](#)

---

## Notes, Notices, and Cautions



**NOTE:** A NOTE indicates important information that helps you make better use of your monitor.



**NOTICE:** A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**CAUTION:** A CAUTION indicates a potential for property damage, personal injury, or death.

---

Information in this document is subject to change without notice.  
© 2009 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *DELL* and the *DELL* logo are trademarks of Dell Inc; *Microsoft* and *Windows* are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries; *Adobe* is a trademark of Adobe Systems Incorporated, which may be registered in certain jurisdictions. *ENERGY STAR* is a registered trademark of the U.S. Environmental Protection Agency. As an ENERGY STAR partner, Dell Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

---

Model G2410t.

December 2009 Rev. A00

[Back to Contents Page](#)

## About Your Monitor

### Dell™ G2410H Flat Panel Monitor User's Guide




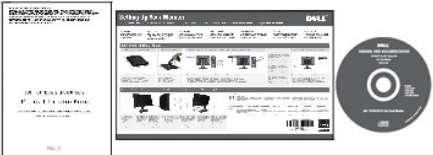
- [Package Contents](#)
- [Product Features](#)
- [Identifying Parts and Controls](#)
- [Monitor Specifications](#)
- [Plug and Play Capability](#)
- [Maintenance Guidelines](#)

---

## Package Contents

Your monitor ships with the components shown below. Ensure that you have received all the components and [contact Dell](#) if something is missing.

 **NOTE:** Some items may be optional and may not ship with your Monitor. Some features or media may not be available in certain countries.

	1 Monitor with stand
	1 Power Cable
	1 VGA Cable
	1 DVI Cable
	1 <i>Drivers and Documentation</i> media 1 <i>Quick Setup Guide</i> 1 <i>Safety Information</i>

---

## Product Features

The **Dell™ G2410H** flat panel display has an active matrix, thin-film transistor (TFT), liquid crystal display (LCD), and LED backlight. The monitor features

include:

- 24-inch (609.70 mm) viewable area display. 1920 x 1080 resolution, plus full-screen support for lower resolutions.
- Wide viewing angle to allow viewing from a sitting or standing position, or moving side-to-side.
- Tilt, swivel and vertical extension adjustment capability.
- Plug and play capability if supported by your system.
- On-Screen Display (OSD) adjustments for ease of set-up and screen optimization.
- Software and documentation media includes an information file (INF), Image color Matching File (ICM), PowerNap software application and product documentation.
- Energy Saver feature for Energy Star compliance.
- Asset Management Capable.
- Intelligent ambient light sensor (Energy Smart Plus and Energy Smart mode) which automatically adjusts the screen-brightness level in real-time in accordance to how well-lit the surrounding environment is.
- Dynamic dimming (Energy Smart Plus mode) which automatically reduces the screen-brightness level when the displayed image contains a high proportion of bright areas.
- High Dynamic Contrast Ratio (DCR).
- 0.15 W standby power when in sleep mode. ^
- Power Efficiency up to 90%.
- Energy Gauge shows the energy level being consumed by the monitor in real time.
- EPEAT Gold rating.
- Reduction in Plastic Packaging.
- PowerNap Software included (comes in the CD attached with the monitor).
- Arsenic / Mercury Free.
- BFR/CFR/PVC Free. ^^

^Based on measurement of standby power consumption using VGA input.

^^Excluding Power Cord, VGA, DVI cable.

---

## Identifying Parts and Controls

### Front View




Front View

Front panel controls

Label	Description
1	Ambient light Sensor Lens

- 2 Shortcut Key 1 / Up button
  - 3 Shortcut Key 2 / Down button
  - 4 OSD menu button / OK button
  - 5 Back / Exit button
  - 6 Power button (with power light indicator)
- 

## Back View

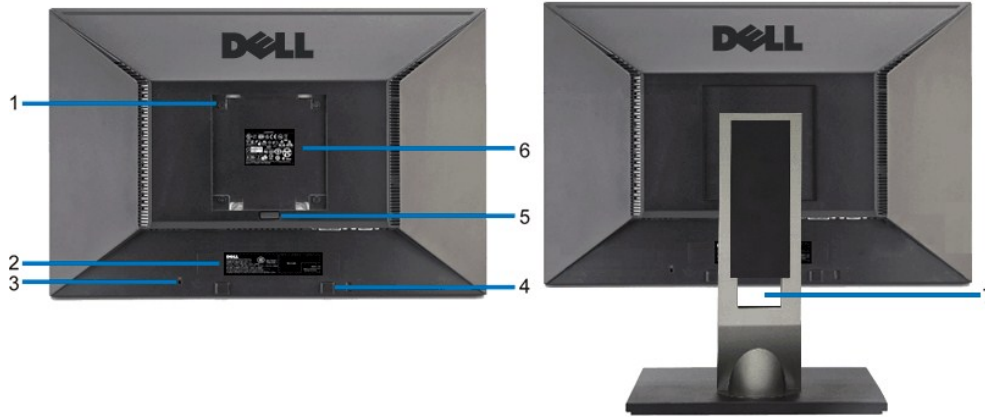

Back view

Back view with monitor stand

Label	Description/Use
1	VESA® mounting holes (100 mm) (behind attached VESA plate) Use to mount the monitor.
2	Barcode serial number label Refer to this label if you need to contact Dell for technical support.
3	Security lock slot Use a security lock with the slot to help secure your monitor.
4	Dell Soundbar mounting brackets Attach the optional Dell Soundbar.
5	Stand removal button Press to release the stand.
6	Regulatory rating label Lists the regulatory approvals.
7	Cable management slot Use to organize cables by placing them through the slot.


## Side View



Left view

Right view

## Bottom View

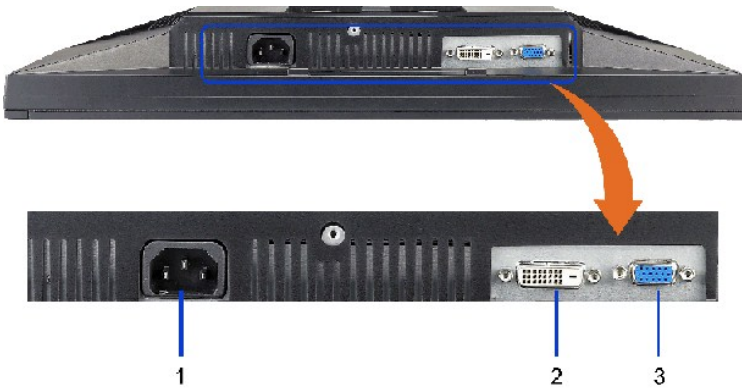

### Bottom view

Label	Description
1	AC power cord connector
2	DVI connector
3	VGA connector

## Monitor Specifications

### Flat Panel Specifications

Model	G2410H
Screen type	Active matrix - TFT LCD
Panel type	TN
Screen dimensions	24 inches (24-inch viewable image size)
Preset display area:	
Horizontal	531.36 mm (20.92 inches)
Vertical	298.89 mm (11.77 inches)
Pixel pitch	0.277 mm
Viewing angle	160° (vertical) typ, 170° (horizontal) typ
Luminance output	250 cd/m <sup>2</sup> (typ)
Contrast ratio	1000 to 1 (typ)
Dynamic contrast ratio	Up to 1,000,000 : 1 (typ)
Faceplate coating	Antiglare with hard-coating 3H
Backlight	W-LED system
Response Time	5ms typical
Color gamut (Typical)	80%*

\* G2410H color gamut (typical) is based on CIE1976 (80%) and CIE1931 (68%) test standards.

### Resolution Specifications

Model	G2410H
Horizontal scan range	30 kHz to 83 kHz (automatic)
Vertical scan range	56 Hz to 75 Hz (automatic)
Maximum resolution	1920 x 1080 at 60 Hz

### Video Supported Modes

<b>Model</b>	<b>G2410H</b>
Video display capabilities (DVI playback)	480i/480p/576i/576p/720p/1080i/1080p (Support HDCP)

## Preset Display Modes

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal/Vertical)
720 x 400	31.47	70.0	28.3	-/+
640 x 480	31.47	60.0	25.1	-/-
640 x 480	37.5	75.0	31.5	-/-
800 x 600	37.88	60.0	40.0	+/+
800 x 600	46.88	75.0	49.5	+/+
1024 x 768	48.36	60.0	65.0	-/-
1024 x 768	60.02	75.0	78.7	+/+
1152 x 864	67.5	75.0	108.0	+/+
1280 x 1024	64.0	60.0	108.0	+/+
1280 x 1024	80.0	75.0	135.0	+/+
1920 x 1080	67.5	60.0	148.5	+/+

## Electrical Specifications

<b>Model</b>	<b>G2410H</b>
Video input signals	Analog RGB, 0.7 Volts +/-5%, positive polarity at 75 ohm input impedance Digital DVI-D TMDS, 600 mV for each differential line, positive polarity at 50 ohm input impedance
Synchronization input signals	Separate horizontal and vertical synchronizations, polarity-free TTL level, SOG (Composite SYNC on green)
AC input voltage/frequency/current	100 to 240 VAC/50 or 60 Hz $\pm$ 3 Hz/2.0 A (Max.)
Inrush current	120 V: 40 A (Max.) 240 V: 80 A (Max.)

## Physical Characteristics

<b>Model</b>	<b>G2410H</b>
<b>Connector type</b>	15-pin D-subminiature, blue connector: DVI-D, white connector
<b>Signal cable type</b>	Digital: Detachable, DVI-D, Solid pins, shipped detached from the monitor Analog: Detachable, D-Sub, 15 pins, shipped attached to the monitor
<b>Dimensions (with stand)</b>	
Height (extended)	463.81 mm (18.26 inches)
Height (compressed)	363.81 mm (14.32 inches)
Width	570.75 mm (22.47 inches)
Depth	184.12 mm (7.25 inches)
<b>Dimensions (without stand)</b>	
Height	338.35 mm (13.32 inches)
Width	570.75 mm (22.47 inches)
Depth	62.0 mm (2.44 inches)
<b>Stand dimensions</b>	
Height (extended)	363.82 mm (14.32 inches)
Height (compressed)	323.52 mm (12.74 inches)
Width	279.92 mm (11.02 inches)
Depth	184.12 mm (7.25 inches)
<b>Weight</b>	
Weight with packaging	17.47 lb (7.94 kg)
Weight with stand assembly and cables	13.33 lb (6.06 kg)

Weight without stand assembly (For wall mount or VESA mount considerations - no cables)	8.86 lb (4.02 kg)
Weight of stand assembly	3.63 lb (1.65 kg)

## Environmental Characteristics

Model	G2410H
<b>Temperature</b>	
Operating	5° to 35°C (41° to 95°F)
Non-operating	Storage: -20° to 60°C (-4° to 140°F) Shipping: -20° to 60°C (-4° to 140°F)
<b>Humidity</b>	
Operating	10% to 80% (non-condensing)
Non-operating	Storage: 5% to 90% (non-condensing) Shipping: 5% to 90% (non-condensing)
<b>Altitude</b>	
Operating	3,657.6 m (12,000 ft) max
Non-operating	12,192 m (40,000 ft) max
<b>Thermal dissipation</b>	98.977 BTU/hour (maximum) 68.26 BTU/hour (typical)

## Power Management Modes

If you have VESA's DPM™ compliance display card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. This is referred to as *Power Save Mode*\*. If the computer detects input from keyboard, mouse, or other input devices, the monitor automatically resumes functioning. The following table shows the power consumption and signaling of this automatic power saving feature:

VESA Modes	Horizontal Sync	Vertical Sync	Video	Power Indicator	Power Consumption
Normal operation	Active	Active	Active	Blue	20 W (typical)/29 W (maximum)
Active-off mode	Inactive	Inactive	Blanked	Amber (breathing)	0.15 W <sup>^^</sup>
Switch off	-	-	-	Off	Less than 0.15 W

<sup>^^</sup>Based on measurement of standby power consumption using VGA input

The OSD will only function in the *normal operation* mode. When the **menu** or **plus** buttons are pressed in Active-off mode, one of the following messages will be displayed:


Analog Input In Power Save Mode. Press Computer Power Button or Any Key on Keyboard or Move Mouse

OR

Digital Input In Power Save Mode. Press Computer Power Button or Any Key on Keyboard or Move Mouse

Activate the computer and the monitor to gain access to the OSD.




 **NOTE:** This monitor is ENERGY STAR®-compliant as well as TCO '03 power management compatible.

\* Zero power consumption in OFF mode can only be achieved by disconnecting the main cable from the monitor.


## Pin Assignments

### VGA Connector

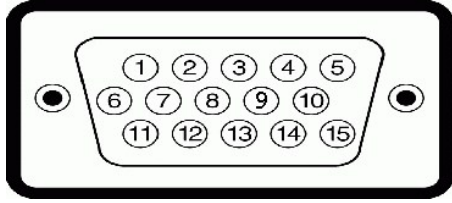

Pin Number	15-pin Side of the Connected Signal Cable
1	Video-Red
2	Video-Green
3	Video-Blue
4	GND
5	Self-test
6	GND-R
7	GND-G
8	GND-B
9	Computer 5V/3.3V
10	GND-sync
11	GND
12	DDC data
13	H-sync
14	V-sync
15	DDC clock

**DVI Connector**

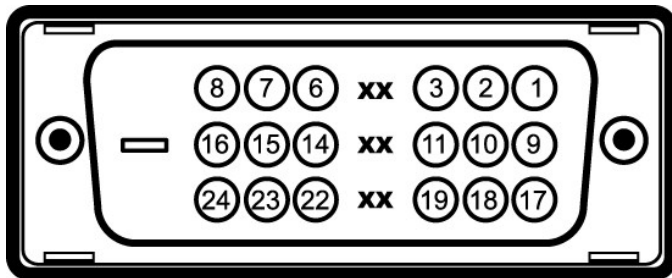

Pin Number	24-pin Side of the Connected Signal Cable
1	TMDS RX2-
2	TMDS RX2+
3	TMDS Ground
4	Floating
5	Floating
6	DDC Clock
7	DDC Data
8	Floating
9	TMDS RX1-
10	TMDS RX1+
11	TMDS Ground
12	Floating
13	Floating
14	+5V/+3.3V power
15	Self test
16	Hot Plug Detect
17	TMDS RX0-
18	TMDS RX0+



19	TMDS Ground
20	Floating
21	Floating
22	TMDS Ground
23	TMDS Clock+
24	TMDS Clock-

---

## Plug and Play Capability

You can install the monitor in any Plug and Play-compatible system. The monitor automatically provides the computer system with its Extended Display Identification Data (EDID) using Display Data Channel (DDC) protocols so the system can configure itself and optimize the monitor settings. Most monitor installations are automatic; you can select different settings if desired. For more information about changing the monitor settings, see [Operating the Monitor](#).

---



## LCD Monitor Quality and Pixel Policy

During the LCD monitor manufacturing process, it is not uncommon for one or more pixels to become fixed in an unchanging state. The visible result is a fixed pixel that appears as an extremely tiny dark or bright discolored spot. In almost every case, these fixed pixels are hard to see and do not detract from display quality or usability. A display with 1 to 5 fixed pixels is considered normal and within competitive standards. For more information, see Dell Support site at: [support.dell.com](http://support.dell.com).

---

## Maintenance Guidelines

### Cleaning Your Monitor

-  **CAUTION:** Read and follow the [safety instructions](#) before cleaning the monitor.
-  **CAUTION:** Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.

For best practices, follow the instructions in the list below while unpacking, cleaning, or handling your monitor:

- 1 To clean your antistatic screen, lightly dampen a soft, clean cloth with water. If possible, use a special screen-cleaning tissue or solution suitable for the antistatic coating. Do not use benzene, thinner, ammonia, abrasive cleaners, or compressed air.
  - 1 Use a lightly-dampened, warm cloth to clean the monitor. Avoid using detergent of any kind as some detergents leave a milky film on the monitor.
  - 1 If you notice white powder when you unpack your monitor, wipe it off with a cloth.
  - 1 Handle your monitor with care as dark-colored monitors may scratch and show white scuff marks more than light-colored monitors.
  - 1 To help maintain the best image quality on your monitor, use a dynamically changing screen saver and turn off your monitor when not in use.
- 

[Back to Contents Page](#)

[Back to Contents Page](#)

## Appendix

### Dell™ G2410H Flat Panel Monitor User's Guide

- [Safety Instructions](#)
  - [FCC Notice \(U.S. Only\) and Other Regulatory Information](#)
  - [Contacting Dell](#)
- 



### CAUTION: Safety Instructions



**CAUTION:** Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.

For information on safety instructions, see the *Product Information Guide*.

---

### FCC Notices (U.S. Only) and Other Regulatory Information

For FCC notices and other regulatory information, see the regulatory compliance website located at: [http://www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

---

### Contacting Dell

For customers in the United States, call 800-WWW-DELL (800-999-3355).



**NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

1. Visit [support.dell.com](http://support.dell.com).
  2. Verify your country or region in the **Choose A Country/Region** drop-down menu at the bottom of the page.
  3. Click **Contact Us** on the left side of the page.
  4. Select the appropriate service or support link based on your need.
  5. Choose the method of contacting Dell that is convenient for you.
- 

[Back to Contents Page](#)

[Back to Contents Page](#)

## Help on PowerNap Installation

To install PowerNap successfully, follow these steps: -

---

- |   |                                      |
|---|--------------------------------------|
| 1. <i>Check Operating System Requirements</i> | Windows XP, Windows Vista ,Windows 7 |
| 2. <i>Install Entech API</i>                  | <a href="#">Install</a>              |
| 3. <i>Install PowerNap Software</i>           | <a href="#">Install</a>              |
- 

[Back to Contents Page](#)

[Back to Contents Page](#)


## Setting Up Your Monitor

### Dell™ G2410H Flat Panel Monitor

---

#### **If you have a Dell™ desktop or a Dell™ portable computer with internet access**

1. Go to <http://support.dell.com>, enter your service tag, and download the latest driver for your graphics card.
2. After installing the drivers for your Graphics Adapter, attempt to set the resolution to **1920 X 1080** again.

 **NOTE:** If you are unable to set the resolution to 1920 X 1080, please contact Dell™ to inquire about a Graphics Adapter that supports these resolutions.

---

[Back to Contents Page](#)

## Setting Up Your Monitor

### Dell™ G2410H Flat Panel Monitor

---


### If you have non Dell™ desktop, portable computer, or graphic card

In Windows XP®:

1. Right-click on the desktop and click **Properties**.
2. Select the **Settings** tab.
3. Select **Advanced**.
4. Identify your graphics controller supplier from the description at the top of the window (e.g. NVIDIA, ATI, Intel etc.).
5. Refer to the graphic card provider website for updated driver (for example, <http://www.ATI.com> OR <http://www.NVIDIA.com> ).
6. After installing the drivers for your Graphics Adapter, attempt to set the resolution to **1920 X 1080** again.

In Windows Vista® or Windows® 7:

1. Right-click on the desktop and click **Personalization**.
2. Click **Change Display Settings**.
3. Click **Advanced Settings**.
4. Identify your graphics controller supplier from the description at the top of the window (e.g. NVIDIA, ATI, Intel etc.).
5. Refer to the graphic card provider website for updated driver (for example, <http://www.ATI.com> OR <http://www.NVIDIA.com> ).
6. After installing the drivers for your Graphics Adapter, attempt to set the resolution to **1920 X 1080** again.

 **NOTE:** If you are unable to set the resolution to 1920 x 1080, please contact the manufacturer of your computer or consider purchasing a graphics adapter that support the video resolution of 1920 x 1080.

---


## Operating the Monitor







### Dell™ G2410H Flat Panel Monitor User's Guide

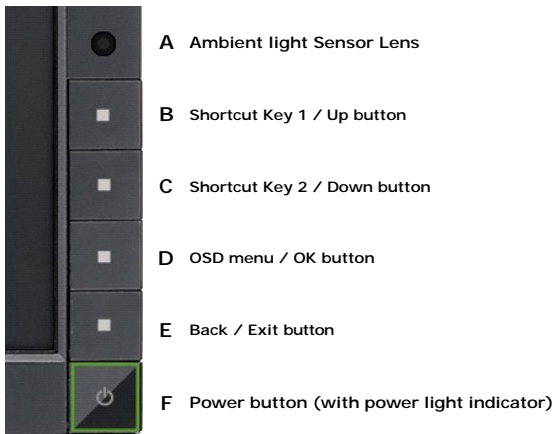- [Using the Front Panel Controls](#)
- [Using the On-Screen Display \(OSD\) Menu](#)
- [PowerNap Software](#)
- [Setting the Maximum Resolution](#)
- [Using the Dell Soundbar \(Optional\)](#)
- [Using the Tilt, Swivel, and Vertical Extension](#)

## Using the Front Panel Controls

Use the control buttons on the front of the monitor to adjust the characteristics of the image being displayed. As you use these buttons to adjust the controls, an OSD shows the numeric values of the characteristics as they change.



Front panel Button	Description
<p>A</p>  <p>Ambient light Sensor Lens</p>	<p>Intelligent ambient light sensor automatically adjust the screen brightness in real-time based on brightness of the environment.</p> <p><b>NOTE:</b>For best result, keep any object clear from the sensor which may potentially block the light source to the sensor.</p>
<p>B</p>  <p>Shortcut Key 1 / Up button</p>	<p>Use this button to directly access the "Shortcut Key 1" menu or to increase the values of the selected menu option.</p>
<p>C</p>  <p>Shortcut Key 2 / Down button</p>	<p>Use this button to directly access the "Shortcut Key 2" menu or to decrease the values of the selected menu option.</p>
<p>D</p>  <p>OSD menu / OK button</p>	<p>Use the MENU button to launch the on-screen display (OSD) and select the OSD Menu. See <a href="#">Accessing the Menu System</a>.</p>
<p>E</p>  <p>Back / Exit button</p>	<p>Go back to the main menu or exit the OSD main menu.</p>
<p>F</p>  <p>Power button (with power light indicator)</p>	<p>Use the Power button to turn the monitor on and off.</p> <p>The blue LED indicates the monitor is on and fully functional. A breathing amber LED indicates DPMS power save mode.</p>


## Using the On-Screen Display (OSD) Menu

### Accessing the Menu System

**NOTE:** If you change the settings and then either proceed to another menu or exit the OSD menu, the monitor automatically saves those changes. The changes are also saved if you change the settings and then wait for the OSD menu to disappear.


1. Press the MENU button to launch the OSD menu and display the main menu.

#### Main Menu for Analog (VGA) Input

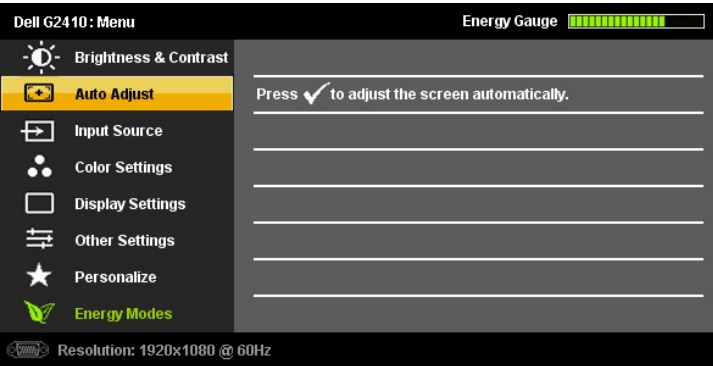

or


#### Main Menu for Digital (DVI-D) Input

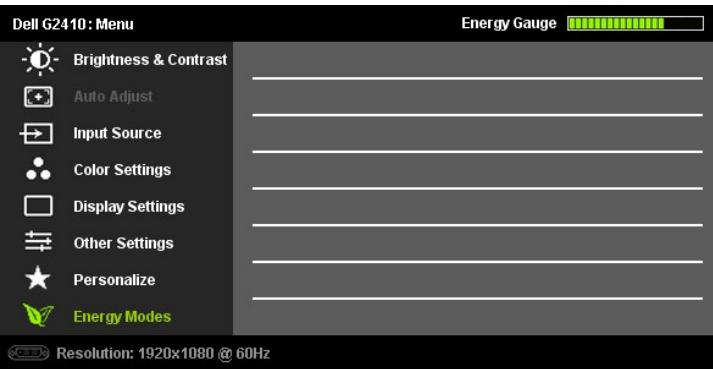



**NOTE:** AUTO ADJUST is only available when you use the analog (VGA) connector.

2. Press the and buttons to move between the setting options. As you move from one icon to another, the option name is highlighted. See the following table for a complete list of all the options available for the monitor.
3. Press the or button once to activate the highlighted option.
4. Press the and buttons to select the desired parameter.
5. Press or to enter the slide bar and then use the or button, according to the indicators on the menu, to make your changes.
6. Press the button once to return to the main menu to select another option or press the button two or three times to exit from the OSD menu.

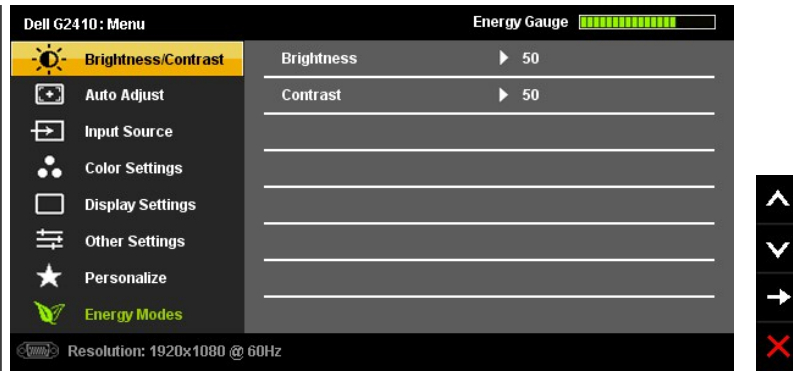Icon	Menu and Submenus	Description
	Energy Gauge	This meter shows the energy level being consumed by the monitor in real time. When the meter is green, it indicates the monitor is at a low level. When the energy consumed increases, the meter will change to yellow and subsequently red.
	BRIGHTNESS & CONTRAST	Use this menu to activate Brightness/Contrast adjustment.








**Back** Press  to go back to the main menu.


**Brightness** Brightness adjusts the luminance of the backlight.  
 Press the  button to increase brightness and Press the  button to decrease brightness (min 0 ~ max 100).  
**NOTE:**Brightness control is not adjustable in Energy Smart Plus and Energy Smart mode. Below message will appear if user attempts to adjust the brightness.







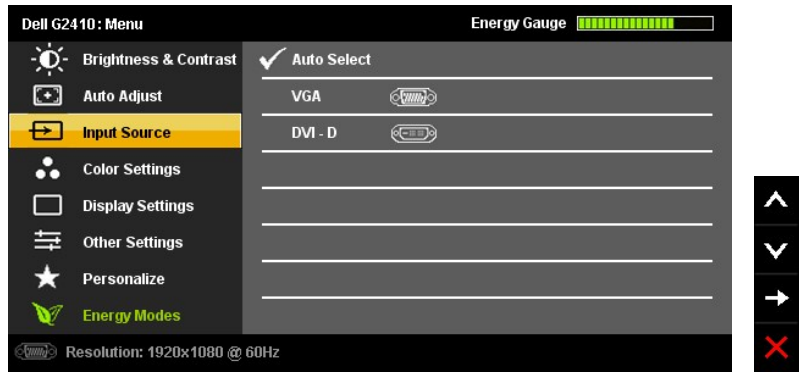


**NOTE:**Brightness control will be greyed out during "Screen dim" in PowerNap option when screen saver is activated.











	<p><b>Contrast</b></p> <p>Adjust Brightness first, and then adjust Contrast only if further adjustment is necessary.</p> <p>Press the  button to increase contrast and Press the  button to decrease contrast (min 0 – max 100). The Contrast function adjusts the degree of difference between darkness and lightness on the monitor screen.</p>
	<p><b>Exit Menu</b></p> <p>Press  to exit the OSD main menu.</p>
<p></p> <p><b>AUTO ADJUST</b></p>	<p>Even though your computer recognizes your monitor on startup, the Auto Adjustment function optimizes the display settings for use</p> <p>Auto Adjustment allows the monitor to self-adjust to the incoming video signal. After using Auto Adjustment, you can further tune your Clock and Phase controls under Displays Settings. The following dialog appears on a black screen as the monitor automatically adjust</p> <div data-bbox="418 504 1209 871" data-label="Image"> </div> <div data-bbox="418 892 836 976" data-label="Text"> <p>Auto Adjustment in progress...</p> </div> <p><b>NOTE:</b> In most cases, Auto Adjust produces the best image for your configuration.</p> <p><b>NOTE:</b> AUTO ADJUST option is only available when you are using the analog (VGA) connector.</p>
<p></p> <p><b>INPUT SOURCE</b></p>	<p>Use the INPUT SOURCE menu to select between different video signals that may be connected to your monitor.</p>

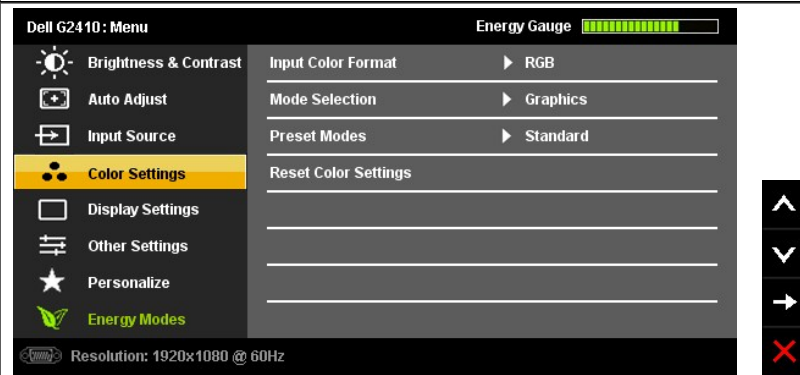







Back	Press  to go back to the main menu.
 VGA	Select VGA input when you are using the analog (VGA) connector. Press  to select the VGA input source.
 DVI-D	Select DVI-D input when you are using the Digital (DVI) connector. Press  to select the DVI input source.
Scan for Sources	Select Auto Select to scan for available input signals.
Exit Menu	Press  to exit the OSD main menu.

 Color Settings	Use the Color Settings to adjust the color setting mode and color temperature. There are different color setting sub-menus for VGA/DVI-D and Video input.
--	---

Color setting mode submenu	
----------------------------	--

<b>Back</b>	Press  to go back to the main menu.
<b>Input Color Format</b>	<p>Allows you to set the video input mode to:</p> <ul style="list-style-type: none"> <li>1 <b>RGB</b>: Select this option if your monitor is connected to a computer or DVD player using the VGA and DVI cable or the HDMI to C</li> <li>1 <b>YPbPr</b>: Select this option if your DVD player supports only YPbPr output.</li> </ul>
<b>Mode Selection</b>	<p>Allows you to set the display mode to:</p> <ul style="list-style-type: none"> <li>1 <b>Graphics</b>: Select this mode if your monitor is connected to your computer.</li> <li>1 <b>Video</b>: Select this mode if your monitor is connected to a DVD player.</li> </ul> <p><b>NOTE:</b> Depending upon the Display Mode you select the Preset Modes available for your monitor changes.</p>
<b>Preset Mode</b>	<p>Allows you to choose from a list of preset color modes.</p> <p>In the <b>Graphics</b> mode, you can set the color to the following preset values:</p> <ul style="list-style-type: none"> <li>1 <b>Standard</b>: Loads the monitor's default color settings. This is the default preset mode.</li> <li>1 <b>Multimedia</b>: Loads color settings ideal for multimedia applications.</li> <li>1 <b>Game</b>: Loads color settings ideal for most gaming applications.</li> <li>1 <b>Warm</b>: Increase the color temperature. The screen appears warmer with a red/yellow tint.</li> <li>1 <b>Cool</b>: Decreases the color temperature. The screen appears cooler with a blue tint.</li> <li>1 <b>Custom (R, G, B)</b>: Allows you to manually adjust the color settings. Press the  and  buttons to adjust the Red, Green, create your own preset color mode.</li> </ul> <p>In the <b>Video</b> mode, you can set the color to the following preset values:</p> <ul style="list-style-type: none"> <li>1 <b>Movie</b>: Loads color settings ideal for movies. This is the default preset mode.</li> <li>1 <b>Sports</b>: Loads color settings ideal for sports.</li> <li>1 <b>Game</b>: Loads color settings ideal for game.</li> <li>1 <b>Nature</b>: Loads color settings ideal for nature.</li> </ul>
<b>Hue</b>	<p>This feature can shift color of video image to green or purple. This is used to adjust the desired flesh tone color. Use  or  to ac '100'.</p> <p>Press  to increase the green shade of the video image</p> <p>Press  to increase the purple shade of the video image</p> <p><b>NOTE:</b> Hue adjustment is available only for video input.</p>

<p><b>Saturation</b></p>	<p>This feature can adjust the color saturation of the video image. Use  or  to adjust the saturation from '0' to '100'.</p> <p>Press  to increase the monochrome appearance of the video image</p> <p>Press  to increase the colorful appearance of the video image</p> <p><b>NOTE:</b> Saturation adjustment is available only for video input.</p>
<p><b>Color Reset</b></p>	<p>Resets your monitor's color settings to the factory defaults.</p>
<p><b>Exit Menu</b></p>	<p>Press  to exit the OSD main menu.</p>

 **DISPLAY SETTINGS**














**Display Setting submenu**


Display Setting submenu for VGA input




 
 


**Display Setting submenu for DVI-D input**

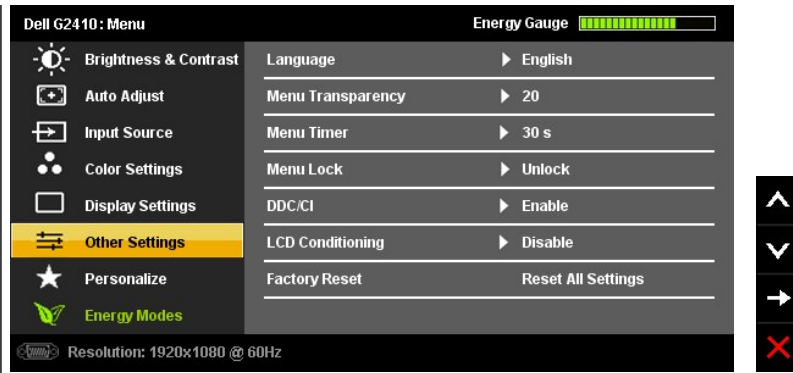

<b>Back</b>	Press  to go back to the main menu.
<b>Horizontal Position</b>	Use the  and  buttons to adjust image left and right. Minimum is '0' (-). Maximum is '100' (+). <b>NOTE:</b> When using a DVI source, the Horizontal Position setting is not available.
<b>Vertical Position</b>	Use the  and  buttons to adjust image up and down. Minimum is '0' (-). Maximum is '100' (+). <b>NOTE:</b> When using a DVI source, the Vertical Position setting is not available.
<b>Sharpness</b>	This feature can make the image look sharper or softer. Use  or  to adjust the sharpness from '0' to '100'.
<b>Pixel Clock</b>	The Phase and Pixel Clock adjustments allow you to adjust your monitor to your preference.  Use the  and  buttons to adjust for best image quality.
<b>Phase</b>	If satisfactory results are not obtained using the Phase adjustment, use the Pixel Clock (coarse) adjustment and then use Phase (fine).  <b>NOTE:</b> Pixel Clock and Phase Adjustments are only available for "VGA" input.
<b>Dynamic Contrast</b>	The Dynamic Contrast adjustment helps the user to get a higher contrast if you choose Game preset, Movie Preset, Sports Preset or Energy Smart Plus (Brightness control is disabled while in Dynamic Contrast mode and will be greyed out.)  Use the  button to enable the Dynamic Contrast adjustment. Use the  button to disable the Dynamic Contrast adjustment. <b>NOTE:</b> Dynamic Contrast is not available (greyed out) in Energy Smart Plus and Energy Smart modes.
<b>Display Reset</b>	Reset the image to the original factory setting.
<b>Exit Menu</b>	Press  to exit the OSD main menu.
 <b>OTHER SETTINGS</b>	



Back	Press  to go back to the main menu.
Language	Language option to set the OSD display to one of seven languages (English, Espanol, Francais, Deutsch, Brazilian Portuguese, Japan Chinese).
Menu Transparency	This function is used to change the OSD background from opaque to transparent.
Menu Timer	OSD Hold Time: Sets the length of time the OSD will remain active after the last time you pressed a button. Use the  and  buttons to adjust the slider in 1 second increments, from 5 to 60 seconds.
Menu Lock	Controls user access to adjustments. When 'Lock' is selected, no user adjustments are allowed. All buttons are locked except  E <b>NOTE:</b> When the OSD is locked, pressing the menu button will take the user directly to the OSD settings menu, with 'OSD Lock' pre- and hold  E button for 15 seconds to unlock and allow user access to all applicable settings.
DDC/CI	DDC/CI (Display Data Channel/Command Interface) allows your monitor parameters (brightness, color balance etc) to be adjustable computer. You can disable this feature by selecting "Disable". You can disable this feature by selecting Disable. The following warning message appears: Select Yes to disable DDC/CI and No to exit with out making changes. <b>NOTE:</b> For best user experience and optimum performance of your monitor, keep this feature enabled. <div data-bbox="418 1537 1198 1780" style="background-color: black; color: white; padding: 10px; border: 1px solid black;"> <p style="text-align: center;"><b>WARNING MESSAGE</b> <span style="float: right;"><b>DELL G2410</b></span></p> <p style="text-align: center;">The function of adjusting display setting using PC application will be disabled.</p> <p style="text-align: center;">Do you wish to disable DDC/CI function?</p> <p style="text-align: center;"> <input type="button" value="No"/>   <input type="button" value="Yes"/> </p> </div>

 

**LCD Conditioning**

This feature will help reduce minor cases of image retention.

If an image appears to be stuck on the monitor, select **LCD Conditioning** to help eliminate any image retention. Using the LCD Conditioning feature cannot remove severe cases of image retention or burn-in.

**NOTE:** Use LCD Conditioning only when you experience a problem with image retention.


The below warning message appears once user selects "Enable" LCD Conditioning.

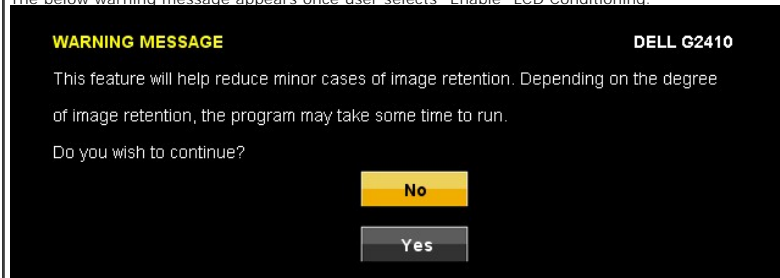


**NOTE:** Press any button on the monitor to terminate LCD Conditioning at any time.

**Factory Reset**

Reset all OSD settings to the factory preset values.

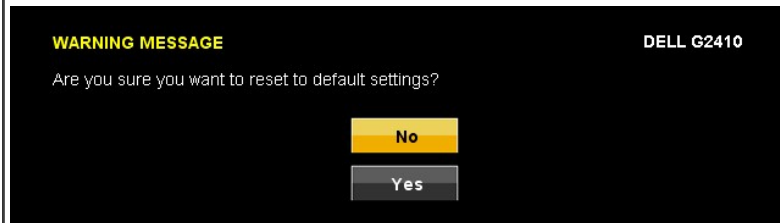










**Exit Menu**


Press  to exit the OSD main menu.







Personalize

Dell G2410: Menu Energy Gauge 

 Brightness & Contrast	Shortcut Key 1	▶ Energy Modes
 Auto Adjust	Shortcut Key 2	▶ Brightness/Contrast
 Input Source		
 Color Settings		
 Display Settings		
 Other Settings		
 <b>Personalize</b>		
 Energy Modes		

 Resolution: 1920x1080 @ 60Hz



[Back to Contents Page](#)

## Setting Up Your Monitor

### Dell™ G2410H Flat Panel Monitor

---

### Setting the display resolution to 1920 X 1080 (maximum)

For maximum display performance while using the Microsoft® Windows® operating systems, set the display resolution to 1920 X 1080 pixels by performing the following steps:

In Windows XP®:

1. Right-click on the desktop and click **Properties**.
2. Select the **Settings** tab.
3. Move the slider-bar to the right by pressing and holding the left-mouse button and adjust the screen resolution to **1920 X 1080**.
4. Click **OK**.

In Windows Vista® or Windows® 7:

1. Right-click on the desktop and click **Personalization**.
2. Click **Change Display Settings**.
3. Move the slider-bar to the right by pressing and holding the left-mouse button and adjust the screen resolution to **1920 X 1080**.
4. Click **OK**.

If you do not see **1920 X 1080** as an option, you may need to update your graphics driver. Please choose the scenario below that best describes the computer system you are using, and follow the provided directions:

**1: [If you have a Dell™ desktop or a Dell™ portable computer with internet access.](#)**

**2: [If you have non Dell™ desktop, portable computer, or graphic card.](#)**

---

[Back to Contents Page](#)

# Dell™ G2410H Flat Panel Monitor

[User Guide](#)

[Setting the display resolution to 1920 X 1080 \(maximum\)](#)

---

Information in this document is subject to change without notice.  
© 2009 Dell Inc. All rights reserved

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *DELL* and the *DELL* logo are trademarks of Dell Inc; *Microsoft* and *Windows* are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries; *Adobe* is a trademark of Adobe Systems Incorporated, which may be registered in certain jurisdictions; *ENERGY STAR* is a registered trademark of the U.S. Environmental Protection Agency. As an ENERGY STAR partner, Dell Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

---

Model G2410t.

December 2009 Rev. A00


## Setting Up the Monitor

### Dell™ G2410H Flat Panel Monitor User's Guide

- [Attaching the Stand](#)
- [Connecting the Monitor](#)
- [Organizing the Cables](#)
- [Attaching the Soundbar \(Optional\)](#)
- [Removing the Stand](#)
- [Wall Mounting \(Optional\)](#)

---

## Attaching the Stand

 **NOTE:** The stand is detached from monitor when it is shipped from the factory.




Remove the monitor cover and place the monitor on it.

1. Fit the two tabs on the upper part of the stand to the groove on the back of the monitor.
2. Lower the stand so that the monitor mounting area snaps onto the stand.

---


## Connecting Your Monitor

 **CAUTION:** Before you begin any of the procedures in this section, follow the [Safety Instructions](#).


To connect your monitor to the computer:

1. Turn off your computer and disconnect the power cable.
2. Connect either the white (digital DVI-D) or the blue (analog VGA) display connector cable to the corresponding video port on the back of your computer. Do not connect both cables on the same computer. Use both the cables only when they are connected to two different computers with appropriate video systems.

### Connecting the White DVI Cable

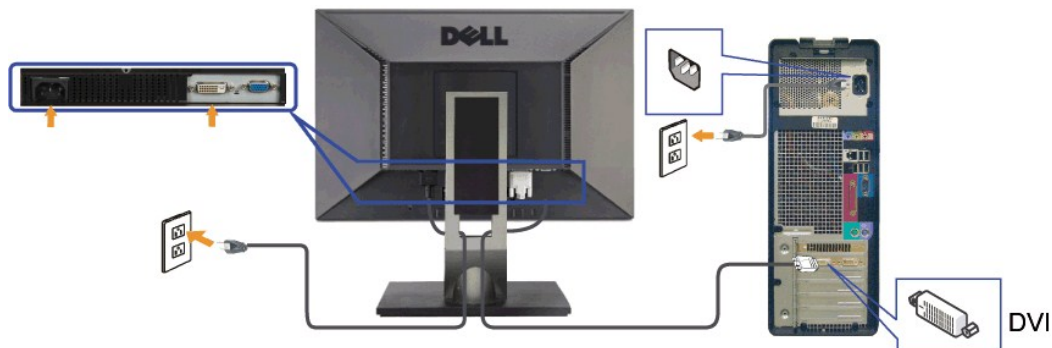

### Connecting the Blue VGA Cable

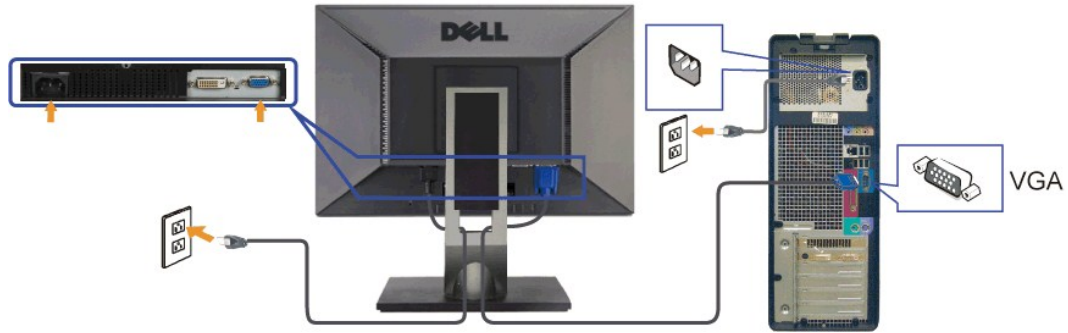

**⚠ CAUTION:** The graphics are used for the purpose of illustration only. Appearance of the computer may vary.

---

## Organizing the Cables



After attaching all necessary cables to your monitor and computer, (See [Connecting Your Monitor](#) for cable attachment,) use the cable management slot to organize all cables as shown above.

---

## Attaching the Soundbar (Optional)





🔔 **NOTICE:** Do not use with any device other than Dell Soundbar.

1. Working from the rear of the monitor, attach the Dell Soundbar by aligning the two slots with the two tabs along the bottom rear of the monitor.
  2. Slide the Dell Soundbar to the left until it snaps into place.
  3. Connect the Soundbar with the power brick.
  4. Plug the power cables of the power brick into a nearby outlet.
  5. Insert the lime-green mini stereo plug from the rear of the Soundbar into the computer's audio output jack.
- 

## Removing the Stand


🔔 **NOTE:** To prevent scratches on the LCD screen while removing the stand, ensure that the monitor is placed on a clean surface.

To remove the stand:



1. Press and hold the stand release button.
  2. Lift the stand up and away from the monitor .
- 

## Wall Mounting (Optional)

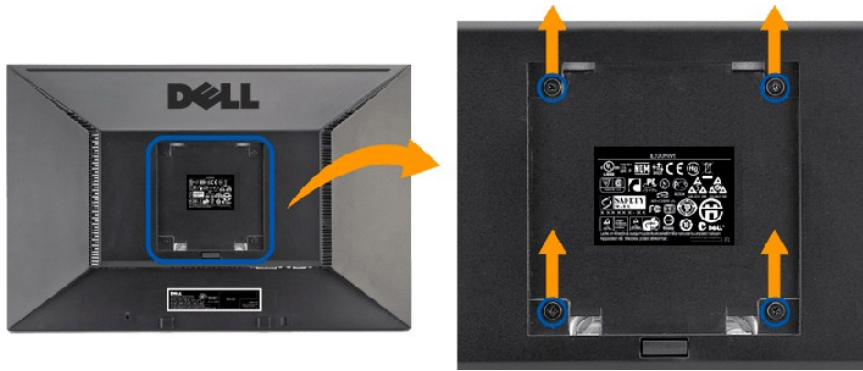

(Screw dimension: M4 x 10 mm).

Refer to the instructions that come with the VESA-compatible base mounting kit.

1. Place the monitor panel on a soft cloth or cushion on stable flat table.
2. Remove the stand.
3. Use a screwdriver to remove the four screws securing the plastic cover.
4. Attach the mounting bracket from the wall mounting kit to the LCD.
5. Mount the LCD on the wall by following the instructions that came with the base mounting kit.

 **NOTE:** For use only with UL Listed Wall Mount Bracket with minimum weight/load bearing capacity of 4.36 kg.

---

[Back to Contents Page](#)

## Troubleshooting

### Dell™ G2410H Flat Panel Monitor User's Guide

- [Troubleshooting Your Monitor](#)
- [Common Problems](#)
- [Product-Specific Problems](#)

**⚠ CAUTION:** Before you begin any of the procedures in this section, follow the [Safety Instructions](#).

---


## Troubleshooting Your Monitor

### Self-Test Feature Check

Your monitor provides a self-test feature that allows you to check whether your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

1. Turn off both your computer and the monitor.
2. Unplug the video cable from the back of the computer. To ensure proper Self-Test operation, remove both Digital (white connector) and the Analog (blue connector) cables from the back of computer.
3. Turn on the monitor.

The floating dialog box should appear on-screen (against a black background) if the monitor cannot sense a video signal and is working correctly. While in self-test mode, the power LED remains blue. Also, depending upon the selected input, one of the dialogs shown below will continuously scroll through the screen.

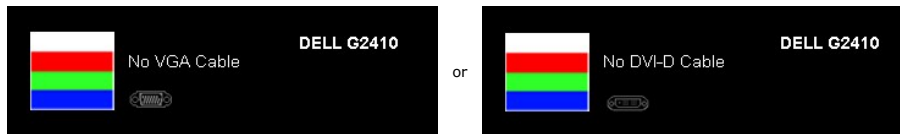

4. This box also appears during normal system operation, if the video cable becomes disconnected or damaged.
5. Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.

If your monitor screen remains blank after you use the previous procedure, check your video controller and computer, because your monitor is functioning properly.

---

## Built-in Diagnostics

Your monitor has a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with your monitor, or with your computer and video card.

**🔧 NOTE:** You can run the built-in diagnostics only when the video cable is unplugged and the monitor is in *self-test mode*.

To run the built-in diagnostics:

1. Ensure that the screen is clean (no dust particles on the surface of the screen).
2. Unplug the video cable(s) from the back of the computer or monitor. The monitor then goes into the self-test mode.
3. Press and hold the **B** and **E** buttons on the front panel, simultaneously for 2 seconds. A gray screen appears.



- A Ambient light Sensor Lens**
- B Shortcut Key 1 / Up button**
- C Shortcut Key 2 / Down button**
- D OSD menu / OK button**
- E Back / Exit button**
- F Power button (with power light indicator)**

4. Carefully inspect the screen for abnormalities.
5. Press the **E** button on the front panel again. The color of the screen changes to red.
6. Inspect the display for any abnormalities.
7. Repeat steps 5 and 6 to inspect the display in green, blue, and white colored screens.

The test is complete when the white screen appears. To exit, press the **E** button again.

If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.

## Common Problems

The following table contains general information about common monitor problems you might encounter and the possible solutions.

Common Symptoms	What You Experience	Possible Solutions
No Video/ Power LED off	No picture	<ul style="list-style-type: none"> <li>1 Ensure that the video cable connecting the monitor and the computer is properly connected and secure.</li> <li>1 Verify that the power outlet is functioning properly by using any other electrical equipment.</li> <li>1 Ensure that the power button is depressed fully.</li> </ul>
No Video/ Power LED on	No picture or no brightness	<ul style="list-style-type: none"> <li>1 Increase brightness &amp; contrast controls using the OSD.</li> <li>1 Perform monitor self-test feature check.</li> <li>1 Check for bent or broken pins in the video cable connector.</li> <li>1 Run the built-in diagnostics.</li> </ul>
Poor Focus	Picture is fuzzy, blurry, or ghosting	<ul style="list-style-type: none"> <li>1 Perform Auto Adjust using the OSD.</li> <li>1 Adjust the Phase and Pixel Clock controls using the OSD.</li> <li>1 Eliminate video extension cables.</li> <li>1 Reset the monitor to Factory Settings.</li> <li>1 Change the video resolution to the correct aspect ratio (16:9).</li> </ul>
Shaky/Jittery Video	Wavy picture or fine movement	<ul style="list-style-type: none"> <li>1 Perform Auto Adjust using the OSD.</li> <li>1 Adjust the Phase and Pixel Clock controls using the OSD.</li> <li>1 Reset the monitor to Factory Settings.</li> <li>1 Check environmental factors.</li> <li>1 Relocate the monitor and test it in another room.</li> </ul>
Missing Pixels	LCD screen has spots	<ul style="list-style-type: none"> <li>1 Cycle power on-off.</li> <li>1 Pixel that is permanently off is a natural defect that can occur in LCD technology.</li> <li>1 Run the built-in diagnostics.</li> </ul>
Stuck-on Pixels	LCD screen has bright spots	<ul style="list-style-type: none"> <li>1 Cycle power on-off.</li> <li>1 Pixel that is permanently off is a natural defect that can occur in LCD technology.</li> <li>1 Run the built-in diagnostics.</li> </ul>
Brightness Problems	Picture too dim or too bright	<ul style="list-style-type: none"> <li>1 Reset the monitor to Factory Settings.</li> <li>1 Auto Adjust using the OSD.</li> <li>1 Adjust brightness &amp; contrast controls using the OSD.</li> <li>1 Keep any object clear from the intelligent ambient light sensor.</li> </ul>
Geometric Distortion	Screen not centered correctly	<ul style="list-style-type: none"> <li>1 Reset the monitor to Factory Settings.</li> <li>1 Auto Adjust using the OSD.</li> <li>1 Adjust brightness &amp; contrast controls using the OSD.</li> </ul> <p><b>NOTE:</b> When using '2: DVI-D', the positioning adjustments are not available.</p>
Horizontal/Vertical Lines	Screen has one or more lines	<ul style="list-style-type: none"> <li>1 Reset the monitor to Factory Settings.</li> <li>1 Perform Auto Adjust using the OSD.</li> <li>1 Adjust Phase and Pixel Clock controls using the OSD.</li> <li>1 Perform monitor self-test feature check and determine if these lines are also in self-test mode.</li> <li>1 Check for bent or broken pins in the video cable connector.</li> <li>1 Run the built-in diagnostics.</li> </ul> <p><b>NOTE:</b> When using '2: DVI-D', the Pixel Clock and Phase adjustments are not available.</p>
Synchronization Problems	Screen is	<ul style="list-style-type: none"> <li>1 Reset the monitor to Factory Settings.</li> </ul>



	scrambled or appears torn	<ul style="list-style-type: none"> <li>1 Perform Auto Adjust using the OSD.</li> <li>1 Adjust Phase and Pixel Clock controls using the OSD.</li> <li>1 Perform monitor self-test feature check to determine if scrambled screen appears in self-test mode.</li> <li>1 Check for bent or broken pins in the video cable connector.</li> <li>1 Restart the computer in the <i>safe mode</i>.</li> </ul>
Safety Related Issues	Visible signs of smoke or sparks	<ul style="list-style-type: none"> <li>1 Do not perform any troubleshooting steps.</li> <li>1 Contact Dell immediately.</li> </ul>
Intermittent Problems	Monitor malfunctions on & off	<ul style="list-style-type: none"> <li>1 Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.</li> <li>1 Reset the monitor to Factory Settings.</li> <li>1 Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.</li> </ul>
Missing Color	Picture does not have color	<ul style="list-style-type: none"> <li>1 Perform monitor self-test feature check.</li> <li>1 Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.</li> <li>1 Check for bent or broken pins in the video cable connector.</li> </ul>
Wrong Color	Picture color is not good	<ul style="list-style-type: none"> <li>1 Change the Color Setting Mode in the Color Settings OSD to Graphics or Video depending to the application.</li> <li>1 Try different Color Preset Settings in Color Settings OSD. Adjust R/G/B value in Color Settings OSD if the Color Management is turned off.</li> <li>1 Change the Input Color Format to PC RGB or YPbPr in the Advance Setting OSD.</li> <li>1 Run the built-in diagnostics.</li> </ul>
Image retention from a static image left on the monitor for a long period of time	Faint shadow from the static image displayed appears on the screen	<ul style="list-style-type: none"> <li>1 Use the Power Management feature to turn off the monitor at all times when it is not in use (for more information, see Power Management Modes).</li> <li>1 Alternatively, use a dynamically changing screensaver.</li> </ul>

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>