



	TP-4000	TP-5000	
Ref. No.	Catalog No.	Catalog No.	Description
1	88492	88497	Engine
2	88502	88507	Shaft Seal Kit
3	88512	88517	Suction Flange
4	88522	88527	Flapper Check Valve
5	88532	88537	Discharge Flange Kit
6	88542	88542	Drain/Fill Plug
7	88547	88552	Impeller
8	16743	16748	Wear Plate
9	16753	16758	Volute Seal
10*	16763	16768	Seal Plate (TX2)
11	16773	16778	Seal Plate (WKT2)

* Refer to Motor Housing Identification (TX2 or WKT2) For Proper Seal Plate. Seal Plates Are Not Interchangeable.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>