

OWNER'S MANUAL

Model No. WC22RE

Salton®

RECHARGEABLE WINE CHILLER



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. To protect against risk of electrical shock do not put cord, plugs, or appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact Consumer Service for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Do not let cord contact hot surface, including the stove.
11. Keep hands and utensils out of the container to reduce the risk of injury to persons or damage to the mixer.
12. Never add to container while appliance is operating.
13. Agitator must be properly in place before operating appliance.

SAVE THESE INSTRUCTIONS
For Household Use Only

ADDITIONAL IMPORTANT SAFEGUARDS

CAUTION HOT SURFACES: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

 
1. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Do not leave this appliance unattended during use.
4. If this appliance begins to malfunction during use, immediately turn the unit OFF and unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
5. If this appliance falls or accidentally becomes immersed in water, unplug it immediately. Do not reach into the water! Do not use this appliance after it has fallen into or becomes immersed in water.
6. To reduce the risk of injury to persons or property, never use this appliance in an unstable position.
7. Do not use this appliance for other than its intended use.
8. Only use approved Adapter (P/N 71181) with unit.

Electric Power

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

Getting to know your Salton® Rechargeable Wine Chiller

Your product may vary slightly from illustration.

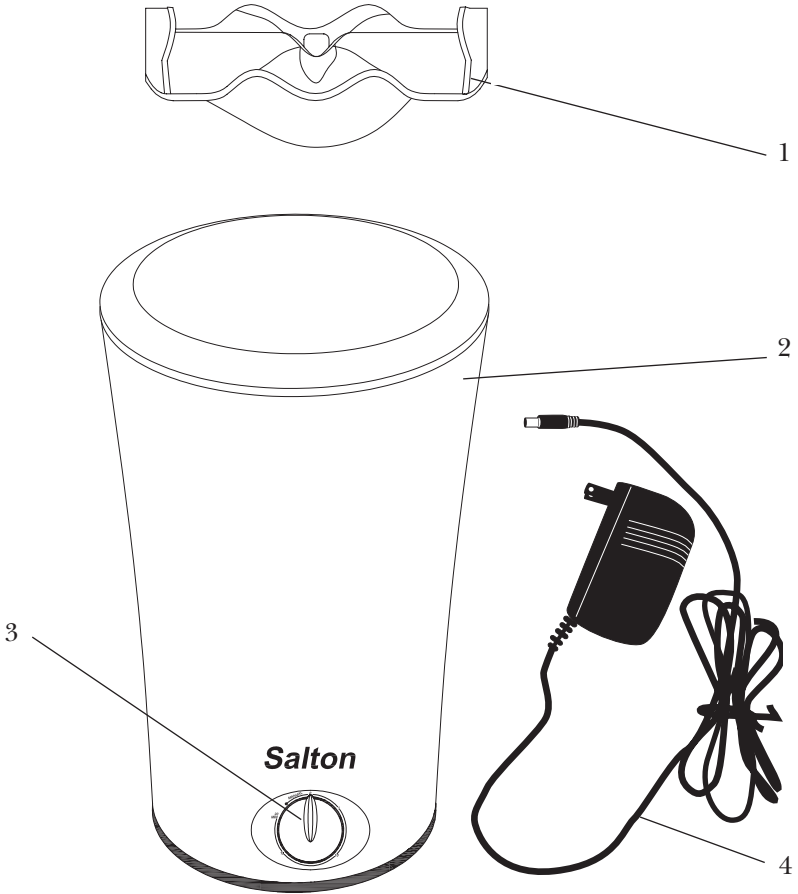

1. Agitator (P/N 71180)
2. Body
3. Control Dial
4. Adapter (P/N 71181)

Before First Use

 
1. Carefully unpack your Wine Chiller.
2. Wipe interior and exterior of the Wine Chiller with a soft, slightly damp cloth or sponge. Never use abrasive cleansers or scouring pads to clean the Wine Chiller, as they may damage the surfaces.
3. Allow to dry thoroughly before using.

Charging The Battery

1. Insert Adapter into the rear of the unit (see Figure 1.)
2. Plug Adapter into a 120V AC electrical outlet.
3. Charge the The Wine Chiller overnight. The charge lasts for approximately 80 minutes.

NOTE: For longer battery life, it is best to allow the battery to completely drain before recharging.

Recycling Of Ni-Cd Batteries

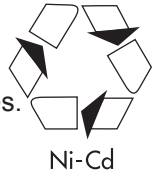

This product contains nickel cadmium rechargeable batteries. Batteries must be recycled or disposed of properly.

This unit is equipped with long lasting, Rechargeable Nickel Cadmium batteries. To protect the environment, they should be removed at the end of the batteries' life for safe disposal in accordance with your local and state requirements.

To recycle your nickel-cadmium batteries, follow the directions provided below. Please **DO NOT** put the main unit or batteries in the trash. Use the collection system provided in your community. Contact your local battery recycling center.

Batteries should be removed **ONLY WHEN UNIT IS TO BE DISCARDED**.

 
Make sure unit is unplugged before dismantling for battery removal.

To remove the batteries: Remove the 4 screws from the bottom of main unit using a Phillips screwdriver. Remove the bottom plate.

Cut the red and black wires, there is one of each, leading to the Battery Pack and remove Battery Pack. Dispose of batteries according to local regulations.

Using Your Wine Chiller

1. Place beverage container into the Body of the Wine Chiller.
2. Pour ice into the Body and around the beverage container you wish to chill. Ice should reach up to the neck of a bottle or the top of a can.
3. Pour water into the Body and around the beverage container you wish to chill. Water should reach up to the neck of a bottle or the top of a can.
4. Insert Adapter into the rear of the unit (see Figure 1.)
5. Plug Adapter into a 120V AC electrical outlet. (Steps 4 and 5 may be skipped if you are using the Wine Chiller's rechargeable battery.)
6. Set timer to chill beverage for the desired amount of time, or turn the Control Dial to the MANUAL setting for continuous chilling with no automatic shut-off.

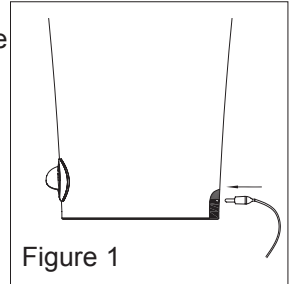

- CAUTION:** once unit is turned on, do not attempt to remove bottle or place hands inside of unit unless the Control Dial is in the OF (0) position and the Agitator has come to a complete stop.
7. When the beverage is sufficiently chilled, make sure the Control Dial is in the OFF (0) position and unplug Adapter from the wall. Then remove the Adapter from the rear of the unit.
 8. Remove beverage from Wine Chiller and serve. The Wine Chiller may be used to store beverage in to keep beverage chilled after opening, but once off the unit will no longer actively chill the beverage and the beverage will begin to warm..
 9. When you are done using the Wine Chiller, remove beverage container, empty out ice and water and allow the unit to dry.
 10. If you wish to chill additional beverages, for best results, repeat steps 1 through 9.

Helpful Hints

While most wines may be chilled within eight minutes, personal tastes do vary so it may be necessary to chill the beverage for longer than that.

Take care when opening a carbonated beverage after chilling in the unit as contents will have been agitated and pressure may have built inside the container.

User Maintenance Instructions

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

Cleaning Your Wine Chiller

CAUTION: NEVER IMMERSE POWER SUPPLY CORD IN WATER OR OTHER LIQUID.

1. Always unplug before cleaning.
2. Remove the Agitator by lifting directly up and out of the Wine Chiller Body and rinse in warm, soapy water and then allow to completely dry.
3. Wipe interior and exterior of the Wine Chiller with a soft, slightly damp cloth or sponge. Never use abrasive cleansers or scouring pads to clean the Wine Chiller, as they may damage the surfaces.
4. Allow Body to dry thoroughly.
5. Replace the Agitator (see Figure 2.)
6. You may store the Wine Chiller in its original box if desired. Please store in a cool, dry place.

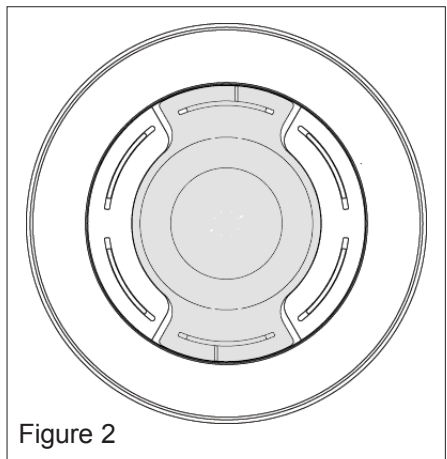 


Figure 2

LIMITED ONE YEAR WARRANTY

Warranty Coverage: This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

Warranty Service: To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

To return the appliance, ship to:

ATTN: Repair Center
708 South Missouri Street
Macon, MO 63552 USA

To contact us, please write to, call, or email:

Consumer Relations Department
PO Box 7366
Columbia MO 65205-7366 USA
1-800-233-9054
E-mail:
consumer_relations@toastmaster.com

What Is Not Covered: This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

LIMITATION ON DAMAGES: THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website: www.maxim-toastmaster.com.

Made in China

**P/N 61751
06/05**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>