 


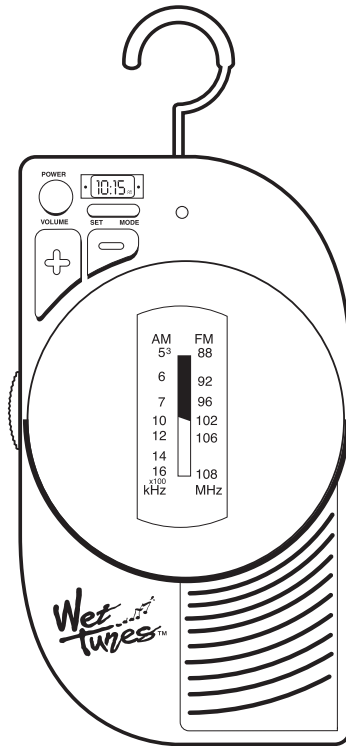

Shower Radio



OWNER'S MANUAL
MODELS: WT50BL, WT50OR,
WT50PL, WT50RD, WT50GY, WT50PB



Congratulations! You are the proud owner of the Wet Tunes™ Shower Radio. To obtain maximum satisfaction and enjoyment, please follow these simple guidelines.

 
1. **Do not submerge the Wet Tunes™ Shower Radio in water.** It is water resistant, not waterproof!
2. **Insert 3 AA ALKALINE batteries (not included) into the Battery Compartment.**
3. **Signal Reception.**

Turn on the Radio and move it around to various locations and positions on the wall to determine a suitable location that provides good reception.

Avoid locations that lie directly in the path of the shower stream.

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

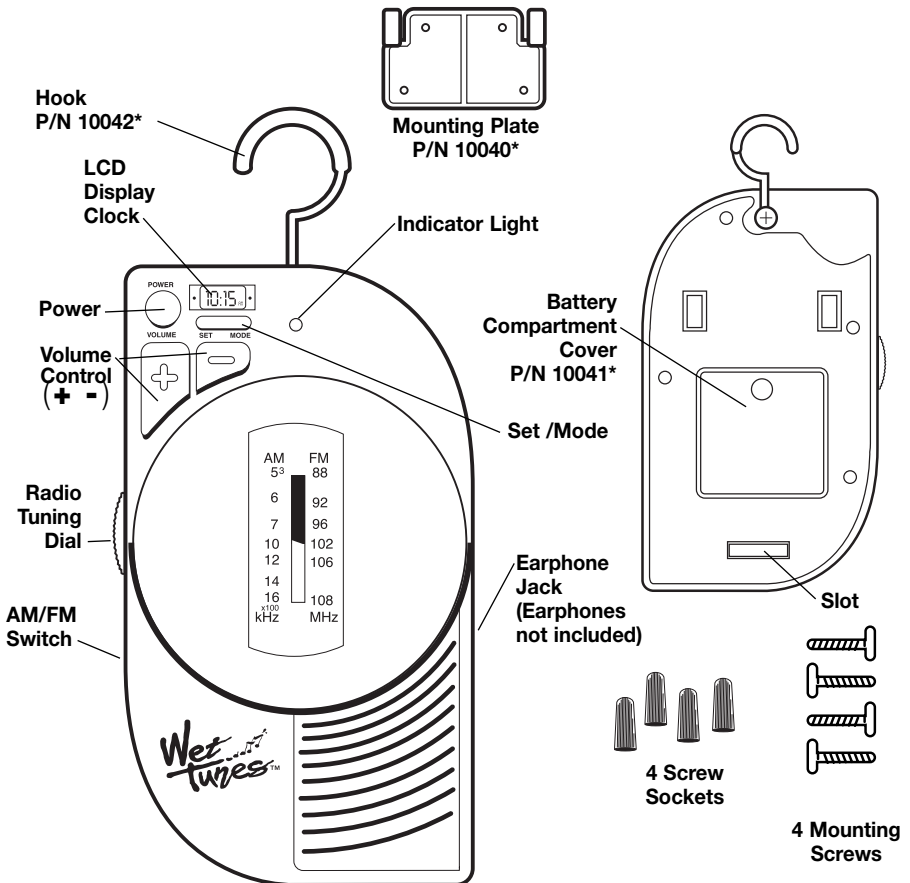


*Color reference: BL, OR, PL, RD, GY, PB.

USING THE WET TUNES™ STAND

TO ATTACH: Lower Wet Tunes™ Shower Radio onto Stand pressing it downward against the Spring Loaded Bar. Match the Slot on the Radio with the Hooked Tab on the Stand, pushing unit backward and into Slot, then lifting up slightly until it clicks into place.

TO RELEASE: Push downward on the Radio and pull it forward and off of the Stand.

 
*Color reference: BL, OR, PL, RD, GY, PB.

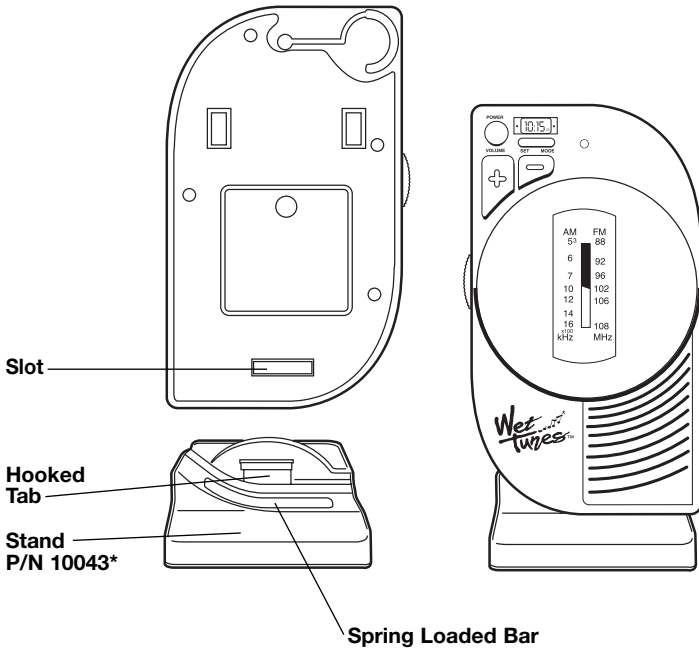


WALL MOUNTING WITH ADHESIVE

1. Select a spot on the wall that is as smooth as possible, such as a smooth ceramic tile. Thoroughly clean the spot of all soap, oil or other films using a household cleaning solvent such as Acetone or nail polish remover. DO NOT use the tile cleaner or other wax-based substances. Allow area to dry completely. Room temperature should be at 60 to 70°F.
2. For best results, hold adhesive tube (supplied) at a 45-degree angle and apply sealant to Mounting Plate, approximately 1/8" bead and 1/4" from edges. Use entire contents. If additional adhesive is required, use silicone caulking compound or you may order extra adhesive packets. (P/N 01005)
3. Place Mounting Plate against clean wall surface using enough pressure to displace air, but not adhesive.
4. Allow adhesive to cure for 24 hours.
5. Slide the Radio onto the secured Mounting Plate.

 WALL MOUNTING WITH ADHESIVE

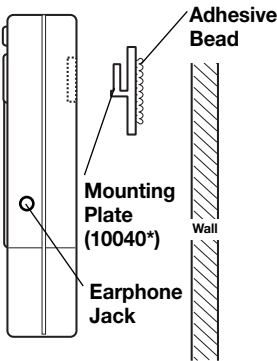

WALL MOUNTING WITH SCREWS

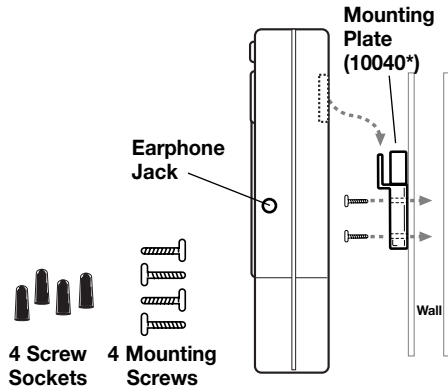 

WALL MOUNTING WITH SCREWS

1. Place Mounting Plate against a clean wall surface and mark the spots on the wall where you will be drilling. Remove the Mounting Plate from the wall.
2. Drill 4 holes in the wall that match the placement of the holes in the Mounting Plate.
3. Insert a Screw Socket into each of the 4 holes.
4. Place Mounting Plate against the wall in the correct position and drill in the 4 Screws.
5. Slide the Radio onto the secured Mounting Plate.

*Color reference: BL, OR, PL, RD, GY, PB.

SET AND MODE FUNCTIONS

To Set the Month/Day: Press **SET** to arrive at Month position. Press or hold the **MODE** Button until the correct Month appears. Press **SET** again to arrive at Day position. Press or hold the **MODE** Button until the correct Day appears.

To Set the Hour/Minutes: Press **SET** to arrive at Hour position with A=AM or P=PM to the right. Press or hold the **MODE** Button until the correct Hour appears. Press **SET** to arrive at Minutes position. Press or hold the **MODE** Button until the correct Minutes appear. Press **SET** then **MODE** to return to the Normal Display (Hour : Minutes) with the flashing colon.

To View Month/Day and Seconds: From the Normal Display (Hour: Minutes), press **MODE** once to view Month/Day. Press **MODE** twice to view Seconds.

Alternating Mode: From the Normal Display (Hour : Minutes), press **SET** once to alternate viewing the Hour/Minutes and Month/Day.

ONE-YEAR LIMITED WARRANTY

This Salton, Inc. product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton, Inc., or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Some states do not allow the exclusion or limitations of implied warranties or consequential damages, so the above limitations or exclusions may not apply to you.

Salton, Inc. is not responsible or liable for indirect, special or consequential damages arising out of or in connections with the use or performance of the product or other damages with respect to loss of property, or loss of revenues or profit.

Legal Remedies: This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable unit (at Salton, Inc.'s option) when the product is returned to the Salton, Inc. facility listed below. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair

If service is required, you should first call toll-free 1-800-233-9054 **between the hours of 8:00 am and 5:00 pm Central Standard Time** and ask for **CONSUMER SERVICE**. Please refer to Model WT50 when you call.

In-Warranty Service for a product covered under the warranty period, no charge is made for service and return postage. Please return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the address listed below. Call for return authorization.

Out-of-Warranty Service: There will be charges rendered for repairs made to the product after the expiration of the aforesaid one (1) year warranty period, after purchaser is advised appropriately. Include \$6.00 (U.S.) for return shipping and handling.

Salton, Inc. cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your unit: any accessories related to your problem; your full return address and daytime phone number; a note describing the problem you experienced; **a copy of your sales receipt or other proof of purchase to determine warranty status.** C.O.D. shipments cannot be accepted.

Return the appliance to: ATTN: Repair Department, Salton, Inc.
708 South Missouri St. Macon MO, 63552

For more information on Salton, Inc. products, visit our website:
<http://www.salton-maxim.com>, or email us at: salton@saltonusa.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>