

# SHARP®

## VCR/DVD RECORDER COMBINATION


MODEL

# DV-RW340U DV-RW350U

## OPERATION MANUAL

Please read this Operation Manual carefully before using your VCR/DVD RECORDER COMBINATION.

INSTRUCCIONES EN ESPAÑOL INCLUIDAS.



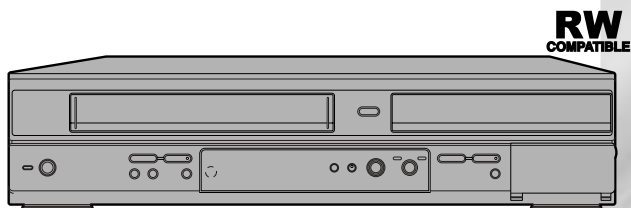


The region number for this unit is 1.



### Supplied Accessory

   - Remote control (9HSNB114UD) with two "AA" size batteries
- Round Coaxial cable (9HSWPZ0901TM003)
- Audio/Video cables (9HSWX1E56B5-001)
- Operation Manual (9HS1VMN20224)
- QUICK USE GUIDE (9HS1VMN20237)

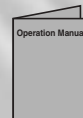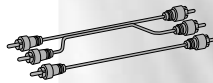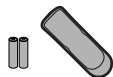

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

## Before you start

### Precautions

For future reference, record the model and serial numbers (located on the rear of the Unit) in the space provided.

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

**ATTENTION: POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.**



**CAUTION:**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol warns the user of uninsulated voltage within the unit that can cause dangerous electric shocks.



This symbol alerts the user that there are important operating and maintenance instructions in the literature accompanying this unit.

**“WARNING—FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user’s authority to operate this equipment.”**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**INFORMATION**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**This Class B digital apparatus complies with Canadian ICES-003.**

**Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.**

**Este aparato digital de la Clase B cumple con la norma ICES-003 de Canadá.**

**CAUTION:**

THIS UNIT IS A CLASS 1 LASER PRODUCT.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

AS THE LASER BEAM USED IN THIS UNIT IS HARMFUL TO THE EYES, DO NOT ATTEMPT TO DISASSEMBLE THE CABINET.

REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

## Before you start

### Precautions (cont'd)

# Important Safeguards

1. Read Instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions- The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Cleaning - Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

**EXCEPTION:** A product that is meant for uninterrupted service and, that for some specific reason, such as the possibility of the loss of an authorization code for a CATV converter, is not intended to be unplugged by the user for cleaning or any other purpose, may exclude the reference to unplugging the appliance in the cleaning description otherwise required in item 5.


6. Attachments - Do not use attachments not recommended by the video product manufacturer as they may cause hazards.
7. Water and Moisture- Do not use this video product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
8. Accessories - Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the appliance should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.

PORTABLE CART WARNING  
(Symbol provided by RETAC)



9. Transportation - A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
10. Ventilation - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface. This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
11. Power Sources - This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
12. Grounding or Polarization - This video product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13. Power Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
14. Outdoor Antenna Grounding - If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA No. 70, provides

information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. (Fig. A)

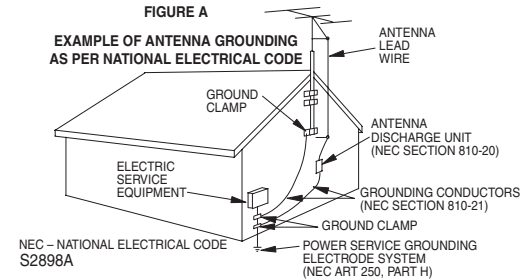

15. Lightning - For added protection for this video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.
16. Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
17. Overloading - Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
18. Object and Liquid Entry - Never push objects of any kind into this video product through any openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.
19. Servicing - Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
20. Damage Requiring Service - Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a. When the power-supply cord or plug is damaged.
  - b. If liquid has been spilled, or objects have fallen into the video product.
  - c. If the video product has been exposed to rain or water.
  - d. If the video product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.
  - e. If the video product has been dropped or damaged in any way.
  - f. When the video product exhibits a distinct change in performance this indicates a need for service.
21. Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
22. Safety Check - Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.
23. Heat - This video product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

## Before you start

### Precautions (cont'd)

#### Location and Handling

##### Location and Handling

- Do not cover or place the unit in enclosed spaces to prevent excessive temperature build up.
- Do not place the unit in direct sunlight, or near heat sources.
- Depending on the use environment, the temperature of the unit may increase slightly. This is not a malfunction.
- Keep the unit away from strong magnetic objects.
- Do not stand the unit vertically. Install the unit in a horizontal and stable position.
- Do not place any object containing water or other liquids on the unit. In the event that liquid should enter the cabinet, unplug the unit immediately and contact the retailer or service centre approved by SHARP immediately.
- Do not remove the unit cabinet. Touching parts inside the cabinet could result in electric shock and/ or damage to the unit. For service and adjustment inside the cabinet, call a qualified dealer or service centre approved by SHARP.

#### Nonuse Periods

##### Location and Handling

- When the unit is not being used, switch the unit to the Standby mode.
- When left unused for a long period of time, the unit should be unplugged from the household AC outlet.
- Do not place the unit in direct sunlight, or near heat sources.

#### Copy Protection

This Unit supports Macrovision copy protection.

On DVD discs that include a copy protection code, if the contents of the DVD disc are copied using this unit, the copy protection code prevents the DVD or videotape copy from playing normally.

Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, 4,819,098 and 4,907,093 licensed for limited viewing uses only.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

#### Notice for progressive scan outputs

Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of 525 progressive scan picture problems, it is recommended that the user switch the connection to the 'standard definition' output. If there are questions regarding our TV set compatibility with this model 525p DVD player, please contact our customer service center.

#### No Fingers or Other Objects Inside

Do not put your fingers or objects on the disc tray or in the cassette compartment.

#### Warning of Dew Formation

Moisture may form inside the unit under the following conditions:

- Immediately after a heater is turned on.
- In a steamy or humid room.
- When the unit is suddenly moved from a cold to warm environment.

If moisture forms inside this unit, it may not operate properly or damage the videotape. In such case, turn on the power and wait for more than two hours for the moisture to evaporate.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

# Before you start

## Precautions (cont'd)

### Others

It is the intent of Sharp that this product be used in full compliance with the copyright laws of the United States and that prior permission be obtained from copyright owners whenever necessary.

“Licensed under one or more of U.S. Pat. 4,972,484, 5,214,678, 5,323,396, 5,530,655, 5,539,829, 5,544,247, 5,606,618, 5,610,985, 5,740,317, 5,777,992, 5,878,080, or 5,960,037.”

### A NOTE ABOUT RECYCLING

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with your local recycling regulations.

Batteries should never be thrown away or incinerated but disposed of in accordance with your local regulations concerning chemical wastes.

### Make your contribution to the environment!!!

- Used up batteries do not belong in the dust bin.
- You can dispose of them at a collection point for used up batteries or special waste. Contact your council for details.



### Maintenance

#### SERVICING

1. Please refer to relevant topics in the Troubleshooting on pages 97-100 before returning the product.
2. Do not attempt to service this Unit yourself. Instead, unplug it and contact a Sharp Authorized Service Center for inspection. (See **CONSUMER LIMITED WARRANTY** at the end of this manual.)
3. Be sure the service technician uses authorized replacement parts or their equivalents. Unauthorized parts may cause fire, electrical shock, or other hazards.
4. Following any service or repair, be sure the service technician performs safety checks to certify that this Unit is in safe operating order.

#### CLEANING THE CABINET

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasive.

#### CLEANING DISCS

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out. Do not wipe in a circular motion.
- Do not use solvents such as benzene, thinner, commercially available cleaners, detergent, abrasive cleaning agents or antistatic spray intended for analogue records.

#### RECOMMENDED MEASURES FOR OPTIMUM PICTURE EXCELLENCE

This Unit is a precision device constructed using extremely accurate technology.

- The disc cannot be played if the disc drive component is worn out or if the internal pickup lens is dirty.
- If this unit still does not perform properly although you refer to the relevant sections and to Troubleshooting on pages 97-100, the laser optical pickup unit may be dirty. Consult a Sharp Authorized Service Center for inspection and cleaning of the laser optical pickup unit.

#### DISC HANDLING

- Handle the discs so that fingerprints and dust do not adhere to the surfaces of the discs.
- Always store the disc in its protective case when it is not used.

#### AUTO HEAD CLEANING

- Automatically cleans video heads as you insert or remove a videotape, so you can see a clear picture.
- Playback picture may become blurred or interrupted while the TV program reception is clear. Dirt accumulated on the video heads after a long period of use, or the usage of rental or worn videotape can cause this problem. If a streaky or snowy picture appears during playback, the video heads in your unit may need to be cleaned.

1. Please visit your local Audio/Video store and purchase a good quality VHS Video Head Cleaner.
2. If a Video Head Cleaner does not solve the problem, please call our help line mentioned on page 103 to locate a Sharp Authorized Service Center.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Espanol

# Before you start

## Table of contents

<b>Before you start</b> .....	<b>2</b>	<b>Search</b> .....	<b>52</b>
<b>Precautions</b> .....	<b>2</b>	Title/Chapter search .....	52
<b>Table of contents</b> .....	<b>6</b>	Track search .....	53
<b>Features</b> .....	<b>7</b>	Time search .....	53
<b>Functional overview</b> .....	<b>8</b>	<b>Repeat/Random/Program play</b> .....	<b>54</b>
Installing batteries in the remote control .....	10	Repeat play .....	54
Using a remote control .....	10	Random play .....	54
The VCR/DVD recorder Switching .....	10	Program play .....	55
SETUP/DISC/CD menu .....	11	<b>Selecting the format of audio and video</b> .....	<b>56</b>
DISPLAY menu .....	12	Switching audio soundtrack .....	56
<b>Connections</b> .....	<b>14</b>	Switching subtitles .....	57
<b>Connection to a TV</b> .....	<b>14</b>	Switching camera angles .....	58
<b>Connection to a cable box or satellite box</b> .....	<b>15</b>	Reducing block noise .....	58
<b>Connection to an Audio System</b> .....	<b>16</b>	<b>Editing</b> .....	<b>59</b>
<b>Getting started</b> .....	<b>17</b>	<b>Information on disc editing</b> .....	<b>59</b>
<b>Easy DVD recording</b> .....	<b>17</b>	Guide to a title list .....	59
<b>Channel setting</b> .....	<b>19</b>	Editing discs in Video mode .....	59
Getting channels automatically .....	19	Editing discs in VR mode .....	60
Adding/deleting channels .....	20	<b>Editing DVD-RW discs in Video mode</b> .....	<b>61</b>
<b>Selecting the TV stereo or SAP</b> .....	<b>21</b>	Deleting titles .....	61
<b>Setting the clock</b> .....	<b>22</b>	Putting names on titles .....	62
Auto Clock Setting .....	22	Setting or clearing chapter markers .....	64
Manual Clock Setting .....	23	<b>Editing DVD-RW discs in VR mode (Original)</b> .....	<b>65</b>
Setting the daylight saving time .....	25	Deleting titles .....	65
<b>Selecting the TV aspect ratio</b> .....	<b>26</b>	Deleting parts of titles .....	66
<b>Recording</b> .....	<b>27</b>	Putting names on titles .....	67
<b>Information on DVD recording</b> .....	<b>27</b>	Setting or clearing chapter markers .....	69
Information .....	27	Setting pictures for thumbnails .....	70
Recording speed .....	27	Setting titles to protect .....	72
Restrictions on recording .....	27	Releasing titles from protecting .....	73
Information on copy control .....	28	<b>Editing DVD-RW discs in VR mode (Playlist)</b> .....	<b>74</b>
Making discs playable in other DVD player (Finalize) .....	28	Deleting titles .....	74
<b>Formatting a disc</b> .....	<b>29</b>	Deleting parts of titles .....	75
Choosing the recording format of a blank disc .....	29	Putting names on titles .....	76
Reformatting a disc .....	30	Setting or clearing chapter markers .....	78
<b>Basic recording</b> .....	<b>31</b>	Setting pictures for thumbnails .....	79
Checking the recording picture quality .....	32	Adding titles to a Playlist .....	81
<b>One-touch timer recording</b> .....	<b>33</b>	Deleting a Playlist .....	82
<b>Timer recording</b> .....	<b>34</b>	<b>Editing DVD-R discs</b> .....	<b>83</b>
Hints for timer recording .....	36	Deleting titles .....	83
<b>Settings for an external source</b> .....	<b>37</b>	Putting names on titles .....	84
Connection to an external source .....	37	<b>Changing the SETUP menu</b> .....	<b>85</b>
Recording from an external source .....	38	<b>Tour of the SETUP menu</b> .....	<b>85</b>
<b>Dubbing Mode</b> .....	<b>39</b>	<b>Language setting</b> .....	<b>86</b>
<b>Finalizing the discs</b> .....	<b>41</b>	<b>Display setting</b> .....	<b>88</b>
<b>Setting a disc to protect</b> .....	<b>42</b>	<b>Audio setting</b> .....	<b>90</b>
<b>Playing discs</b> .....	<b>43</b>	<b>Settings for Parental lock level</b> .....	<b>92</b>
<b>Information on DVD play</b> .....	<b>43</b>	<b>VCR functions</b> .....	<b>94</b>
Guide to displays .....	43	<b>Playback</b> .....	<b>94</b>
<b>Basic playback</b> .....	<b>44</b>	<b>Recording and One-touch timer recording</b> .....	<b>94</b>
Playback .....	44	Recording .....	94
Playing discs using the disc menu .....	46	One-touch timer recording .....	95
Playing discs using the title menu .....	47	<b>Search</b> .....	<b>95</b>
<b>Special playback</b> .....	<b>48</b>	Index search .....	95
Resume play .....	48	Time search .....	96
Fast forward / Fast reverse .....	48	<b>Other operations</b> .....	<b>96</b>
Skipping TV commercials during play .....	49	<b>Others</b> .....	<b>97</b>
Pause .....	49	<b>Troubleshooting</b> .....	<b>97</b>
Step by step playback .....	50	<b>RF converter output</b> .....	<b>100</b>
Slow forward / Slow reverse play .....	50	<b>Language code</b> .....	<b>101</b>
Zoom .....	51	<b>Glossary</b> .....	<b>102</b>
Marker Setup .....	51	<b>Specifications</b> .....	<b>103</b>
		<b>Service Information (For the U.S.)</b> .....	<b>103</b>
		<b>Español</b> .....	<b>104</b>

# Before you start

## Features

This unit not only plays DVDs, CDs and VHS tapes but also offers features for you to record to DVD discs and edit them after that. The following features are offered with this unit.

### Recording

DVD mode VCR mode

This unit is compatible with both DVD-RW, which is rewritable repeatedly, and DVD-R, which is available for recording once. Also, this unit allows you to record to the videotape. You can choose either one for your convenience.

#### Up to 8 programs recording:

You can program the unit to record up to 8 programs, up to a year in advance. Daily or weekly program recordings are also available.

#### One-touch timer recording:

You can easily set a recording time as you prefer. Every time the REC/OTR button on the remote control or on the front panel pressed during recording, the recording time will be increased by 30 minutes up to 8 hours. The recording automatically stops when the recording time you set is reached.

#### Dubbing mode:

You can copy a DVD disc to a videotape or copy a videotape to a DVD disc. This function will be possible only if the DVD disc or a videotape is not copy protected. You cannot record on a videotape when its record tab is removed.

DVD mode

#### REC MONITOR:

You can confirm the picture quality for recording in the current recording speed which you set.

If you want to change the recording speed, press REC MODE/REC SPEED button to set the desired recording mode.

#### Automatic Chapter marker setting:

Chapter markers will be put on recordings as you set in SETUP menu before attempting to record.

#### Automatic Title menu making:

The unit makes title menus automatically when finalizing the disc which are recorded in Video mode.

#### Automatic PLAYLIST making (VR mode):

A Playlist will be prepared from an Original list, so that you can edit titles in a Playlist as you prefer. An Original list is kept as it is.

### Play

DVD mode

#### Theater surround sound in your home:

When connecting the unit to an amplifier or a decoder which is compatible with Dolby Digital or DTS, you are allowed to experience the theater surround sound from discs with surround sound system.

#### Quick search for what you want to watch:

You can easily find the part you want to watch using the search function. Search for a desired point on a disc by title, chapter, or time.

#### Start to play from Original and Playlist (VR mode):

Title playing is available from either an Original list or Playlist.

VCR mode

#### Quick search for what you want to watch:

You can easily find the part you want to watch using the Index search/Time search functions. An index mark will be assigned at the beginning of each recordings you make. For Time search function, you can go to a specific point on a videotape by entering the exact amount of time you wish to skip.

### Editing

DVD mode

#### Setting/Clearing chapter markers:

You can easily add chapter markers anywhere in your recordings for easy editing. (VR mode)

#### Making your own Playlist:

With the original remains as it is, you can edit titles on Various playlist as you prefer.

Putting names on titles.

Setting pictures for thumbnails.

Setting/clearing chapter markers.

Deleting parts of titles, etc.

#### Protecting titles:

To avoid editing or erasing titles, the protect function is useful when it is ON in the original list.

### Compatibility

DVD mode

#### Available for playing discs recorded in Video mode on a regular DVD player (Video mode):

Discs recorded in the Video mode can be played on regular DVD players, including computer DVD drives compatible with DVD-Video playback\*. You will need to finalize the discs recorded in Video mode to play in other DVD players.

\* DVD-Video Format (Video mode) is a new format for recording on DVD-RW/R discs that was approved by the DVD Forum in 2000. Adoption of this format is optional for manufactures of DVD playback devices and there are DVD-Video players, DVD-ROM drives or other DVD playback devices that do not play DVD-RW/R discs recorded in the DVD-Video Format.

### Others

#### Progressive Scan system

Unlike conventional interlace scanning, the progressive scan system provides less flickering and images in higher resolution than that of traditional television signals.

### Symbol in this operation manual

Many functions of this unit are depending on the disc type or the recording mode.


To specify for what disc type or recording mode each function is, we put the following symbols at the beginning of each item to operate.

Symbol	Description
	Available to DVD Video discs
	Available to DVD-RW in Video mode
	Available to DVD-RW in VR mode
	Available to DVD-R discs
	Available to DVD+RW in Video mode
	Available to DVD+R discs
	Available to Audio CDs
	Available to CD-RW/R discs with MP3 files
	Available to VHS tapes Use only <b>VHS</b> tapes marked with this unit.
First: (Press)	Indicates that you need to select the DVD mode by pressing DVD button on the remote control before proceeding next step.
First: (Press)	Indicates that you need to select the VCR mode by pressing VCR button on the remote control before proceeding next step.

# Before you start

## Functional overview


### Front Panel

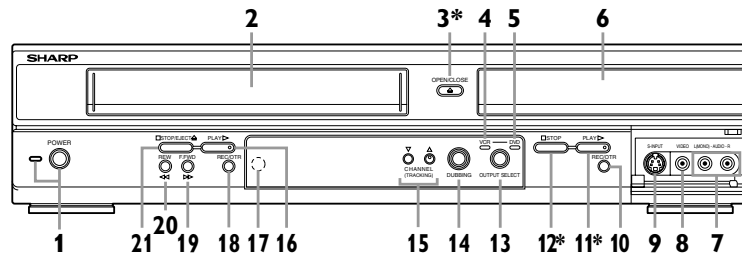

(\*) The unit can also be turned on by pressing these buttons.

1. **POWER button / indicator (DVD/VCR)**  
Press to turn the unit on and off.  
If timer programmings have been set, press to set the unit in timer-standby mode. Press to cancel the timer standby mode, then turn the unit on.  
Red LED lights up when power is on.
2. **Cassette compartment (VCR)**  
Insert a videotape here.
3. **▲ OPEN/CLOSE button (DVD)\***  
Press to open or close the disc tray.
4. **VCR indicator**  
This indicator appears when the VCR output mode is selected.
5. **DVD indicator**  
This indicator appears when the DVD output mode is selected.
6. **Disc tray (DVD)**  
Place a disc when open.
7. **AUDIO INPUT jacks (LINE2) (DVD/VCR)**  
Use to connect external equipment with standard audio cables.
8. **VIDEO INPUT jack (LINE2) (DVD/VCR)**  
Use to connect external equipment with a standard video cable.
9. **S-VIDEO INPUT jack (LINE2) (DVD only)**  
Use to connect the S-Video output of external equipment with an S-Video cable.
10. **REC/OTR button (DVD)**  
Press once to start recording.  
Press repeatedly to start a One-Touch timer Recording.
11. **PLAY button (DVD)\***  
Press to start or resume play.
12. **STOP button (DVD)\***  
Press to stop playback or recording.  
Press to stop the proceeding timer recording in DVD.
13. **OUTPUT SELECT button (DVD/VCR)**  
Press to select the component you wish to operate.
14. **DUBBING button (DVD/VCR)**  
Press to start VCR to DVD (DVD to VCR) duplication which you set in the SETUP menu.
15. **CHANNEL ▼ / ▲ button (DVD/VCR)**  
Press to change the channel up and down.
16. **PLAY button (VCR)**  
Press to start playback.
17. **Remote control sensor (DVD/VCR)**  
Receive signals from your remote control so that you can control the unit from a distance.
18. **REC/OTR button (VCR)**  
Press once to start a recording. Press repeatedly to start a One-Touch timer Recording.
19. **F.FWD button (VCR)**  
Press to rapidly advance the videotape, or view the picture rapidly in forward during playback. (Forward Search)
20. **REW button (VCR)**  
Press to rewind the videotape, or to view the picture rapidly in reverse during the playback mode. (Rewind Search)
21. **STOP/EJECT button (VCR)**  
**EJECT button**-Press to remove the videotape from the cassette compartment when the power is on or off.  
**STOP button**-Press to stop videotape playback.  
Press to stop the proceeding timer recording in VCR.

### Rear Panel

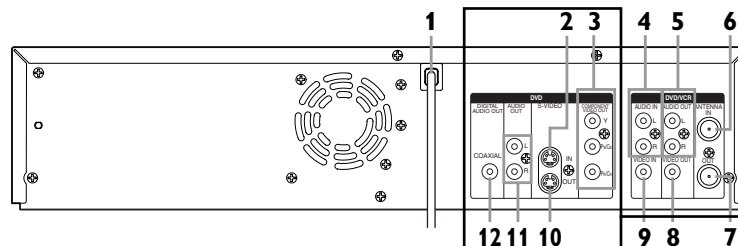

1. **AC Power Cord (DVD/VCR)**  
Connect to a standard AC outlet to supply power to this unit.
2. **S-VIDEO INPUT jack (LINE1) (DVD only)**  
Use to connect the S-Video output of external equipment with an S-Video cable.
3. **COMPONENT VIDEO OUTPUT jacks (DVD only)**  
Use to connect a TV monitor with component video inputs with component video cables.
4. **AUDIO INPUT jacks (LINE1) (DVD/VCR)**  
Use to connect external equipment with standard audio cables.
5. **AUDIO OUTPUT jacks (DVD/VCR)**  
Use to connect a TV monitor, AV receiver or other equipment with standard audio cables.
6. **TV ANTENNA IN jack (DVD/VCR)**  
Use to connect an antenna.
7. **TV ANTENNA OUT jack (DVD/VCR)**  
Use to connect an antenna cable to pass the signal from the TV ANTENNA IN to your TV monitor.
8. **VIDEO OUTPUT jack (DVD/VCR)**  
Use to connect a TV monitor, AV receiver or other equipment with a standard video cable.
9. **VIDEO INPUT jack (LINE1) (DVD/VCR)**  
Use to connect external equipment with a standard video cable.
10. **S-VIDEO OUTPUT jack (DVD only)**  
Use to connect the S-Video input of a TV monitor, AV receiver or other equipment with an S-Video cable.
11. **AUDIO OUTPUT jacks (DVD only)**  
Use to connect a TV monitor, AV receiver or other equipment with standard audio cables.
12. **COAXIAL DIGITAL AUDIO OUTPUT jack (DVD only)**  
Use to connect an AV receiver, Dolby Digital decoder or other equipment with a coaxial digital input jack with a digital coaxial cable.

• These jacks are useful only in DVD mode.


**Note:** Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.



# Before you start

## Functional overview (cont'd)

### Remote Control

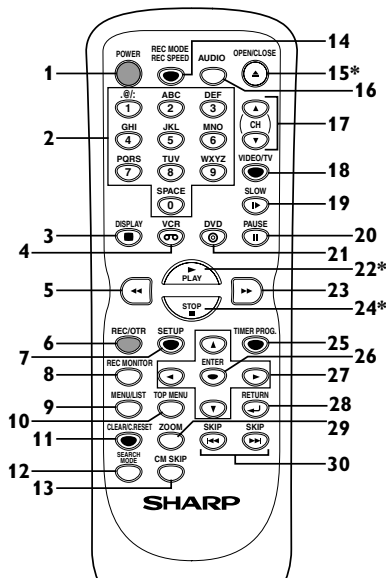

(\*) In DVD mode, the unit can also be turned on by pressing these buttons.


1. **POWER button (DVD/VCR)**  
Press to turn the unit on and off. If timer programmings have been set, press to set the unit in timer-standby mode. Press to cancel the timer standby mode, then turn the unit on.
2. **Number buttons (DVD/VCR)**  
Press to select channel numbers. Press to select a title/chapter/track on display or a TV channel.  
Also press to enter values for the settings in the SETUP menu.
3. **DISPLAY button (DVD/VCR)**  
Press to display or change the on-screen display.
4. **VCR button**  
Press to activate the remote control in VCR mode. (Refer to page 10)  
Press to select the VCR output mode.
5. **◀◀ button (DVD/VCR)**
  - DVD mode  
During playback, press to fast reverse.  
Or when playback is paused, press to play slow reverse.
  - VCR mode  
Press to rewind the videotape or to view the picture rapidly in reverse during the playback mode.
6. **REC/OTR button (DVD/VCR)**  
Press once to start a recording. Press repeatedly to start a One-Touch timer Recording.
7. **SETUP button (DVD/VCR)**  
Press to display the setup menu. During DVD playback, press and hold for more than 3 seconds to switch to the progressive scanning mode or the interlace mode.
8. **REC MONITOR button (DVD)**  
Press to check the video signal to be recorded before attempting.
9. **MENU/LIST button (DVD)**  
Press to display the Disc menu. Press to change ORIGINAL and PLAYLIST on the TV screen.  
(VR mode only)
10. **TOP MENU button (DVD)**  
Press to display the top menu.
11. **CLEAR/C.RESET button (DVD/VCR)**
  - DVD mode  
Press to clear the password once entered, to cancel the programming for CD, to clear the selecting marker number in the marker setup mode or to clear the program once entered in the timer recording setting mode, etc.
  - VCR mode  
Press to reset the tape counter.
12. **SEARCH MODE button (VCR)**  
Press to call up the index or time search menu.
13. **CM SKIP button (DVD)**  
During playback, press to skip 30 seconds.
14. **REC MODE/REC SPEED button (DVD/VCR)**  
Press to switch the recording speed.
15. **OPEN/CLOSE ▲ button (DVD)\***  
Press to open or close the disc tray.
16. **AUDIO button (VCR)**  
During playback a HiFi videotape, press to change the AUDIO OUT setting "HiFi" and "MONO".
17. **CH ▲ / ▼ buttons (DVD/VCR)**
  - DVD mode  
Press to change the channel up and down.
  - VCR mode  
Press to change the channel up and down.  
Press to adjust the tracking during playback or in slow motion of the videotape.  
Also while playback is in still mode, you can adjust the picture blurred vertically.
18. **VIDEO/TV button (DVD/VCR)**  
Press to select VIDEO or TV position.
19. **SLOW button (VCR)**  
During playback, press to view the videotape in slow motion.
20. **PAUSE II button (DVD/VCR)**  
Press to pause play or recording.
21. **DVD button**  
Press to activate the remote control in DVD mode. (Refer to page 10)  
Press to select the DVD output mode.
22. **PLAY ► button \* (DVD/VCR)**  
Press to start or resume play.
23. **►► button (DVD/VCR)**
  - DVD mode  
During playback, press to fast forward.  
Or when playback is paused, press to play slow forward.
  - VCR mode  
Press to rapidly advance the videotape or view the picture rapidly in forward during playback.
24. **STOP ■ button \* (DVD/VCR)**  
Press to stop playback or recording.
25. **TIMER PROG. button (DVD/VCR)**  
Press to display the timer program setting menu.
26. **ENTER button (DVD/VCR)**  
Press to confirm or select menu items.
27. **▲ / ▼ / ◀ / ▶ buttons (DVD/VCR)**  
Press to select items or settings.
28. **RETURN ↵ button (DVD/VCR)**  
Press to return to the previously displayed menu screen.
29. **ZOOM button (DVD)**  
During playback, press to enlarge the picture on the screen.
30. **SKIP ◀◀ button (DVD)**  
During playback, press to skip to the previous chapter or track.  
Or when playback is paused, press to play reverse step by step.  
**SKIP ►► button (DVD)**  
During playback, press to skip to the next chapter or track.  
Or when playback is paused, press to play forward step by step.

## Before you start

### Functional overview (cont'd)

#### Installing batteries in the remote control

Install two "AA" size batteries (supplied) matching the polarity indicated inside battery compartment of the remote control.

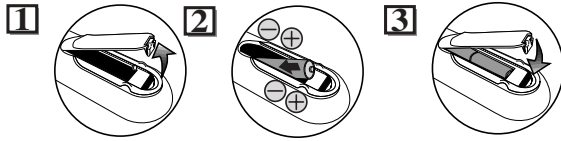

#### Note:


Incorrect use of batteries can result in hazards such as leakage and bursting. Please observe the following:

- Do not mix new and old batteries together.
- Do not use different kinds of batteries together, although they may look similar, different batteries may have different voltages.
- Make sure that the plus and minus ends of each battery match the indications in the battery compartment.
- Remove batteries from equipment that is not going to be used for a month or more.
- When disposing of used batteries, please comply with governmental regulations or environmental public instruction rules that apply in your country or area.
- Do not recharge, short-circuit, heat, burn or disassemble batteries.

#### Using a remote control

Keep in mind the following when using the remote control:

- Make sure that there is no obstacle between the remote control and the remote sensor of the unit.
- Use within the operating range and angle as shown.
- Remote operation may become unreliable if strong sunlight or fluorescent light is shining on the remote sensor of the unit.
- Remote control for different devices can interfere with each other. Avoid using remote control for other equipment located close to the unit.
- Replace the batteries when you notice a fall off in the operating range of the remote control.

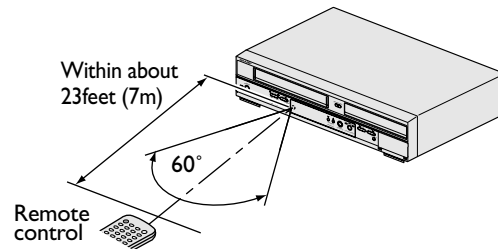

#### The VCR/DVD recorder Switching

Because this product is a combination of a VCR and a DVD recorder, you must select first which component you wish to operate with the OUTPUT SELECT button.

##### VCR MODE


Press the **VCR button** on the remote control.  
(Verify that the VCR indicator is lit.)

##### DVD MODE

Press the **DVD button** on the remote control.  
(Verify that the DVD indicator is lit.)

#### Note

- Pressing only the **OUTPUT SELECT** button on the front panel **DOES NOT** switch the mode of the remote control. You **MUST** select the correct mode on the remote control.
- Pressing the **SETUP** or the **TIMER PROG. button** switches the unit to the DVD mode.

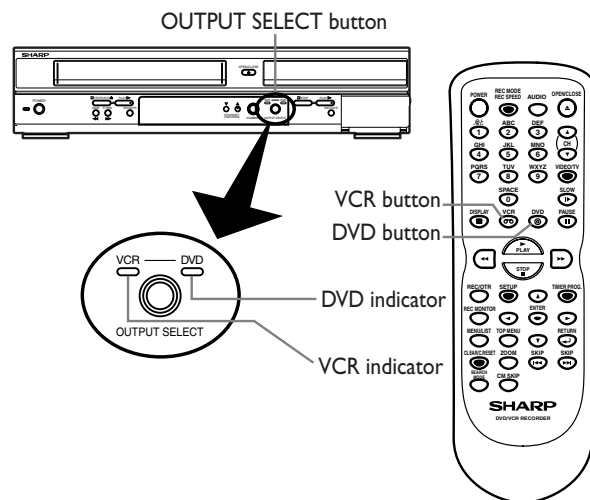

# Before you start

## Functional overview (cont'd)

### Guide to Displays on screen menu


This unit uses the following on screen menu for most operations: SETUP/DISC/CD menu, Title list, and DISPLAY menu. They allow you to change the playing status of disc during play. The DISPLAY menu also gives you information on the status of the disc or a videotape.

### SETUP/DISC/CD menu


Press SETUP button to display the setup main menu, then choose either of SETUP/DISC/CD by pressing ◀/▶ buttons. Then, press ENTER button to display each menu.

These menus provide entries to all main functions of the unit.





“SETUP” is available only in the Stop mode.

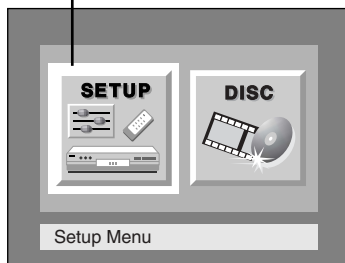

“DISC” is available only when a DVD-RW/R disc is inserted into the unit. When a DVD-Video disc (commercially available), new DVD-R disc, or the finalized DVD-R disc is inserted into the unit, you cannot select “DISC”.

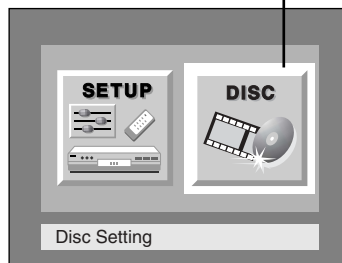

“CD” is available only when an Audio CD disc or a CD-RW/R disc with MP3 files is inserted into the unit.

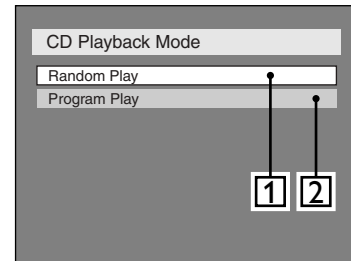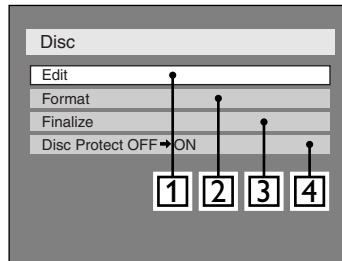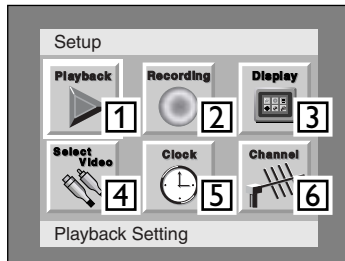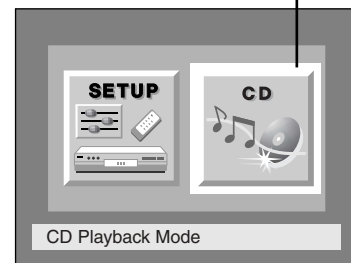

#### 1. Playback:

To set up the unit to play discs as you prefer.

#### 2. Recording:

To set up the unit to record to discs or videotapes as you prefer.

#### 3. Display:

To set up the OSD screen and the front display of the unit as you prefer.

#### 4. Select Video:

To choose a line input to record to DVD discs from other video equipment.

#### 5. Clock:

To set up the clock of the unit as you need.

#### 6. Channel:

To adjust the channel setting of the unit as you prefer.

#### 1. Edit:

Turns on a title list, (When a disc with VR mode is inserted, 'Original' or 'PlayList' is available.), which shows the recorded titles on the disc.

#### 2. Format (DVD-RW only):

Allows you to erase all of the recorded content on the disc. The disc will be completely blank.

- Erased content cannot be called back. Please make sure before you format a disc.
- A DVD-RW disc formatted with this unit cannot be used in other DVD recorders without any recording using this unit.
- If you want to use a disc only formatted with this unit on another DVD recorder, you have to re-format the disc on that recorder.

#### 3. Finalize:

Allows you to finalize a disc containing recorded titles.

#### 4. Disc Protect (VR mode only) :

Allows you to protect a disc from accidental editing or recording.

#### 1. Random Play:

To activate the random playback feature.

#### 2. Program Play(Audio CD only):

To activate the programmed playback feature.

# Before you start

## Functional overview (cont'd)


### DISPLAY menu

#### DVD mode







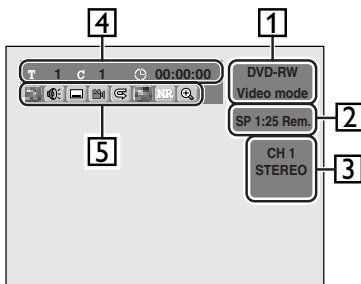

First: 

Press DISPLAY button to call up the display menu. This menu will give you the information on the playing disc. Some operations are available while disc is playing.

Details are on page 43.




1. Indicates a disc type and a format mode.  
**Note:** In some descriptions on this manual, only one disc type is indicated as an example.
2. Indicates a recording mode and possible recording time.
3. Indicates a current channel number and an audio status of the program.
4. Indicates a title number, chapter number and the time elapsed of disc play.
5. Each icon means:

-  : Search
-  : Audio
-  : Subtitle
-  : Angle (except VR mode)
-  : Repeat
-  : Marker
-  : Noise Reduction
-  : Zoom

#### VCR mode

First: 

Press DISPLAY button to call up the display menu.

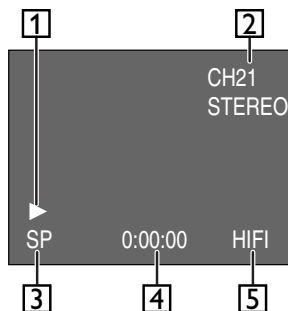


1. Playback status of the current videotape.
2. Indicates a current channel number and an audio status of the program.
3. Indicates a recording speed only five seconds.
4. Indicates a Tape Counter.
5. Audio status of the current videotape.

# Before you start

## Functional overview (cont'd)

### Front Panel Display Guide

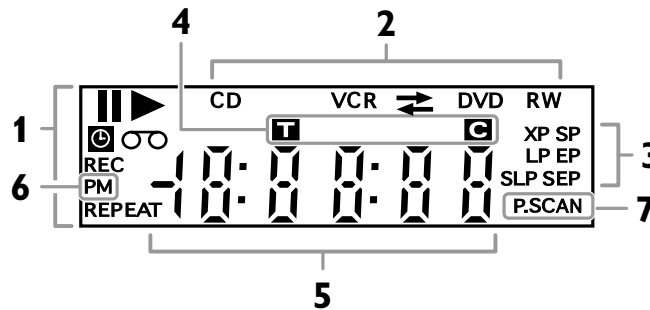

#### 1. Current status of the unit

- ||** : Appears when a disc or a videotape play is paused.
- ▶** : Appears when playing a disc or a videotape.
- ⌚** : Appears when the timer programming has been set and is proceeding.
- REC** : Appears during recording process.
- REPEAT** : Appears during repeat play.
- ⊞** : Appears when a videotape is in the unit.

#### 2. Disc type and Current status of the unit

- CD** : Appears when an audio CD or a disc with MP3 files is inserted in the disc tray.
- DVD** : Appears when a DVD disc is inserted in the disc tray. Appears when the timer recording is proceeding in DVD.
- DVD R** : Appears when a DVD-R disc is inserted in the disc tray.
- DVD RW** : Appears when a DVD-RW disc is inserted in the disc tray.
- VCR** : Appears when the timer recording is proceeding in VCR. Appears when VCR is in the timer recording stand-by mode.
- VCR→DVD** : Appears during VCR to DVD duplication process.
- VCR←DVD** : Appears during DVD to VCR duplication process.

#### 3. Recording mode/speed

Indicates the recording speed of the disc or a videotape.

#### 4. Title/Track and Chapter mark

- T** : Appears when indicating a title/track number.
- C** : Appears when indicating a chapter number.

#### 5. Displays the following

- Playing time / remaining time
- Current title / chapter / track number
- Recording time
- Clock
- Channel number
- VCR tape counter
- Remaining time for a one-touch timer recording

#### 6. PM

Appears in the afternoon with the clock displaying.

#### 7. P.SCAN :

Appears when the progressive scan system is activated.

### Display message



 
Appears when the disc tray is opening.



Appears when a disc is loaded on the disc tray.




Appears when the disc tray is closing.

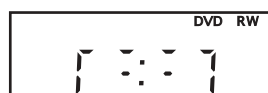

Appears when data is being recorded on a disc.


# Connections

## Connection to a TV

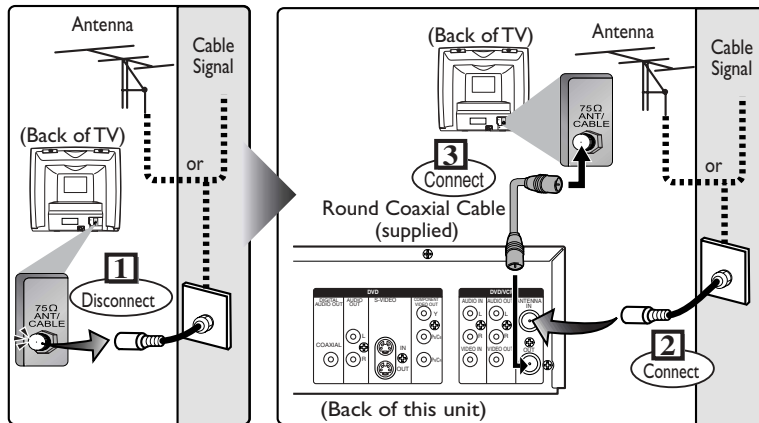

4 Plug in the AC power cord of this unit.

Make one of the following connections, depending on the capabilities of your existing equipment.

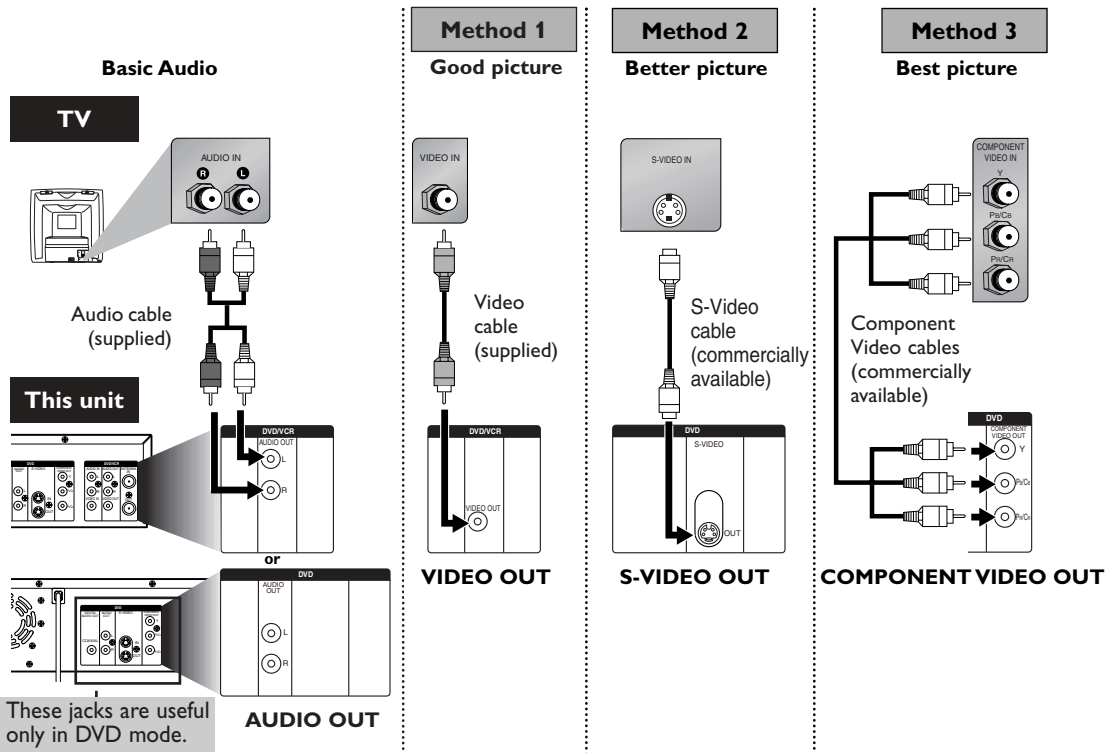

### Note


- Connect this unit directly to the TV. If the A/V cables are connected to a VCR, pictures may be distorted due to the copy protection system.
- Method 2 and method 3 are only useful in DVD mode.
- Although you can view images when using the connection Method 1 and 2 while Progressive Scan is activated, they are in Interlace mode.

### If your TV is compatible with Progressive Scan (480p) and you want to enjoy that high quality picture;

You must select the connection Method 3 above and Progressive Scan mode. To set the mode, press and hold the SETUP button on the remote control for more than 3 seconds during DVD playback, so that "PSCAN" will appear on the display of this unit.

### If your TV is not compatible with Progressive Scan;

Use this unit in Interlace mode. Make sure that no "PSCAN" is on the display of this unit. If not, press and hold the SETUP button on the remote control for more than 3 seconds during DVD playback, so that "PSCAN" on the display of this unit will disappear.

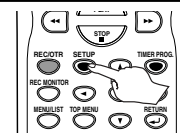


more than 3 seconds during DVD playback [Interlace mode]

[Progressive Scan mode]

# Connections

## Connection to a cable box or satellite box

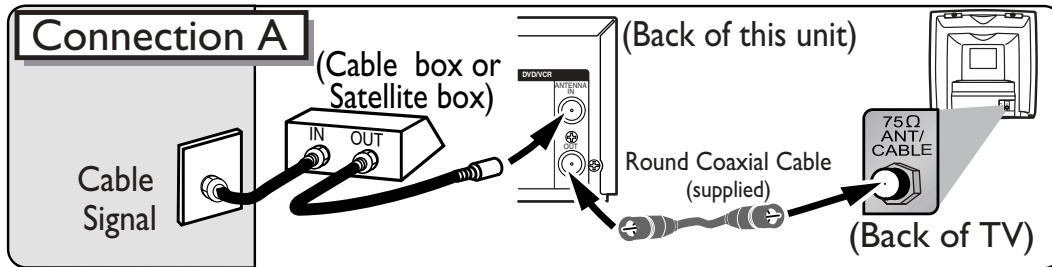


Select this connection when you want to view or record a scrambled channel. With this connection, channels cannot be changed on this unit. You can view or record ONLY the channels you have selected on the cable box or the satellite box.

- While you are recording, only the recorded channel can be viewed.

### **To select channels of the cable box or satellite box**

- 1) Turn on this unit by pressing POWER button. The "POWER" indicator on the front panel will appear. Then, press the CHANNEL buttons to select channel 3 or 4 (the same channel as the output channel of the cable box or satellite box).
  - If noise appears on the TV screen, press VIDEO/TV button on the remote control.
  - If you use the channel 4, you will need to change this unit's RF output to channel 4. Refer to "RF converter output" on page 100.
- 2) At the TV, select channel 3 or 4 (the same channel as you have selected at step 1).
- 3) At the cable box or satellite box, select the channel you want to view or record.

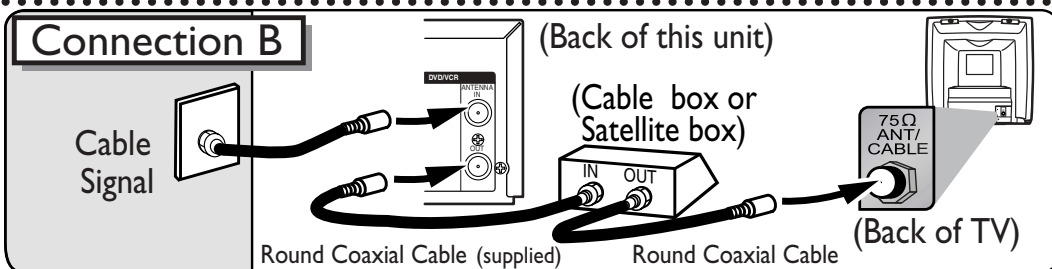

Select this connection when you want to change channels on this unit. With this connection, you may watch one channel while recording another.

- You may not view or record a scrambled channel.

### **To select channels of the cable box or satellite box**

- 1) At the cable box or satellite box, select channel 3 or 4 (the same channel as this unit's RF output channel.)
  - Refer to "RF converter output" on page 100.
- 2) At the TV, select the same channel as the output channel (3 or 4) of the cable box or satellite box.
- 3) Turn on this unit by pressing POWER button. The "POWER" indicator on the front panel will appear. Then, select the channel you want to view or record.
  - If noise appears on the TV screen, press VIDEO/TV button on the remote control.

### **To playback a DVD disc or a videotape**

Follow the steps 1) to 2) above, to playback a DVD disc or a videotape.

- Refer to "Playback" on pages 44-45, 94.

### **To view one channel while recording another**

- 1) While you are recording on this unit, press VIDEO/TV button.
- 2) At the cable box or satellite box, select the channel you want to view.


#### **Note to the Cable TV System Installer :**

This reminder is provided to call the Cable TV system installer's attention to Article 820-40 of the National Electrical Code, which provides guidelines for proper grounding - in particular, specifying that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as possible.

# Getting started

## Connection to an Audio System

- When you change the connections, all devices should be turned off.
- Refer to the operation manual accompanying external devices for more information.

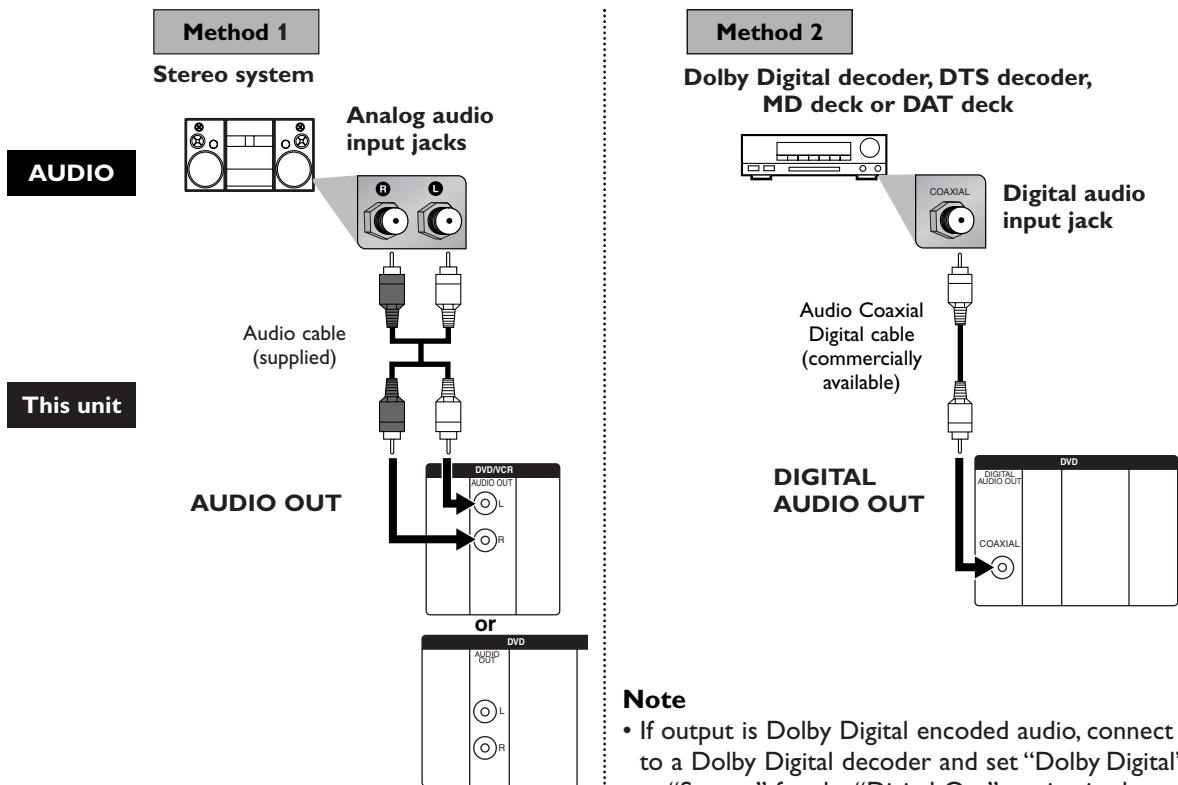

### Note

- If output is Dolby Digital encoded audio, connect to a Dolby Digital decoder and set “Dolby Digital” to “Stream” for the “Digital Out” setting in the SETUP menu. (Refer to pages 90-91.)
- If output is DTS encoded audio, connect to a DTS decoder and set “DTS” to “ON” for the “Digital Out” setting in the SETUP menu. (Refer to pages 90-91.)
- The audio source on a disc in a Dolby Digital 5.1 channel surround format cannot be recorded as digital sound by an MD or DAT deck.
- Unless connected to a Dolby Digital decoder or a DTS decoder, set “Dolby Digital” to “PCM” and “DTS” to “OFF” for the “Digital Out” setting in the SETUP menu. Playing a DVD using incorrect settings may generate noise distortion and may also damage the speakers. (Refer to pages 90-91.)
- Set “Dolby Digital” to “PCM” for the “Digital Out” setting in the SETUP menu for connecting to an MD deck or DAT deck. (Refer to pages 90-91.)
- By hooking this unit up to a Multi-channel Dolby Digital decoder, you can enjoy high-quality Dolby Digital 5.1 channel surround sound as heard in the movie theaters.
- By hooking this unit up to the DTS decoder, you can enjoy 5.1channel surround system which reproduces the original sound as truthfully as possible. 5.1channel surround system is developed by the Digital Theater System, Inc.



# Getting started

## Easy DVD recording

The following will help you to understand easily how to record to DVD discs.

**Note:**

Make sure batteries are in the remote control and you have connected this unit and the TV correctly.

### Step 1: Choose a disc type

There are several types of recordable DVD discs to choose from. Choose a recordable DVD disc type based on your playing/recording/editing requirements. See "DVD disc types" at the bottom of this page for more information on the differences among various compatible media. This DVD recorder can record on the following type of discs.



- \* This unit cannot record on the following discs.
- DVD-RW Ver 1.2 / 2-4x CPRM compatible
- DVD-R General Ver 2.0 / 8x

For example, when you want to record repeatedly on the same disc or when you want to edit the disc after recording, select the rewritable DVD-RW type disc.

When you want to save recordings without any alteration, a non-rewritable DVD-R can be your choice.

### Step 2: Insert a blank disc

**Remote Control**

**1** Turn on the unit

**2** Open the disc tray

**3** Close the disc tray

This operation may take a while to be recognized.

### DVD disc types

★★★★: Most suitable. ★★★: Can be used. ★: Some functions are limited. —: Cannot be used.

You want to	DVD-RW VR	DVD-RW Video	DVD-R
Record TV programs	★★★	★★★	★★
Reuse by deleting unwanted contents	★★★	★★	—
Edit recorded contents	★★★	★	★
Edit/Record from connected equipment	★★★	★★★	★★★
Copy discs for distribution	★★★ <sup>*1</sup>	★★★	★★★
Play on other DVD equipment	★★ <sup>*1</sup>	★★★	★★★

Features	DVD-RW VR	DVD-RW Video	DVD-R
<b>Recording</b>			
Rewritable?	Yes	Yes	No
Can create chapters at fixed intervals (auto.)	Yes	Yes	Yes
Can create chapters wherever you like (manual)	Yes	No	No
Can record 16:9 size pictures	Yes	Yes	Yes
Can record Copy-Once programs	Yes	No	No
<b>Editing</b>			
Can perform basic edit functions	Yes	Yes	Yes
Can perform advanced edit functions (Playlist edit)	Yes	No	No

\*1 DVD-RW (VR mode) can only be played on DVD equipment that is VR compatible.

**Note:**  
For details of the above functions and implied restrictions, see the explanations inside the manual.

### Format the disc

Insert the disc in the unit. Then, format the disc from SETUP menu. Video format (Video mode) or Video recording format (VR mode) will be available depending on the disc type inserted. This is necessary to prepare the disc for recording. Details are on pages 29-30. When you format, the entire contents on that disc will be erased.


- The unit automatically starts formatting when an unused disc is inserted.

# Getting started

## Easy DVD recording (Cont'd)

### Step 3: Select the Recording speed



1 To select the DVD mode

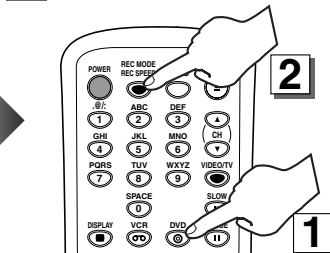


2 To select the recording speed



### Step 4: Select the desired channel

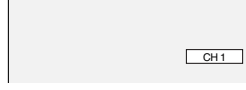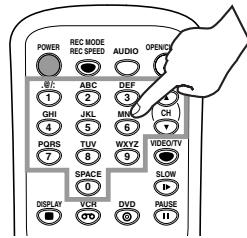 

### Step 5: Record to DVD discs

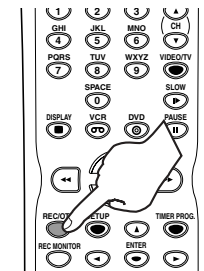


### Hint 1: Play the recorded contents

You can select the title you want to play from a displayed menu and immediately start to play. Recorded contents are easily accessible, with simple procedure of choosing a title on a chapter in the menu screen.

#### What are titles and chapters?

The contents of a DVD disc are generally divided into titles. Titles may be further divided into chapters.

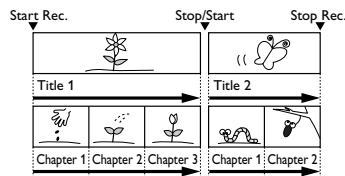

### Hint 2: Edit the recorded disc

You will find editing discs is easy. This unit offers convenient edit functions which are possible only with DVD-R/RW discs.

#### You can edit the following from a title list.

- Putting names on titles
- Setting pictures for thumbnails (VR mode)
- Setting/clearing chapter markers
- Deleting parts of titles or scenes (VR mode)

**Title Delete** : This deletes an entire scene permanently from the disc.

**Scene Delete** : This allows a user to edit within a specific scene (ex. commercials).

#### Original and Playlist (VR mode)

You can edit the recordings in Playlist without changing the original recordings. A Playlist does not take up much disc space.

#### What "Original" or "Playlist" is for?

 


Throughout this manual, you will find *Original* and *Playlist* to refer to the actual content and the edited version.

- **Original** content refers to what's actually recorded on the disc.
- **Playlist** content refers to the edited version of the disc; how the Original content is to be played.

#### Finalizing a Disc

- This will allow a disc that is recorded on our unit to be played back on a different DVD player- without finalization it will not be playable on another player.
- After finalizing a disc if the recording was in video mode, you can not edit any information that is on that disc.
- If you have recorded in VR mode on DVD-RW disc then editing is still permitted after finalizing.

### Step 6: Stop the Record

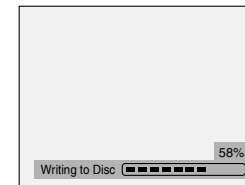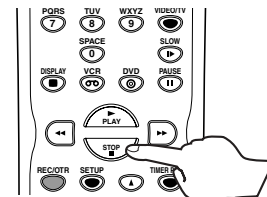

This operation may take a while to be completed.

# Getting started

## Channel setting

All channels are stored in the unit when purchased. We recommend that you get available channels in your area stored using "Auto Preset" in the Channel Preset of the SETUP menu.


### Getting channels automatically

1

Press **POWER** button to turn on the unit.

2


Turn the TV on and be sure to select the input to which the unit is connected.

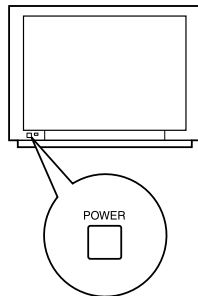

3

Press **SETUP** button to display **SETUP/DISC** menu. **SETUP/DISC** menu will appear.


Screen:

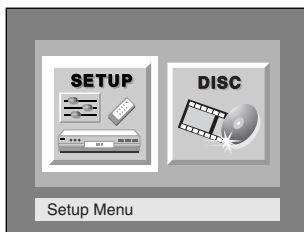

4

Select "**SETUP**" using **◀/▶** buttons, then press **ENTER** button.

**SETUP** menu will appear.

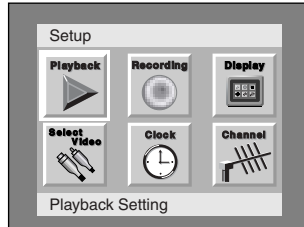

5

Select "**Channel**" using **▲/▼** / **◀/▶** buttons, then press **ENTER** button.


**Channel Preset** menu will appear.



6

Select "**Auto Preset**" using **▲/▼** buttons, then press **ENTER** button.


The unit will start getting channels available in your area.

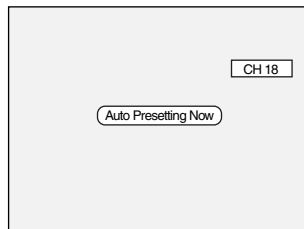

7

Press **SETUP** button to exit.

You can select only the channels memorized in this unit by using the **CHANNEL** buttons.

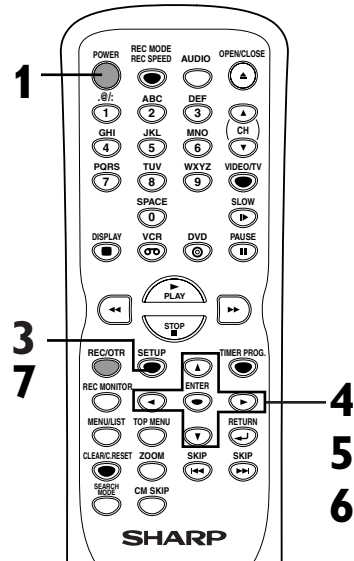

### To select a channel

You can select a channel by directly entering channel using the Number buttons on the remote control.

### Notes for using the Number buttons:

- When selecting cable channels which are higher than 99, enter channel numbers as a three-digit number. (For example: 117, press 1,1,7)
- You must precede single-digit channel numbers with a zero (For example: 02, 03, 04 and so on).
- You can select the line input mode ("L1" or "L2"). To select "L1" by pressing [0],[0],[1]. To select "L2" by pressing [0],[0],[2]. Details are on page 38.

### Note

- If the auto presetting is cancelled during presetting, some channels not yet preset may not be received.
- The selection will depend on how you receive the TV channels.

### To cancel the auto presetting during scanning:

Press **RETURN** button or **SETUP** button to cancel.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

# Getting started

## Channel setting (cont'd)


### Adding/deleting channels

The channels you no longer receive or seldom watch can be deleted from the memory. You also may add channels into memory.

1

Press **SETUP** button to display **SETUP/DISC** menu. **SETUP/DISC** menu will appear.


Screen:

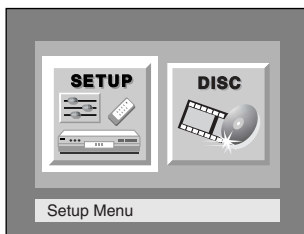

2

Select **"SETUP"** using **◀ / ▶** buttons, then press **ENTER** button.

**SETUP** menu will appear.

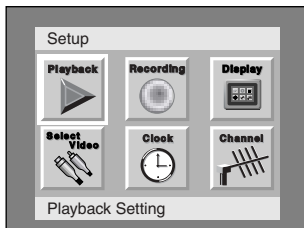

3

Select **"Channel"** using **▲ / ▼** / **◀ / ▶** buttons, then press **ENTER** button.


Channel Preset menu will appear.



4

Select **"Manual Preset"** using **▲ / ▼** buttons, then press **ENTER** button.

Manual Preset menu will appear.

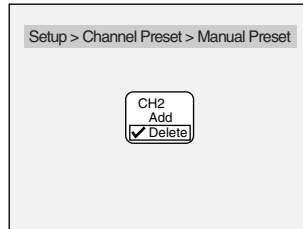


5

Select the channel number to add or delete.

Press **◀** button to move to a lower channel number.

Press **▶** button to move to a higher channel number.

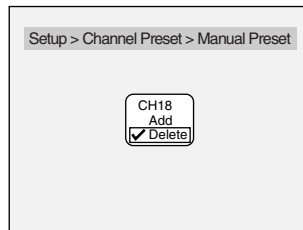


6

Select **"Add"** or **"Delete"** using **▲ / ▼** buttons, then press **ENTER** button.

The channel number will be added or deleted from the channel memory. Then, the next channel number will appear so that you can continue adding or deleting channels.

7

Press **SETUP** button to exit.

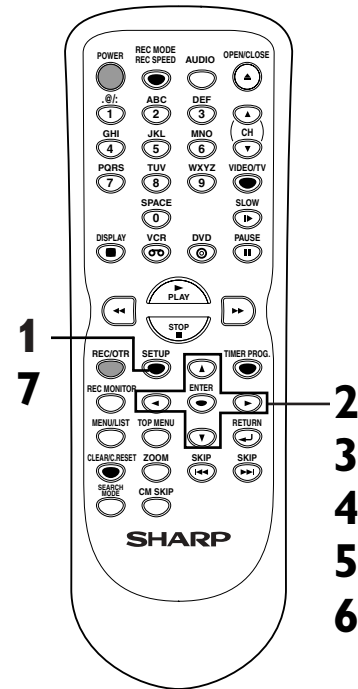

# Getting started


## Selecting the TV stereo or SAP

You can select a sound channel to output from TV. "Stereo" has been selected as the default.

**1**

Press **SETUP** button to display **SETUP/DISC** menu. **SETUP/DISC** menu will appear.


Screen:

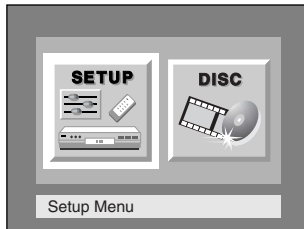

**2**

Select "**SETUP**" using **◀/▶** buttons, then press **ENTER** button.

**SETUP** menu will appear.

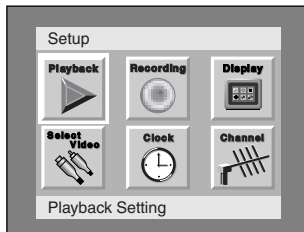

**3**

Select "**Channel**" using **▲/▼** / **◀/▶** buttons, then press **ENTER** button.


Channel Preset menu will appear.



**4**

Select "**TV Audio Select**" using **▲/▼** buttons, then press **ENTER** button.

Option window will appear.

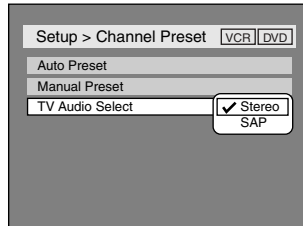

**5**

Select "**Stereo**" or "**SAP**" using **▲/▼** buttons, then press **ENTER** button.

**Stereo:**

Outputs main-audio.

**SAP:**


(**Secondary Audio Program**)

Outputs sub-audio.

Refer to the item in "Glossary" on page 102 for more information.

**6**

Press **SETUP** button to exit.

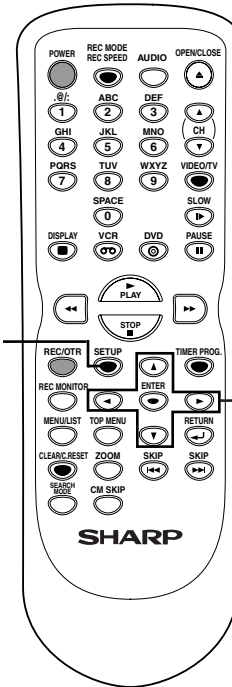

### Notes on TV channel audio

- When you record a TV program available in second audio or stereo on a DVD-RW/R or videotape, you have to select either Stereo or SAP in the Channel Preset screen beforehand. Refer to the following table to check an appropriate setting.

Selected audio	Broadcast audio	Disc (Videotape) recording	Audio output
Stereo	STEREO+SAP	STEREO	STEREO
	STEREO	STEREO	STEREO
	MONO+SAP	MONO	MONO
	MONO	MONO	MONO
SAP	STEREO+SAP	SAP	SAP
	STEREO	STEREO	STEREO
	MONO+SAP	SAP	SAP
	MONO	MONO	MONO

- As can be seen in the above table, when a TV program is available in second audio and you set Channel Preset to SAP, you can only play the recording in second audio.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

# Getting started

## Setting the clock

Set the clock before you try the timer recording. If a Public Broadcasting Station (PBS) is available in your area, follow Auto Clock Setting below. If not, follow Manual Clock Setting on pages 23-24.

### Auto Clock Setting


Make sure

- The antenna/cable TV connections are correct.
- If this unit is connected to a Cable Box or Satellite Box, select the local PBS station on them to set the clock automatically.

**1**


Press **SETUP** button to display **SETUP/DISC** menu. **SETUP/DISC** menu will appear.

Screen:

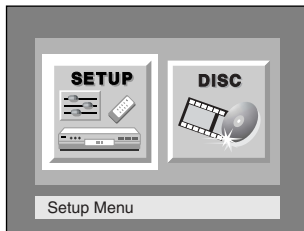


**2**

Select "**SETUP**" using **◀/▶** buttons, then press **ENTER** button. **SETUP** menu will appear.

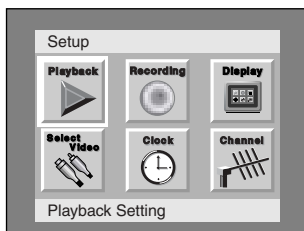

**3**


Select "**Clock**" using **▲/▼/◀/▶** buttons, then press **ENTER** button. **Clock** menu will appear.

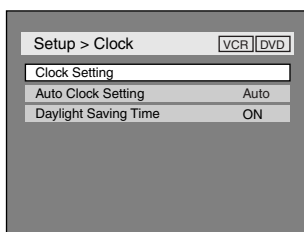

**4**

Select "**Auto Clock Setting**" using **▲/▼** buttons, then press **ENTER** button.


Option window will appear.

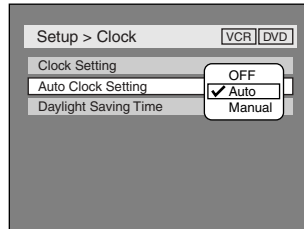

**5**

- If you do not know your **PBS** channel number, select "**Auto**" using **▲/▼** buttons, then press **ENTER** button.

- If you know your **PBS** channel number, select "**Manual**" using **▲/▼** buttons, then press **ENTER** button.

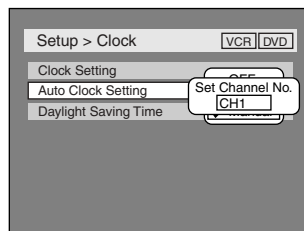

Enter your **PBS** channel number using **Number** or **▲/▼** buttons, then press **ENTER** button.


**6**

Press **SETUP** button to exit.

**7**

Press **POWER** button to turn off the unit.

This unit will search for the time only when the power is off. Leave it off for several minutes to give this unit time to set the clock on the display of the front panel.

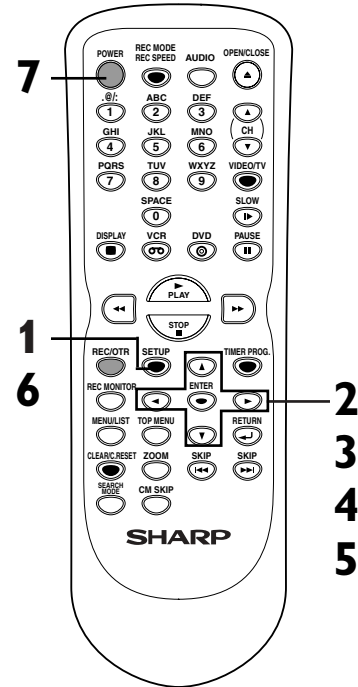

### Note

- The clock may set itself automatically after you connect the antenna/cable signal to this unit and plug in the power cord. In this case, the current time will appear on the front panel display.
- If the current time is not displayed or the displayed clock is not correct, set the clock manually.

# Getting started


## Setting the clock (cont'd)

### Manual Clock Setting

1

Press **SETUP** button to display **SETUP/DISC** menu. **SETUP/DISC** menu will appear.


Screen:

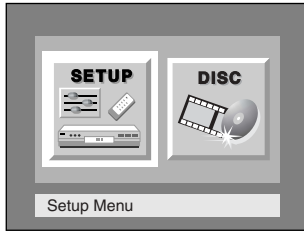

2

Select "**SETUP**" using **◀ / ▶** buttons, then press **ENTER** button.


**SETUP** menu will appear.

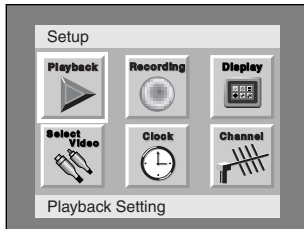

3

Select "**Clock**" using **▲ / ▼ / ◀ / ▶** buttons, then press **ENTER** button.


Clock menu will appear.

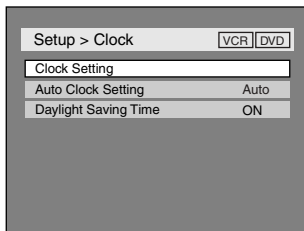

4

Select "**Clock Setting**" using **▲ / ▼** buttons, then press **ENTER** button.


A clock setting window will appear.

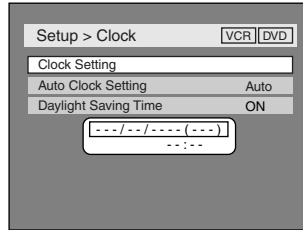

Press **ENTER** button again. Default date will appear.

5



Enter the date (month / day / year) using **▲ / ▼** buttons. Press **◀ / ▶** buttons to move the cursor.

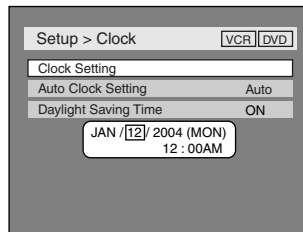

6

Enter the time (hour / minute) using **▲ / ▼** buttons.

Press **◀ / ▶** buttons to move the cursor.

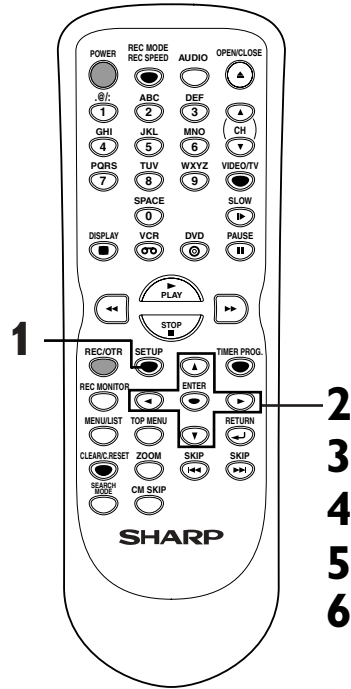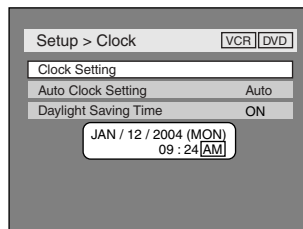

#### Note

- Your clock setting will be lost if either there is a power failure or this unit has been unplugged for more than 30 seconds when you set the clock manually.

Instructions continue on page 24.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español


# Getting started

## Setting the clock (cont'd)

**7**


Press **▲ / ▼** buttons to select **AM** or **PM**, then press **ENTER** button.

Clock menu will appear, then the settings will be activated.

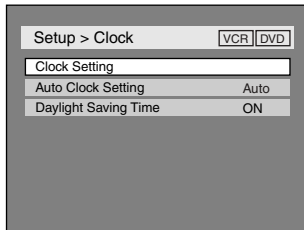

**8**

Press **SETUP** button to exit. Although seconds are not displayed, they begin counting from zero.

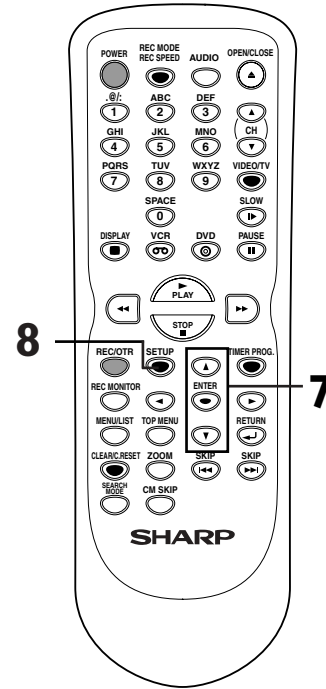


When “Auto Clock Setting” is selected to “Auto” or “Manual”, change it to “OFF” as following steps.

Repeat steps (1) to (3) in “Manual Clock Setting”.

**4**

Select “Auto Clock Setting” using **▲ / ▼** buttons, then press **ENTER** button.

Option window will appear.

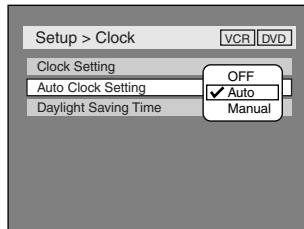


**5**

Select “OFF” using **▲ / ▼** buttons, then press **ENTER** button.

**6**

Press **SETUP** button to exit.

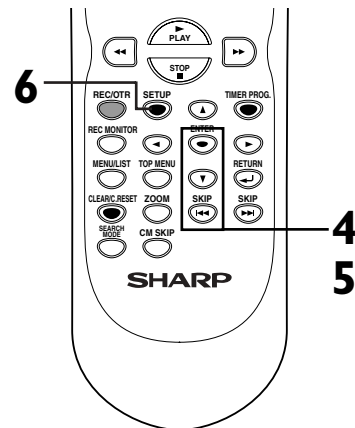



# Getting started

## Setting the clock (cont'd)


### Setting the daylight saving time

When Daylight Saving Time is ON, the clock will automatically move forward one hour on the first Sunday in April and move back one hour on the last Sunday in October.

1

Press **SETUP** button to display **SETUP/DISC** menu. **SETUP/DISC** menu will appear.


Screen:

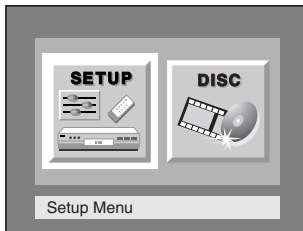

2

Select **"SETUP"** using **◀ / ▶** buttons, then press **ENTER** button.


**SETUP** menu will appear.

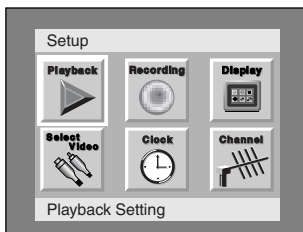

3


Select **"Clock"** using **▲ / ▼ / ◀ / ▶** buttons, then press **ENTER** button.

Clock menu will appear.

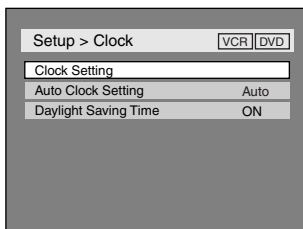

4

Select **"Daylight Saving Time"** using **▲ / ▼** buttons, then press **ENTER** button. Daylight Saving Time options will appear.

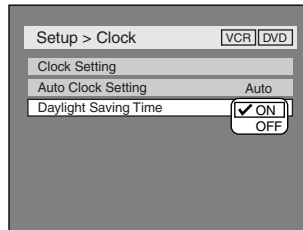


5

Select **"ON"** or **"OFF"** using **▲ / ▼** buttons, then press **ENTER** button. Choose **"ON"** when currently observing the daylight saving time.

6

Press **SETUP** button to exit.

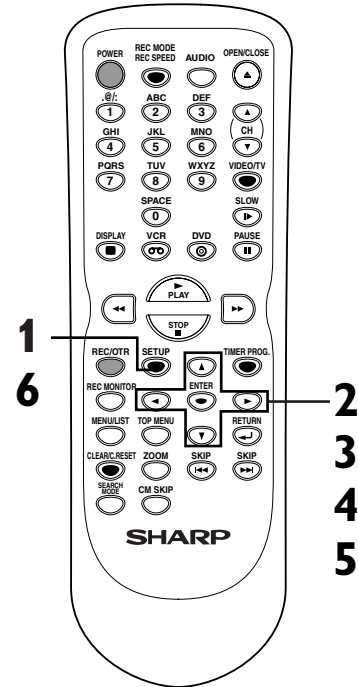

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

# Getting started


## Selecting the TV aspect ratio

You can select the TV aspect ratio to match the formats of what you are playing with the unit and your TV screen (4:3 standard or 16:9 widescreen TV).  
"4:3 Letter Box" has been selected as the default.

1

Press **SETUP** button to display **SETUP/DISC** menu. **SETUP/DISC** menu will appear.


Screen:

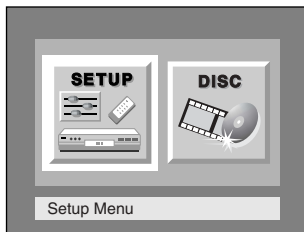

2

Select "**SETUP**" using **◀/▶** buttons, then press **ENTER** button.


**SETUP** menu will appear.

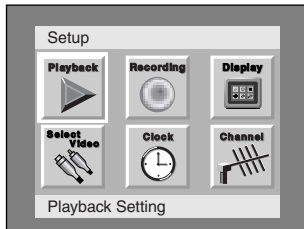

3

Select "**Playback**" using **▲/▼** / **◀/▶** buttons, then press **ENTER** button.

**Playback** menu will appear.

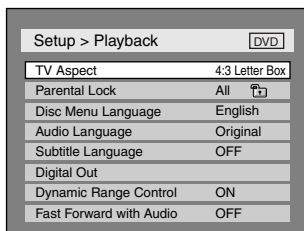

4

Select "**TV Aspect**" using **▲/▼** buttons, then press **ENTER** button.

Option window will appear.




Refer to the **Note** on this page.

5

Select a desired option using **▲/▼** buttons, then press **ENTER** button.

6

Press **SETUP** button to exit.

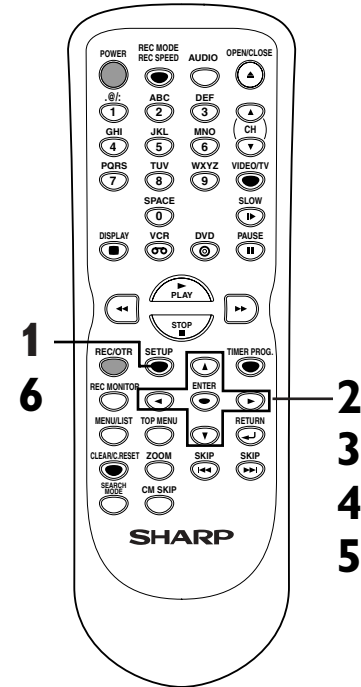

### Note

**If you have a standard TV:**  
Select "4:3 Letter Box", so that black bars appear on the top and bottom of the screen. Select "4:3 Pan & Scan" for a full height picture with both sides trimmed.

**If you have a widescreen TV:**  
Select "16:9 Wide".



# Recording

## Information on DVD recording

### Information

This unit can record to DVD-RW and DVD-R discs. When recording, you will need to select a recording format between Video mode and VR mode depending on the disc format. When recording to DVD-RW, a recording format will be "Video mode" or "VR mode" because a disc format is available between "Video Recording format" and "Video format" for DVD-RW.

On the other hand, the disc format for DVD-R is always "Video format," so a recording format will be "Video mode".

Logo	Attributes
	8cm/12cm, single-sided, single layer disc Approx. max. recording time (SEP mode): 600 minutes (4.7GB) (for 12cm) 180 minutes (1.4GB) (for 8cm)
	8cm/12cm, single-sided, single layer disc Approx. max. recording time (SEP mode): 600 minutes (4.7GB) (for 12cm) 180 minutes (1.4GB) (for 8cm)

\* This unit cannot record on the following discs.







- DVD-RW Ver 1.2 / 2-4x CPRM compatible
- DVD-R General Ver 2.0 / 8x

### About Video mode and VR (Video Recording) mode

Video mode is the same recording format as DVD-Video discs purchased locally, so that you can play in most DVD players. To play in other DVD players, you will need to finalize (see page 41). If not finalized, you can play, record additionally or edit discs recorded in Video mode with this unit.

VR (Video Recording) mode is a basic recording format for DVD-RW. You can record and edit repeatedly.

DVD players with  are capable of playing DVD-RW recorded in VR mode.

Disc type	Disc format	Functions
	Video mode 	Playing, limited recording, limited editing
	VR mode 	Playing, recording, Original/Playlist editing
	Video mode 	Playing, limited recording, limited editing

### Recording speed

You can select a recording speed among 6 options, and the recording time will depend on the recording speed you select as follows.

Recording speed	Recording time *	Video/Sound Quality
<b>XP</b>	60 min	☆☆☆☆☆☆
<b>SP</b>	120 min	☆☆☆☆☆
<b>LP</b>	240 min	☆☆☆☆
<b>EP</b>	360 min	☆☆☆
<b>SLP</b>	480 min	☆☆
<b>SEP</b>	600 min	☆

\* This table is designed for a new single-sided 12cm disc as the standard. The recording time are estimates and actual recording time may differ.

\* The audio and video quality is getting poorer as the recording time becomes longer.

\* Discs recorded in SLP or SEP on this recorder may not be played back on other DVD recorders or DVD players.

### Restrictions on recording

You cannot record copy-protected video using this unit. Copy-protected video includes DVD-Video discs and some satellite broadcasts.

If copy-protected material is encountered during a recording, the unit will pause or stop automatically and an error message will be displayed on-screen.

Video that is "copy-once only" can only be recorded using a DVD-RW disc in VR mode with CPRM (see below).

When recording a TV broadcast or through an external input, you can display copy control information on screen.

#### What is "CPRM"?

CPRM is a copy protection system with scramble system regarding the recording of "copy once" broadcast programs. CPRM stands for Content Protection for Recordable Media.




This unit is CPRM compatible, which means that you can record copy-once broadcast programs, but you cannot then make a copy of those recordings. CPRM recordings can only be made on DVD-RW discs formatted in VR mode, and CPRM recordings can only be played on players that are specifically compatible with CPRM.

# Recording

## Information on DVD recording (cont'd)

### Information on copy control

Some satellite broadcasts include copy-protected information. For recording these, refer to the following.

Disc type / format	Copy-free	Copy-once	Copy-prohibited
 VR DVD-RW ver.1.1 ver.1.1 CPRM compatible	☆	—	—
	☆	☆	—
 Video DVD-RW ver.1.1 ver.1.1 CPRM compatible	☆	—	—
	☆	—	—
 DVD-R ver.2.0	☆	—	—


☆ Recordable  
 — Not Recordable

#### Note

- The audio and video quality is getting poorer as the Recording time becomes longer.
- This unit cannot record CD-RW or CD-R discs.
- DVD-RW/R and CD-RW/R discs recorded using a personal computer or a DVD or CD recorder may not play if the disc is damaged or dirty, or if there is dirt or condensation on the pickup lens.
- If you record a disc using a personal computer, even if it is recorded in a compatible format, there are cases in which it may not play because of the settings of the application software used to create the disc. (Check with the software publisher for more detailed information.)
- Discs recorded in video mode on this DVD recorder cannot record additionally using other DVD recorders.
- A DVD-RW disc formatted with this unit cannot be used in other DVD recorders without any recording using this unit.
- Since the recording is made by the variable bit rate (VBR) method, depending on the picture you are recording, the actual remaining time for recording may be a little shorter than the remaining time displayed on the OSD.

### Making discs playable in other DVD player (Finalize)

After recording, you must finalize the disc in order to play on other unites. (Refer to page 41.)

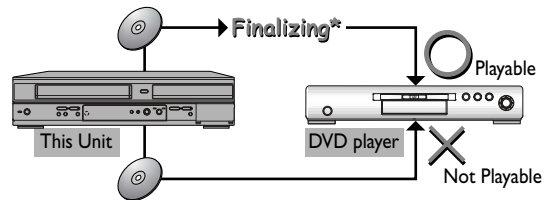

\* You cannot finalize discs in other DVD recorders.

#### After finalizing:

- Once DVD-RW/R (Video mode) is finalized, you cannot record additionally or edit.
- Even if DVD-RW (VR mode) is finalized, you can record additionally or edit the disc.
- When DVD-RW/R (Video mode) is finalized, title menu will be created automatically.

To play in other DVD players, finalize discs recorded on this unit with the following condition.

Disc type	Mode
<b>DVD-RW</b> ver.1.1 ver.1.1 CPRM compatible	Video mode
	VR mode
<b>DVD-R</b> ver.2.0	Video mode

# Recording

## Formatting a disc

### Choosing the recording format of a blank disc




When inserting a blank disc, the unit starts to initialize the blank disc. After that, you can record to the disc with the recording format selected in SETUP menu.

You are allowed to set a specified time for chapter marks.

**1**

Press **SETUP** button to display **SETUP/DISC** menu. **SETUP/DISC** menu will appear.

Screen:

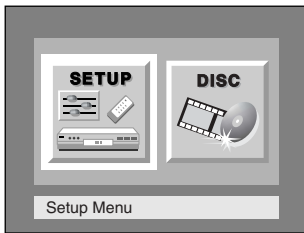

**2**

Select **"SETUP"** using **◀/▶** buttons, then press **ENTER** button.


**SETUP** menu will appear.



**3**

Select **"Recording"** using **▲ / ▼ / ◀ / ▶** buttons, then press **ENTER** button.


Recording menu will appear.

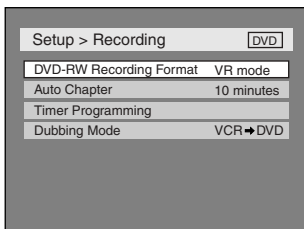

**4**

Select **"DVD-RW Recording Format"** using **▲ / ▼** buttons, then press **ENTER** button.

Option window will appear.

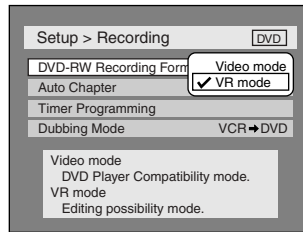

VR mode has been selected as the default.

**5**


Select **"Video mode"** or **"VR mode"** using **▲ / ▼** buttons, then press **ENTER** button.

The recording mode will be set.

**6**

Select **"Auto Chapter"** using **▲ / ▼** buttons, then press **ENTER** button.

Option window will appear.

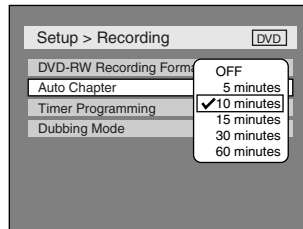

"10 minutes" has been selected as the default.


**7**

Select a desired time option using **▲ / ▼** buttons, then press **ENTER** button.

Chapter marks will be put as you specified.

**8**

Press **SETUP** button to exit.

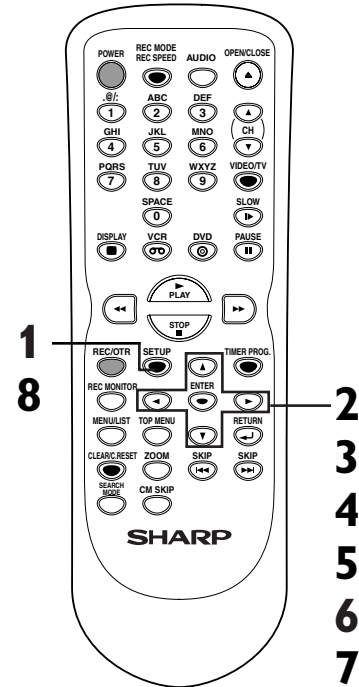

#### Note

- When inserting a blank DVD+RW or DVD+R disc, the error message ("Disc Error") will appear. You cannot record on a DVD+RW/R. On this unit, DVD+RW and DVD+R are for playback only.
- PLAYLIST will be created automatically when recording on DVD-RW in VR mode.
- The time for chapter marks is not accurate in Video mode.
- A blank chapter may be created depending on the remaining time of the disc.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

# Recording

## Formatting a disc (cont'd)

### Reformatting a disc




If you are using a DVD-RW disc, by default it will be VR mode. You can change this to Video mode from SETUP menu.

**1**


Press **SETUP** button to display **SETUP/DISC** menu. SETUP/DISC menu will appear.

Screen:

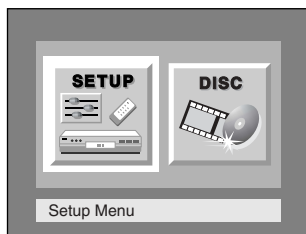

**2**

Select **"DISC"** using **◀ / ▶** buttons, then press **ENTER** button. DISC menu will appear.

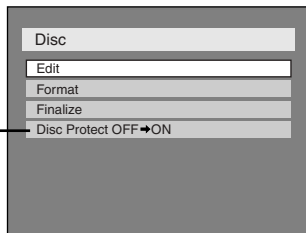


\*VR mode only

**3**

Select **"Format"** using **▲ / ▼** buttons, then press **ENTER** button.

Option window will appear.

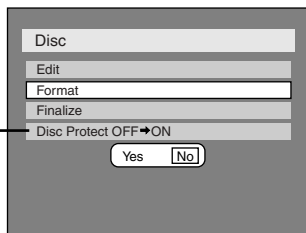


\*VR mode only

**4**

Select **"Yes"** using **◀ / ▶** buttons, then press **ENTER** button.

Option window will appear.

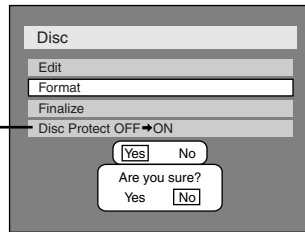


\*VR mode only

**5**


Select **"Yes"** using **◀ / ▶** buttons, then press **ENTER** button.

Formatting will start.

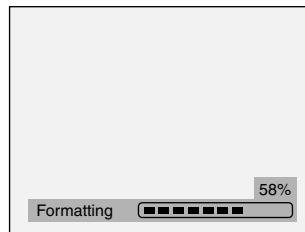


**6**

Formatting is complete. 100% will be indicated.

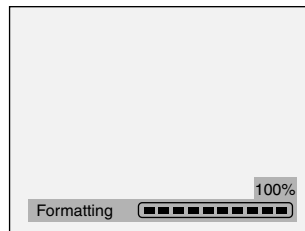

**This operation may take a while to be completed.**

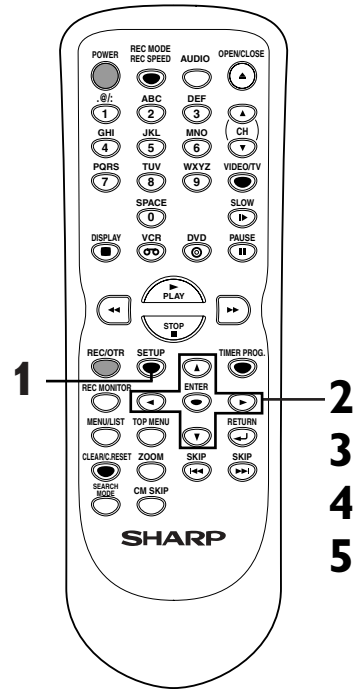

#### Note

- When you reformat the disc, the contents of the disc will be erased.
- If you want to cancel format at step 5, select "No".

# Recording

## Basic recording



Follow the steps below to record TV programs.

First:

1


Turn on the unit and load a recordable disc.

Make sure that the TV input is set on the unit.

**This operation may take a while to be recognized.**

2

Select a recording speed using REC MODE/REC SPEED button.

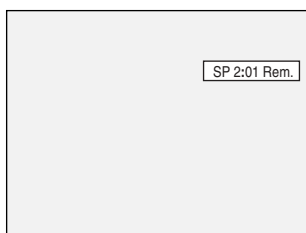

Refer to "Recording speed" on page 27.

3

Make sure that the recording format is set to the desired mode.

Refer to "Formatting a disc" on pages 29-30.

**When a DVD-RW disc is loaded:**


You can choose Video mode or VR mode from SETUP menu. "VR mode" has been selected as the default. Refer to "Choosing the recording format of a blank disc" on page 29.

**When a DVD-R disc is loaded:**

DVD-R discs will always be in Video mode.

4

Select a desired channel to record using CH ▲ / ▼ buttons or number buttons.

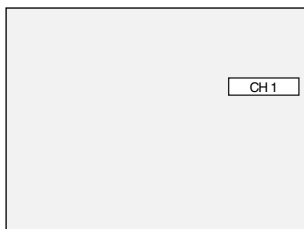

5

Press REC/OTR button to start recording.

● mark will be displayed for 5 seconds.




To pause the recording, press PAUSE ■■ button. Press REC/OTR button to restart the recording.

6

Press STOP ■ button to stop the recording.

**This operation may take a while to be completed.**

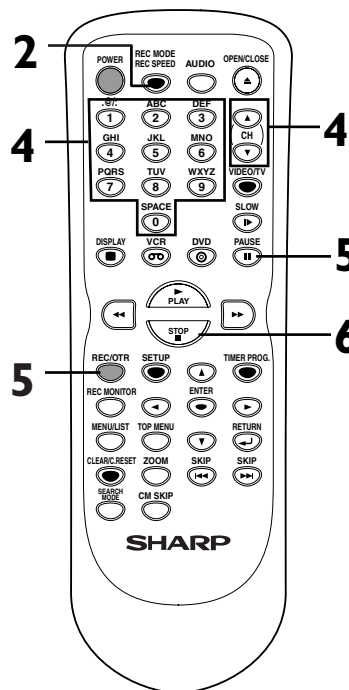

### Note

- Recording starts immediately and continues until the disc is full or you stop recording.
- When the clock setting has not been made, the space for a date and time of title names in the original or playlist will be blank.
- When you record a TV program which has Stereo and SAP-audio on a DVD-RW/R (Video mode), you have to select the TV channel audio (Stereo or SAP) beforehand. Only the selected channel audio will be recorded. Refer to "Selecting the TV stereo or SAP" on page 21 for more details.
- You cannot mix two formats on one DVD-RW disc. When you load a disc once recorded before, the recording format cannot be changed even if you change it in SETUP menu.
- You cannot change the recording speed during the REC pause mode.
- You can change a channel during the REC pause mode.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

# Recording

## Basic recording (cont'd)

### Checking the recording picture quality




You can confirm the recording picture quality with the recording speed you have selected before attempting to record to a DVD disc.

First:

1

While the unit is in **STOP** or **REC** with a DVD disc to record inserted, press **REC MONITOR** button.


The TV program will be on the screen in the recording picture quality with the recording speed you have selected.

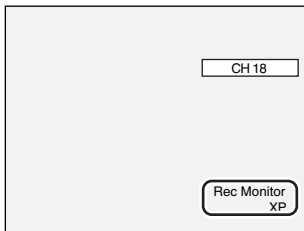

If you want to change the recording speed, press **REC MODE/REC SPEED** button repeatedly.


The recording speed will be changed as you press the button as shown. Refer to "Recording speed" on page 27.

- You cannot change the recording speed during recording.

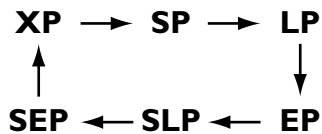

2

Press **REC MONITOR** button again to exit.

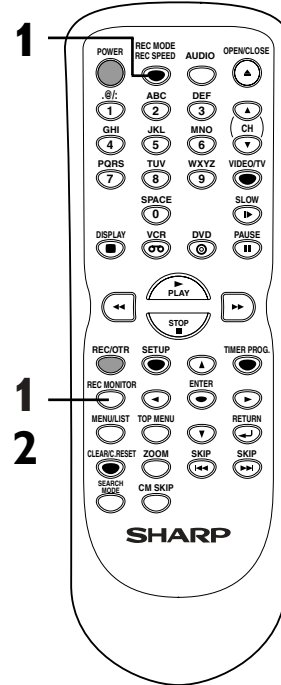

#### Note

- You cannot check the recording sound quality with the Rec monitor function.



# Recording

## One-touch timer recording



This is a simple way to set the recording time in blocks of 30 minutes. Check that the disc you are recording onto has enough space for the time you set. When the recording finishes the recorder automatically goes into standby.

First:

**1**

Turn on the unit and load a recordable disc.

Make sure that the TV input is set on the unit.

**This operation may take a while to be recognized.**

**2**

Select a recording speed using REC MODE/REC SPEED button.

Refer to "Recording speed" on page 27.

**3**

Make sure that the recording format is set to the desired mode.

Refer to "Formatting a disc" on pages 29-30.

**When a DVD-RW disc is loaded:**

You can choose Video mode or VR mode from SETUP menu. "VR mode" has been selected as the default. Refer to page 29 "Choosing the recording format of a blank disc."

**When a DVD-R disc is loaded:**



DVD-R discs will always be in Video mode.

**4**

Select a desired channel to record using CH ▲ / ▼ buttons or number buttons.

**5**

Press REC/OTR button, then press REC/OTR button repeatedly until a desired recording time (30 minutes to 8 hours) appears on the TV screen. Recording will start.

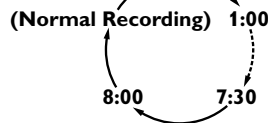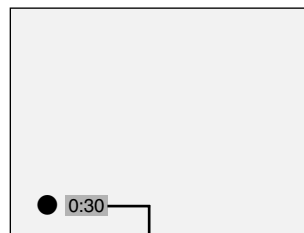


When the unit reaches the specified time, it will turn off automatically.

To change the recording length during the one-touch timer recording, press REC/OTR repeatedly until the desired length appear.

To cancel the one-touch timer recording within the specified time, press STOP ■ button.

**This operation may take a while to be completed.**

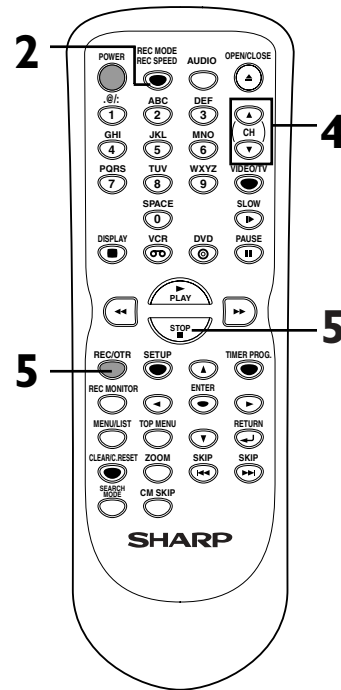

### Note

- The remaining recording time will appear on the display panel during an one-touch timer recording. Press DISPLAY button to see it on the TV screen.
- You cannot pause a one-touch timer recording.
- Unlike a timer recording, you can perform the following operations during a one-touch timer recording.
  - Turning the power off
  - Using REC, STOP ■, or RETURN buttons.
- The unit will be turned off automatically under the following conditions.
  - No space remained on the disc.
  - When a power failure occurs.
- If OTR is finished in DVD during playback or REC mode in VCR, the DVD will be in STOP mode and the VCR keeps the current mode.

# Recording

## Timer recording




You can program the unit to record up to 8 programs, up to a year in advance. Daily or weekly program recordings are also available.

- Be sure to set the clock before making a timer programming.
- Insert a recordable disc or a videotape with a record tab.

**1**

Press **SETUP** button to display **SETUP/DISC** menu. **SETUP/DISC** menu will appear.


Screen:

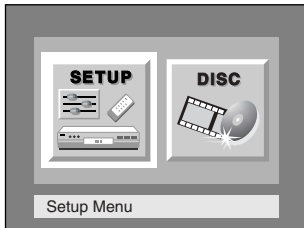

**2**

Select **"SETUP"** using **◀/▶** buttons, then press **ENTER** button.


**SETUP** menu will appear.

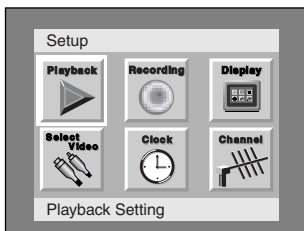

**3**

Select **"Recording"** using **▲/▼/◀/▶** buttons, then press **ENTER** button.

**Recording** menu will appear.

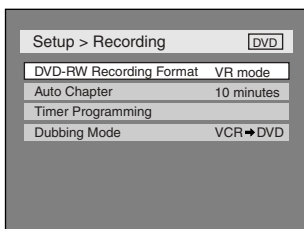

**4**

Select **"Timer Programming"** using **▲/▼** buttons, then press **ENTER** button.

**Timer Programming** list will appear.




**5**


Select the program which is not set up using **▲/▼** buttons, then press **ENTER** button.

**6**

Enter the date using **▲/▼** buttons, then press **▶** button.

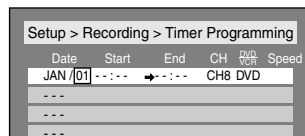


e.g. January 1st

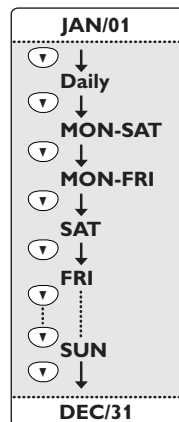


When pressing **▼** button at the current date, timer recording mode will change as follows.

**7**

Enter the time to start and to end using **▲/▼** buttons, then press **▶** button.

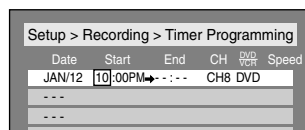

You can choose the timer programming menu by pressing **TIMER PROG.** button. In this case, continue with step 5.

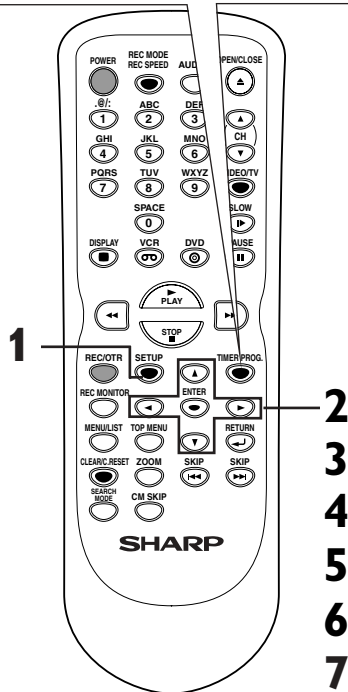


### Note

- If you have not set the clock yet:  
A clock setting window will appear after step 4. Continue with the step 4 in "Auto Clock Setting" on page 22 or "Manual Clock Setting" on page 23 before making a timer programming.
- Press **◀** or **▶** buttons to move the cursor to the left and the right in the timer programming menu.

# Recording


## Timer recording (cont'd)

 - 8** Select the channel number to record using ▲ / ▼ buttons, then press ► button.

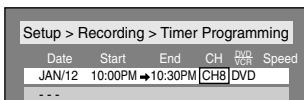


To record from external input, L1 or L2.

 - 9** Select a recording media using ▲ / ▼ buttons, then press ► button.

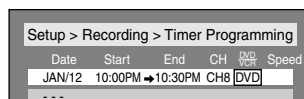

- To record on to a videotape, select VCR.
- To record on to a disc, select DVD.

 - 10** Select a recording speed using ▲ / ▼ buttons.

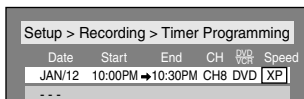


Refer to "Recording speed" on page 27 for DVD or page 94 for VCR.

- 11** Press ENTER button when all information required is entered.

Your program setting will be stored.

- To set another program, repeat steps 5 to 11.
- To exit, press SETUP button.

- 12** Press POWER button to turn off. indicator will appear on the front display.

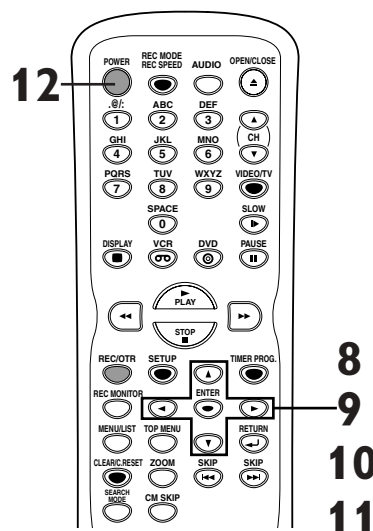


**Note**

- After step 12, the unit will be turned on automatically 2 minutes (For VCR recording, 10 seconds) in advance of the recording time to start and waits to start. Then the recording will start at the recording time you set.

### Checking, canceling, or correcting the timer programming information

- 1** Press POWER button so that indicator disappears from the front display.

 - 2** Press TIMER PROG. button. Timer Programming list will appear.

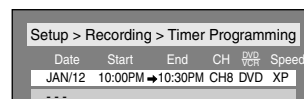


- 3** Check the information on the list you will need.

- 4** To clear the timer programming, select your desired program using ▲ / ▼ buttons, then press CLEAR/C.RESET button.

- To correct the timer programming, select your desired program using ▲ / ▼ buttons, then press ENTER button. Next, correct the timer programming using ▲/▼/◀▶ buttons. Finally, press ENTER button again.

- 5** Press TIMER PROG. button to exit.

- 6** Press POWER button to return to the timer standby mode.

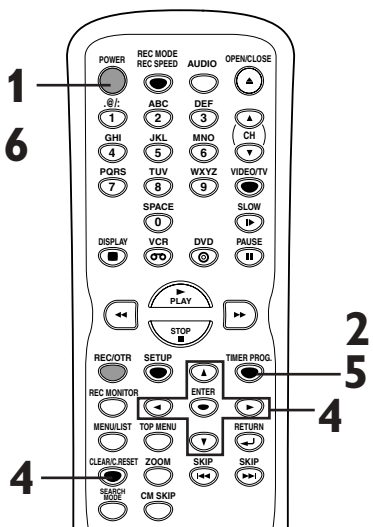

**Note**

- Press TIMER PROG. button to check the timer programming in process. When the timer recording is in process, that program will be red highlighted. In this case, you cannot select any other program.

### To stop the timer recording in process

Press STOP ■ button to stop the disc recording or STOP/EJECT ▲ to stop the videotape recording on the front panel of the main unit. STOP ■ button on the remote control is not effective.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions


 
 
Others

Español

# Recording

## Timer recording (cont'd)

### Hints for timer recording

- If there is a power failure or this unit has been unplugged for more than 30 seconds, the clock setting and all timer settings will be lost.
- If a disc is not on the tray, the DVD indicator on the front panel flashes and timer recording cannot be performed. Please insert a recordable disc.
- If a videotape with a record tab is not in the cassette compartment, the VCR indicator on the front panel flashes and timer recording cannot be performed. Please insert a recordable videotape.
- When all the timer recording is completed, the  indicator flashes. To play or eject the recorded disc (or the videotape), press POWER button first and then press PLAY ► or OPEN/CLOSE ▲ (or STOP/EJECT ■ ▲) button.
- The timer recording is not performed in DVD and VCR at the same time. If you set two programmings with the same channel and time both in DVD and VCR, the programming that has priority will be recorded.
- During timer recording or timer standby (  indicator is on the front display), any operations on the unit will not be available. To make these operations available, cancel the timer recording or timer standby first (  indicator disappears).
- To cancel the timer standby mode, press POWER button.
- When the Start and the End time are the same, the length of the recording will be set for 24 hours. When the disc reaches at the end during the recording, the unit turns itself off.
- When the programmed Start and End time are earlier than the current time, the recording will be set on the same date in the next year.
- If your programmed Start time for DVD recording is within 2 minutes from the current time, the power will turn on for recording standby right after you turn the power off. For a videotape recording, the power will turn on shortly before the Start time.
- If a videotape ends during timer recording, the unit will stop, eject the videotape, and turn itself off.
- When two or more programs are overlapped, "Overlap" will appear in the display.
- If the Start time is earlier and the End time is later than the current time, the recording will start right after you turn the power off.

### The priority of overlapped settings

This unit records the programs according to priority if the timer programmings are overlapped. The timer programming set previously has priority.

A timer recording of lower priority will be canceled, start from the middle or stop on the way. Check the overlapped timer programmings and change the priority if necessary.


■ **A programming set previously has priority**

**When the starting time is the same:**


A program set previously (PROG. 1) has priority.

**When some programming have been made at the end time of the programming currently being recorded:**  
A program set previously (PROG. 2) has priority.

ex. 1

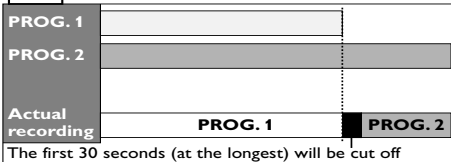


ex. 2

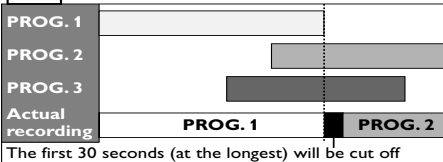


■ **When the recording time is partially overlapped:**

PROG. 1 will start after PROG. 2 is complete to be recorded. However, PROG. 1 will be recorded if you turn the power off for timer standby within 2 minutes to the Start time for PROG. 1.

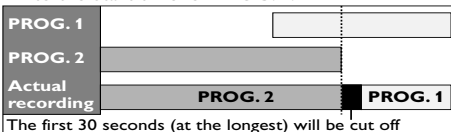


■ **When the recording time is entirely overlapped:**

However, if you turn the power off for timer standby within 2 minutes to the Start time for PROG. 1, PROG. 1 will be recorded first, and the recording of PROG. 2 will start after the recording of PROG. 1 is completed.

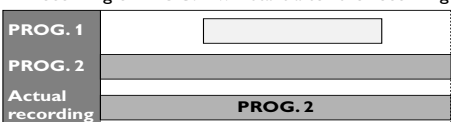

■ **When the End time of the programming currently being recorded and the Start time of the subsequent program are same:**

If PROG. 1 is a DVD recording program, the beginning of the PROG. 2 may be cut off. The amount of time cut off differs depending on the recorded media. For example, if both PROG. 1 and PROG. 2 are DVD recordings, the first 30 seconds (at the longest) will be cut off PROG.

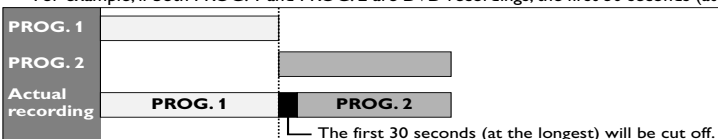

**Note**.....

- When the recording time of two programs are overlapped, or the End time of a program and the Start time of another is the same, the first 30 seconds (at the longest) of the subsequent program will be cut off.

# Recording

## Settings for an external source


### Connection to an external source




Connect the external source properly to the unit by using input jacks either LINE2 (Front) or LINE1 (Rear). When you record on a videotape, use either the DVD/VCR VIDEO IN jack (Rear) or VIDEO IN jack (Front). S-VIDEO input is useful only in DVD mode.

When connecting an external equipment of monaural output to this unit, use AUDIO L jack of LINE 1 (Rear) or LINE 2 (Front).


Use commercially available S-Video or Video cable and an Audio cable for this connection.

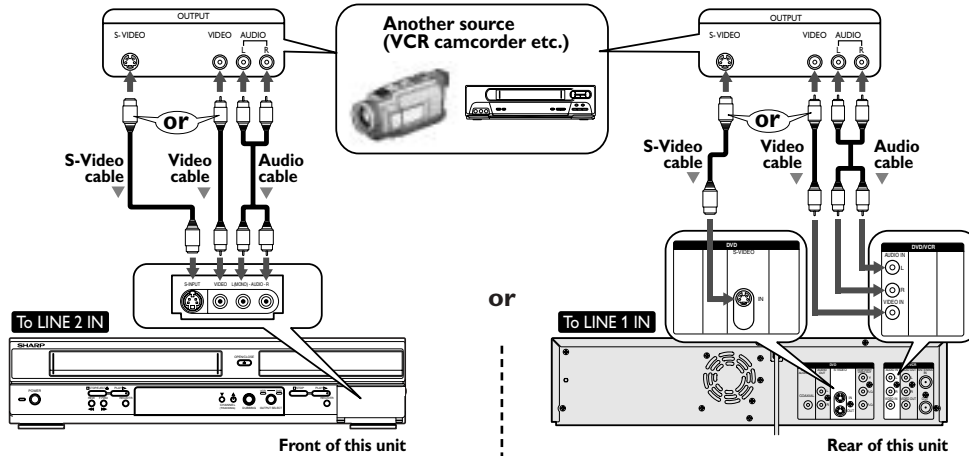


1. Press **SETUP** button to display **SETUP/DISC** menu.
2. Select **"SETUP"** using **◀/▶** buttons, then press **ENTER** button.
3. Select **"Select Video"** using **▲/▼/◀/▶** buttons, then press **ENTER** button.

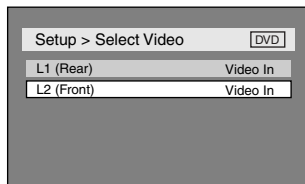


4. Select **"L2 (Front)"** using **▲/▼** buttons, then press **ENTER** button.

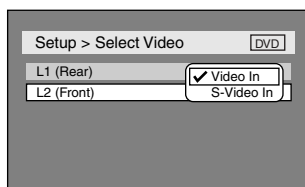


5. Select the input jack type to connect using **▲/▼** buttons, then press **ENTER** button.  
If you want to use S-VIDEO INPUT, select **"S-Video In"**.  
If you want to use VIDEO INPUT (Composite), select **"Video In"**.

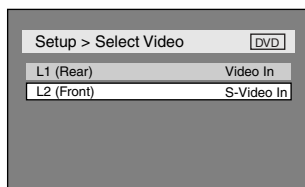


1. Press **SETUP** button to display **SETUP/DISC** menu.
2. Select **"SETUP"** using **◀/▶** buttons, then press **ENTER** button.
3. Select **"Select Video"** using **▲/▼/◀/▶** buttons, then press **ENTER** button.

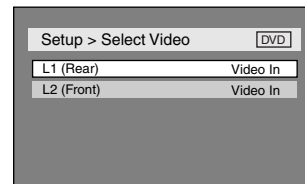

4. Select **"L1 (Rear)"** using **▲/▼** buttons, then press **ENTER** button.

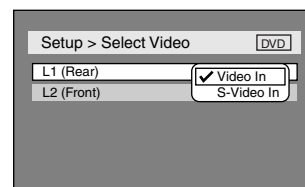

5. Select the input jack type to connect using **▲/▼** buttons, then press **ENTER** button.  
If you want to use S-VIDEO INPUT, select **"S-Video In"**.  
If you want to use VIDEO INPUT (Composite), select **"Video In"**.

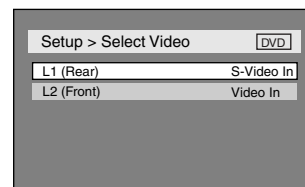

# Recording

## Settings for an external source (cont'd)

### Recording from an external source



Before recording from an external source, see the instructions for the connection on page 37.

1. Turn the TV and the unit on, and be sure to select the input of the TV to which the unit is connected.

2. **When you want to record to the disc:** Press: Press **OPEN/CLOSE** button to open the disc tray, then place the disc to record properly.

**This operation may take a while to be recognized.**


3. Press **OPEN/CLOSE** button to close the disc tray.

- When you want to record to a videotape:** Press: Insert the videotape with a record tab into the cassette compartment.

4. Select the input of the unit which the external equipment is connected. (**L2** or **L1**)

- To use the input jacks on the back of this unit, select "L1" position by pressing [0],[0],[1] on the remote control or the CH / buttons.
- To use the input jacks on the front of this unit, select "L2" position by pressing [0],[0],[2] on the remote control or the CH / buttons.

5. Select a recording speed using **REC MODE/REC SPEED** button. Refer to "Recording speed" on page 27 for DVD or page 94 for VCR.

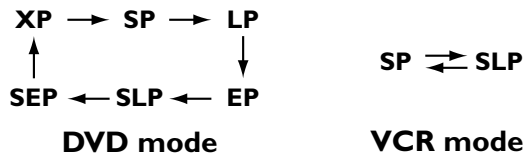


6. Press **REC/OTR** button on the unit to start recording.
7. Press **PLAY** button on the external source to record from.
8. **For disc:**

Press **STOP** button on the unit to stop recording.

**This operation may take a while to be completed.**

**For videotape:**

Press **STOP/EJECT** button on the unit to stop recording.

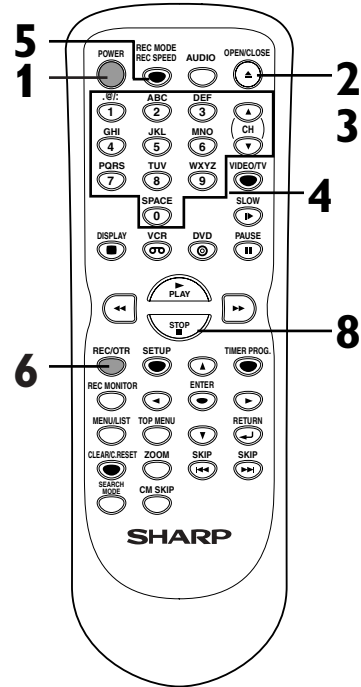

# Recording

## Dubbing Mode



You can copy a DVD disc to a videotape or copy a videotape to a DVD disc. This function will be possible only if the DVD disc or the videotape is not copy protected. Before starting this function, prepare for the recording on the DVD-RW/R disc or the videotape. Refer to pages 31-32, 94.

### Make sure:

- Insert a recordable disc and a videotape with a record tab.

### Note for recording to a videotape:

- The videotape's record tab is intact.
- The remaining time of the videotape is long enough.

### Note for recording to a disc:


- Make sure that the disc is recordable. Refer to pages 27 and 28.

1

Press **SETUP** button to display **SETUP/DISC** menu.

SETUP/DISC menu will appear.


Screen:

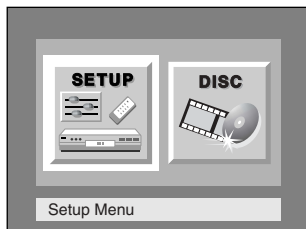

2

Select **"SETUP"** using **◀ / ▶** buttons, then press **ENTER** button.


SETUP menu will appear.

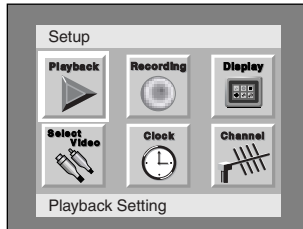

3

Select **"Recording"** using **▲ / ▼** buttons, then press **ENTER** button.


Recording menu will appear.

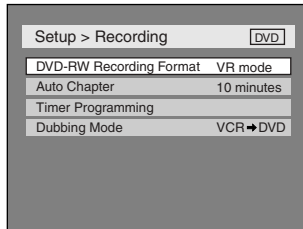

4

Select **"Dubbing Mode"** using **▲ / ▼** buttons, then press **ENTER** button.

Option window will appear.

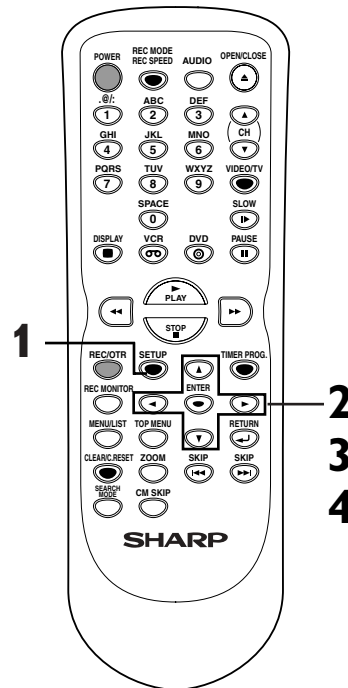

### Note

#### For VCR to DVD duplication:

- After starting VCR to DVD duplication, the picture may be distorted because of the auto tracking function. This is not a malfunction. Be advised to playback the videotape until the picture is stabilized, then set the starting point which you wish to start recording, and start VCR to DVD duplication.

Instructions continue on page 40.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español


# Recording

## Dubbing Mode (cont'd)

### VCR to DVD

#### 5-a

Select "VCR ⇒ DVD" using ▲ / ▼ buttons, then press ENTER button.

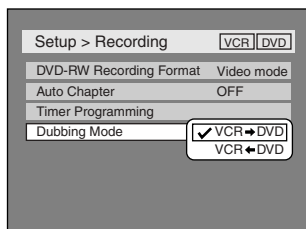

#### 6-a

Press SETUP button to exit SETUP menu.

Make sure to select a recording speed using REC MODE/REC SPEED button.

Press:

#### 7-a

Press PLAY ► button on the unit, and then press PAUSE button at the point you wish to start recording.

- Since it takes about a few seconds before the actual dubbing begins, please allow extra 5 seconds when selecting the starting point.

#### 8-a

Press DUBBING button on the front of the unit. VCR to DVD duplication will start.


#### 9-a

Press STOP ■ button on the unit or STOP ■ button on the remote control to stop the recording.

### DVD to VCR

#### 5-b

Select "VCR ⇐ DVD" using ▲ / ▼ buttons, then press ENTER button.

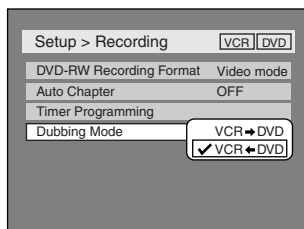

#### 6-b

Press SETUP button to exit SETUP menu.

Press:

Make sure to select a recording speed using REC MODE/REC SPEED button.

Press:

#### 7-b



Press PLAY ► button on the unit, and then press PAUSE button at the point you wish to start recording.

#### 8-b

Press DUBBING button on the front of the unit. DVD to VCR duplication will start.

#### 9-b

Press STOP/EJECT ■ ▲ button on the unit or STOP ■ button on the remote control to stop the recording.

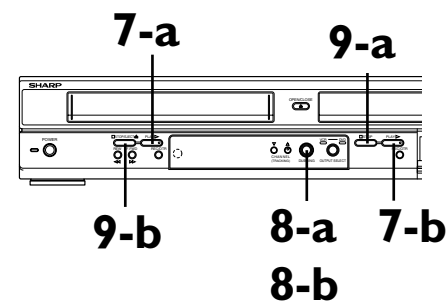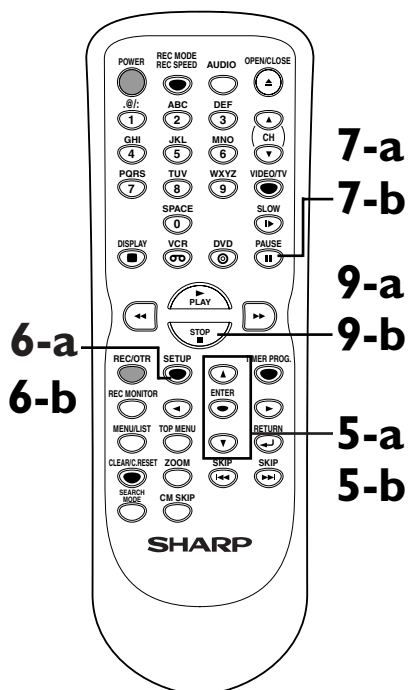

#### Note

- When you turn off the unit after setting the Dubbing Mode to VCR ⇐ DVD, the setting will be set to VCR → DVD automatically.
- Dubbing Mode is available only if the videotape or disc is not copy protected.
- You cannot change the output mode during VCR to DVD or DVD to VCR duplication.

#### For VCR to DVD duplication:

- The playback sound mode is followed by the setting of VCR playback sound mode on page 96. Set the playback sound mode to which you wish to record to the DVD.



# Recording

## Finalizing the discs




You will need to finalize the discs recorded in Video mode to play in other DVD players.

**1**

Press **SETUP** button to display **SETUP/DISC** menu. **SETUP/DISC** menu will appear.


Screen:

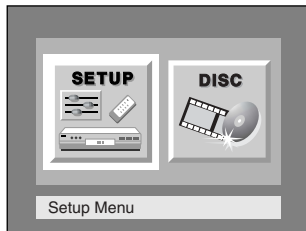

**2**

Select **"DISC"** using **◀ / ▶** buttons, then press **ENTER** button.

**DISC** menu will appear.

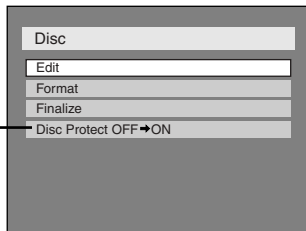


\*VR mode only

**3**

Select **"Finalize"** using **▲ / ▼** buttons, then press **ENTER** button.

Option window will appear.

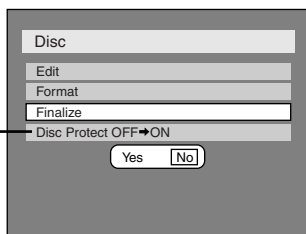


\*VR mode only

**4**

Select **"Yes"** using **◀ / ▶** but-

tons, then press **ENTER** button.

Finalizing will start.

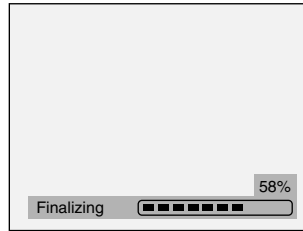


### To cancel finalizing.....


- To cancel finalizing at step 4, press **STOP** ■ button, select **"YES"**, then press **ENTER** button. Finalizing is cancelled and the DVD recorder will be in stop mode.
- If **⊙** appear when pressing **STOP** button, you cannot cancel finalizing because the finalizing has been in certain progress.
- When selecting **"No"**, press **ENTER** or **RETURN** button, finalizing will be continued.
- You cannot cancel finalizing the DVD-R disc when it has been started.

**5**

Finalizing is complete.

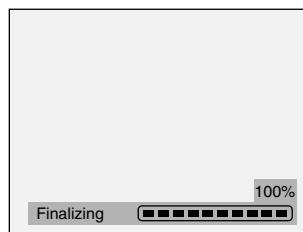


**This operation may take a while to be completed.**

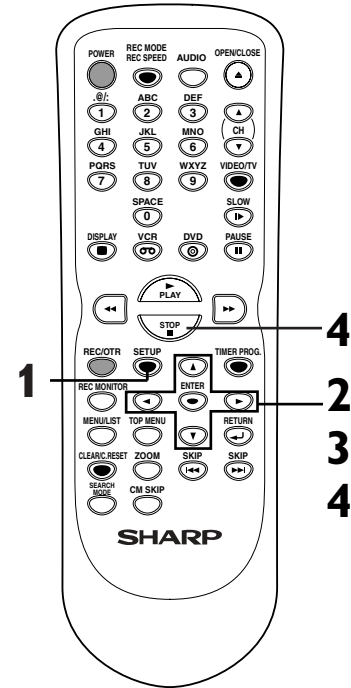

### Note

 - Finalizing discs in Video mode automatically creates title menus.
- Once you have finalized a disc recorded in Video mode, you cannot edit or record anything else on that disc. Discs recorded in VR mode can still be recorded and edited on this unit even after being finalized.
- When you insert a DVD-RW disc finalized with this unit, **"Undo Finalize"** will appear instead of **"Finalize"**.

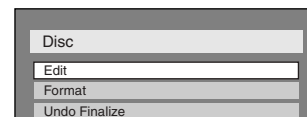

To release the finalizing for the disc, select **"Undo Finalize"** at step 3.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

# Recording

## Setting a disc to protect




To prevent accidental recording, editing, or erasing the titles, you can protect them from DISC menu.

**1**

Press **SETUP** button to display **SETUP/DISC** menu. **SETUP/DISC** menu will appear.


Screen:

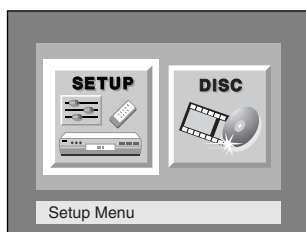

**2**

Select **"DISC"** using **◀/▶** buttons, then press **ENTER** button.


**DISC** menu will appear.

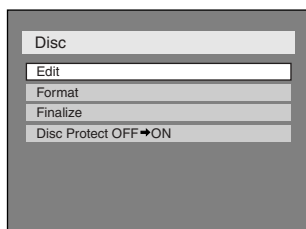

**3**

Select **"Disc Protect OFF → ON"** using **▲/▼** buttons, then press **ENTER** button.


Option window will appear.

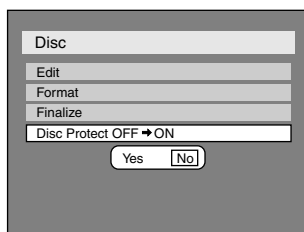


**4**

Select **"Yes"** using **◀/▶** buttons, then press **ENTER** button.

A disc will be protected.

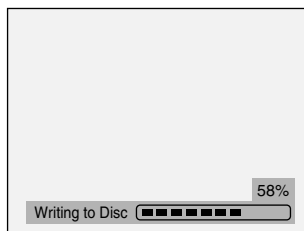

**This operation may take a while to be completed.**

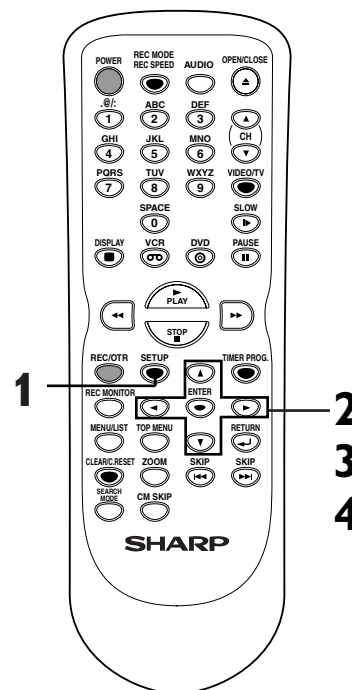


### Note

- The Disc Protect setting is available only when a disc with VR mode is inserted.

#### To cancel the disc protect:

- When you insert a disc protected with this unit, "Disc Protect ON → OFF" will appear instead of "OFF → ON".

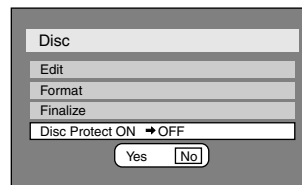

To release the protect for the disc, select **"Disc Protect ON → OFF"** at step 3, then select **"Yes"**.

# Playing discs

## Information on DVD play

Before you attempt to play DVD discs, read the following information.

### Playable discs

This unit is compatible to play the following discs. To play a DVD, make sure that it meets the requirements for Region Codes and Color Systems as described below. Discs that have the following logos will play on the unit. Other Disc types are not guaranteed to play.

Disc	Logo
DVD VIDEO	
DVD-RW (VIDEO/VR mode)	
DVD-R (VIDEO mode)	
DVD+RW (VIDEO mode)	
DVD+R (VIDEO mode)	
CD-DA (AUDIO CD)	
CD-RW (CD-DA FORMAT, MP3 files)	
CD-R (CD-DA FORMAT, MP3 files)	

### Note:


The following discs can be played on this unit but their performance is not guaranteed :

- DVD-RW Ver 1.2 / 2-4x CPRM compatible
- DVD-R General Ver 2.0 / 8x

### Guide to displays

**First:**

Press DISPLAY button to call up the display menu. This menu will give you the information on the playing disc. Some operations are available while disc is playing.

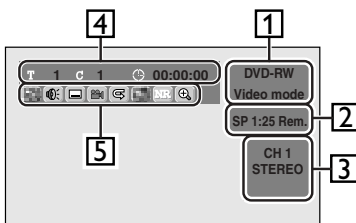

1. Indicates a disc type and a format mode.
2. Indicates a recording speed and possible recording time.
3. Indicates a current channel number and an audio status of the program.
4. Indicates a title number, chapter number, and the time elapsed of disc play.

5. Each icon means:

- : Search
- : Audio
- : Subtitle
- : Angle (except VR mode)
- : Repeat
- : Marker
- : Noise Reduction
- : Zoom


### Color systems

 DVDs are recorded in different color systems throughout the world. The most common color system is NTSC (which is used primarily in the United States and Canada).

This unit uses NTSC, so DVDs you play must be recorded in the NTSC system. You cannot play DVDs recorded in other color systems.

### Region codes

This unit has been designed to play DVD discs with Region One (1). DVDs must be labeled for ALL regions or for Region 1 in order to play on this unit. You cannot play DVDs that are labeled for other regions. Look for the symbols below on your DVDs. If these region symbols do not appear on your DVD, you cannot play that DVD in this unit.

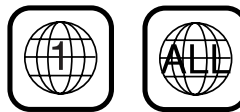


The number inside the globe refers to region of the world.

A DVD labeled for a specific region can only play on the unit with the same region code.

### Hint for DVD playback

The contents of DVD disc are generally divided into titles. Titles may be further subdivided into chapters.

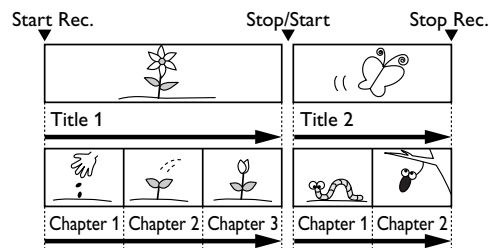

# Playing discs

## Basic playback

### Playback



**1**

Press **POWER** button, then press **DVD** button.

When you are playing a DVD, turn the TV on and be sure to select the input to which the unit is connected.


**2**

Press **OPEN/CLOSE** ▲ button to open the disc tray.

The disc tray will open.

**3**

Place the disc onto the disc tray with its label facing up and make sure to align the disc to the disc tray guide.

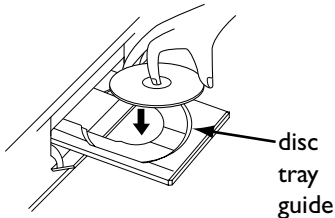

This operation may take a while to be recognized.

**4**


Press **OPEN/CLOSE** ▲ button to close the disc tray.

**5**


Press **TOP MENU** button to display the title menu.

You can change "Original" or "Playlist" of VR mode using **MENU / LIST** button.


Video mode:

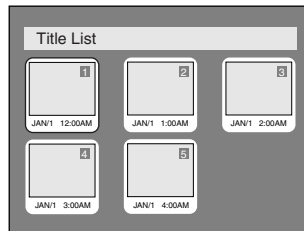

VR mode:

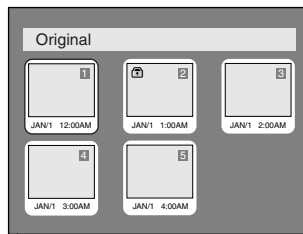

↕ **MENU / LIST** button

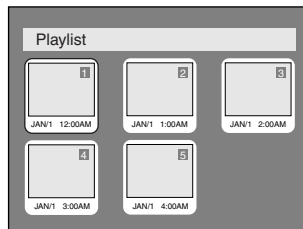

**6**


Select a desired title using ▲ / ▼ / ◀ / ▶ buttons, then press **ENTER** button.

Playback will start.

**7**


Press **STOP** ■ button to stop playback.

To eject the disc, press **OPEN/CLOSE** ▲ button to open the disc tray, then remove the disc before turning off the unit.

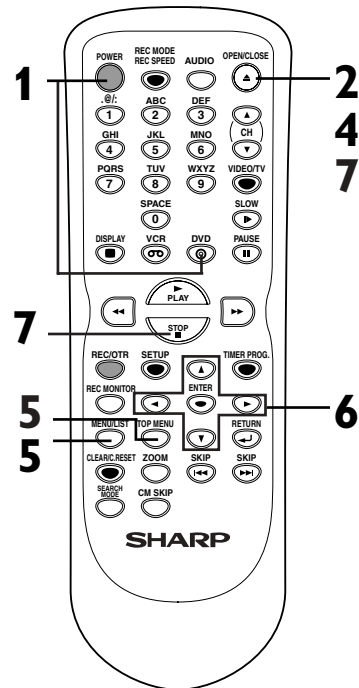

### Note

- For DVD-R (Video mode) and DVD-RW (Video mode) discs which are already finalized, a title list will be displayed instead of thumbnails.

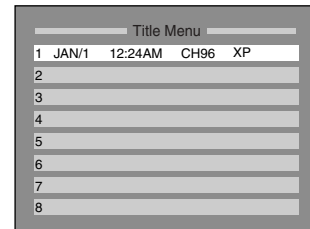

- You can resume play from where you stopped playing the disc. (Resume play) Refer to page 48 for details about resume play.
- Some discs may start playing automatically.

# Playing discs

## Basic playback (cont'd)



**1** Press **POWER** button, then press **DVD** button.

When you are playing a DVD or an audio CD, turn the TV on and be sure to select the input to which the unit is connected.


**2** Press **OPEN/CLOSE** button to open the disc tray. The disc tray will open.

**3** Place the disc onto the disc tray with its label facing up and make sure to align the disc to the disc tray guide.

**4** Press **PLAY** button to start playing. Playback will start.

If you are playing a DVD-Video disc, a menu may appear. Refer to pages 46-47 for details about a disc menu.


**5** Press **STOP** button to stop playing.

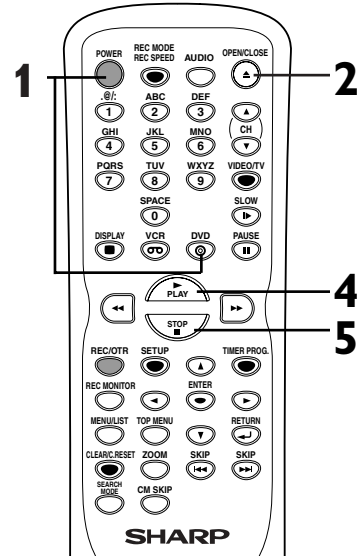

**Note**  
• Some discs may start playing automatically.

### For MP3 playback

**1** In stop mode, press **TOP MENU** button to call up the MP3 menu.

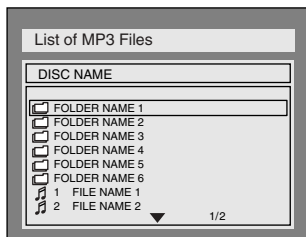

• To exit the menu, press **TOP MENU** button again.

**2** Press **▲ / ▼** buttons to select a desired folder (group) or track, then press **ENTER** button.

**When selecting track:**  
Playback will start.

**When selecting the folder:**  
The files in the folder will appear. Press **▲** or **▼** button to select the track or folder you want, then press **ENTER** button.


- Press **PLAY**, **ENTER** or **▶** button to move to the lower hierarchies.
- Press **◀** button or **RETURN** button to go to the previous hierarchy.
- Press **STOP** button to return to the first item.

#### Hints for MP3 files:

- Folders are known as Groups, files are known as Tracks.
- Folders are accompanied by folder icon.
- MP3 files are accompanied by music icon. Reproduction will start from the selected track and go to the next one in turn.
- The system can recognize up to 255 groups (or folders) and up to 255 tracks.
- The name of the group and track can be displayed in up to 32 characters. Unrecognizable characters will be replaced with asterisks.
- If there are no files in the folder, "No Files" will be displayed.

This unit recommends the files recorded under the following circumstances:

- Sampling frequency: 44.1kHz or 48kHz.
- Constant bit rate: 112kbps - 320kbps.

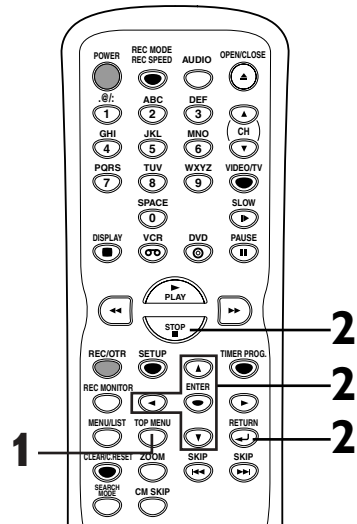

**Note**  
• The audio source of MP3 files cannot be recorded as digital sound by an MD or DAT deck.  
• Files whole extension other than ".mp3 (MP3)" will not be listed in the MP3 menu.  
• Some unplayable folders or tracks may be listed in the MP3 menu due to the recording status.

# Playing discs

## Basic playback (cont'd)

### Playing discs using the disc menu



A DVD disc contains a disc menu that describes the contents or allows you to customize the playback. For example, the menu may offer choices for subtitle languages, special features, or chapter selection.


Sometimes these are displayed automatically when you start playback, otherwise only appear when you press MENU / LIST button.


First: 

1

Press **MENU / LIST** button.

The DVD main menu will appear.

If the feature is not available,  may appear on the TV screen.

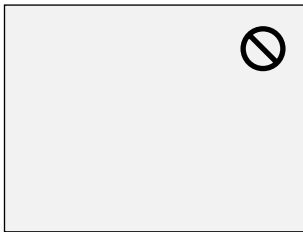

2

Select an item using **▲ / ▼ / ◀ / ▶** buttons, then press **ENTER** button to confirm.

Continue this step to set up all the features you want or to start playing the disc from the menu.

**MENU / LIST** button:

Displays a DVD disc menu which varies with the disc and may be the same as the 'Title menu.'

**▲ / ▼ / ◀ / ▶** buttons:

Moves the cursor around screen.

**Enter** button:


Selects the currently highlighted menu option.

**Number** buttons:

Selects a numbered menu option (some discs only). Press **ENTER** button after.

3

Press **MENU / LIST** button to exit the menu.

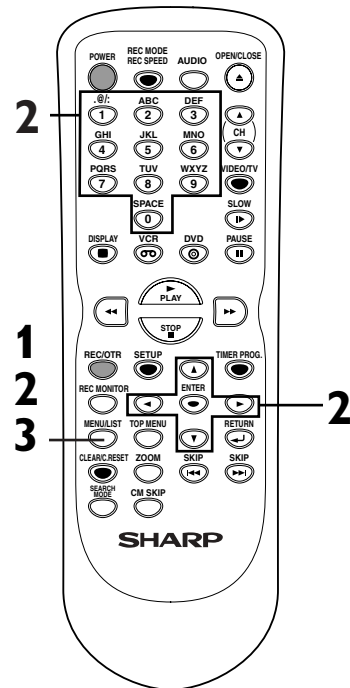

#### Note

- Menus vary among discs. Refer to the information accompanying the disc for details.

# Playing discs

## Basic playback (cont'd)

### Playing discs using the title menu




Some DVDs have a title menu, which lists the titles available on them. It helps you to start playback at a specific title.

**First:**

**1**

**Press TOP MENU button.**  
The title menu will appear.

If the feature is not available, may appear on the TV screen.

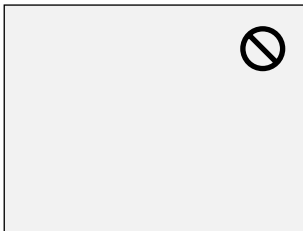

**2**

**Select a title to play using the  $\blacktriangle$  /  $\blacktriangledown$  /  $\blacktriangleleft$  /  $\blacktriangleright$  buttons, then press ENTER button.**  
Playback will begin at the title you selected.

**TOP MENU button:**

Displays the 'Title menu' of a DVD disc which varies with the disc.

**$\blacktriangle$  /  $\blacktriangledown$  /  $\blacktriangleleft$  /  $\blacktriangleright$  buttons:**

Moves the cursor around screen.

**Enter button:**


Selects the current highlighted menu option.

**Number buttons:**

Selects a numbered menu option (some discs only). Press ENTER button after.

**3**

**Press TOP MENU button to exit the title menu.**

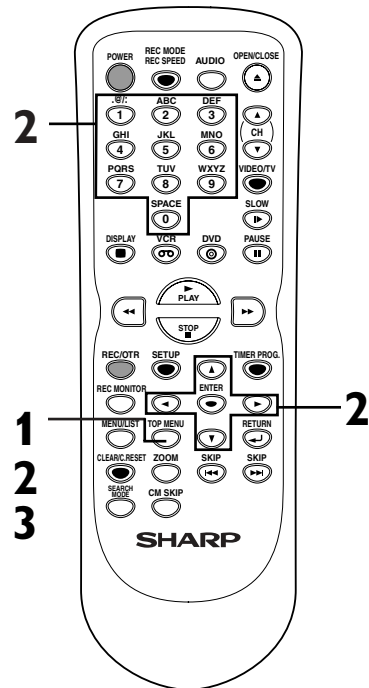

#### Note

- The TOP MENU button will not always be active with all DVDs.
- Menus vary among discs. Refer to the information accompanying the disc for details.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Changing the SETUP menu

VCR functions

Others

Español

# Playing discs

## Special playback

### Resume play




You can resume play from where you stopped playing the disc last.

**1**

During playback, press **STOP** button.

The resume message will appear.  
Screen:

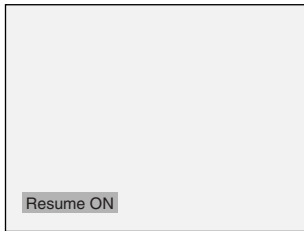


**2**

Press **PLAY** button.

In a few seconds, playback will resume from the point at which it stopped last. You can resume play at the same point even if you turn off the unit.

To cancel the resume play and start playing the disc from the beginning, press **STOP** button the second time while the playback is stopped.

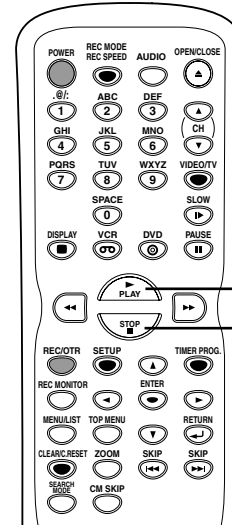

#### Note

- For MP3 files, playback will resume from the beginning of the track at which playback was stopped.

### Fast forward / Fast reverse




**1**

During playback, press **▶▶** or **◀◀** button.

Every time you press **▶▶** or **◀◀** button, approximate speed will be changed as follows. For DVD discs, sound will be output during fast forward in x2 only if you set "Fast Forward with Audio" to "ON" for the "Playback" setting in the SETUP menu.


Fast forward or fast reverse playback across titles (for DVD discs) or tracks (for MP3) is not possible.

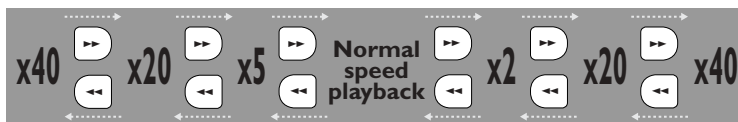

For Audio CDs, approximate speed is fixed at x8 with sound.

For MP3 files, approximate speed is fixed at x16.

To return to the normal playback, press **PLAY** button.

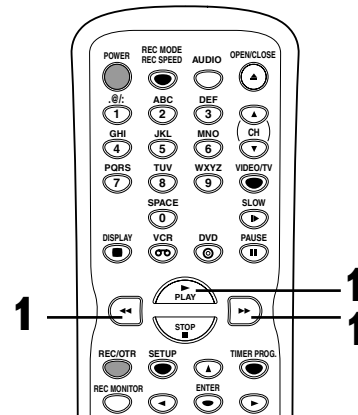

#### Note

- Forward/reverse speed will be indicated with icons as follows.

Forward (Approx. Speed)

x2: ▶▶

x20: ▶▶▶

x40: ▶▶▶▶

Reverse (Approx. Speed)

x5: ◀◀

x20: ◀◀◀

x40: ◀◀◀◀



# Playing discs

## Special playback (cont'd)

### Skipping TV commercials during play




e.g. Press CM SKIP button once

You can skip TV commercials by pressing CM SKIP button, so that you can enjoy the recorded programs without interrupting.


1

During playback, press **CM SKIP** button.


Normal playback will start at 30 seconds ahead from the point you press CM SKIP button. Every time you press CM SKIP button, the searching point will be extended by 30 seconds ahead. You can press up to 6 times (180 seconds).

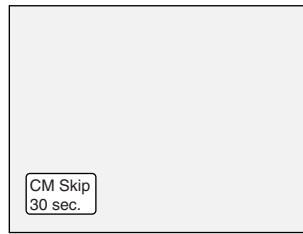

(forwarding 30 seconds.)

 

Playback will restart automatically.

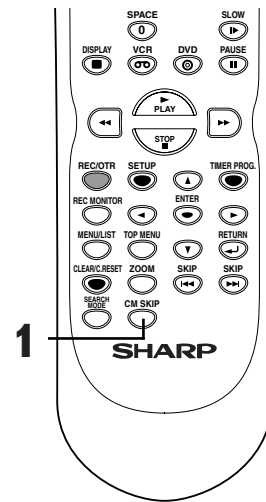

### Pause




 
2

Press **PLAY ►** button to resume play.

1

During playback, press **PAUSE II** button.

Playback will pause and sound will be muted.

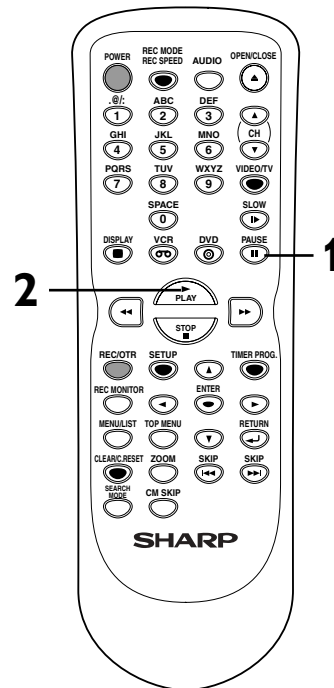

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Changing the SETUP menu

VCR functions

Others

Español

# Playing discs

## Special playback (cont'd)

### Step by step playback



**1**

During playback, press **PAUSE II** button. Playback will pause and sound will be muted.



**2**

Press **SKIP ►►** button repeatedly.


The playback will advance one frame (or step) at a time when you press the SKIP ►► button with the sound muted.

**To play step by step backward:**

Press **SKIP ◄◄** button repeatedly. Every time you press the button, the playback will go backward by one frame.

**3**

Press **PLAY ►** button to resume play.

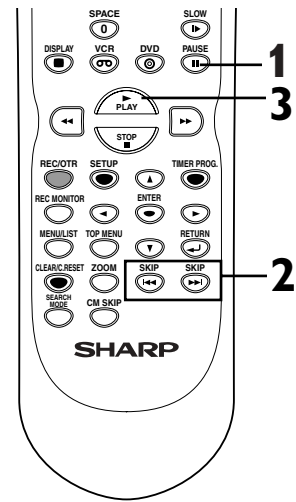

### Slow forward / Slow reverse play




**1**

During playback, press **PAUSE II** button, then press **►►** or **◄◄** button.

Every time you press **►►** or **◄◄** button, approximate speed will be changed as follows. (The sound will remain muted.)



To return to the normal playback, press **PLAY ►** button.

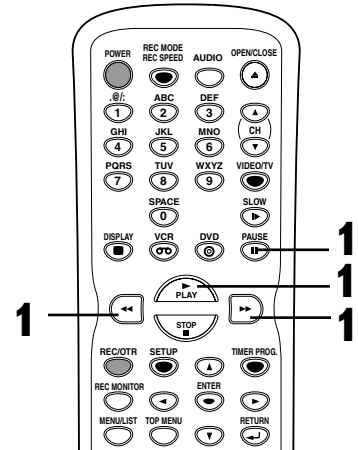

#### Note

- Forward/reverse speed will be indicated with icons as follows.

Forward (Approx. Speed)

x1/16: ►►►

x1/8: ►►►►

x1/2: ►►►►►

Reverse (Approx. Speed)

x1/16: ◄◄◄

x1/8: ◄◄◄◄

x1/4: ◄◄◄◄◄

# Playing discs

## Special playback (cont'd)

### Zoom




1

During playback, press **ZOOM** button.

Zoom menu will appear.


Screen:

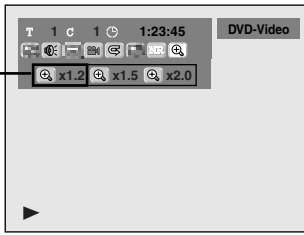

There are four options (x1.0, x1.2, x1.5 and x2.0), these are displayed excluding the current zoom rate.


2

Select a desired zoom factor to zoom using **◀/▶** buttons, then press **ENTER** button. The zoom area will be displayed.

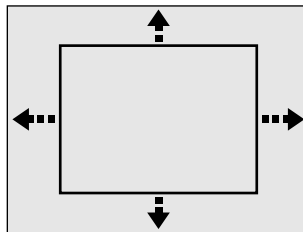

3

Select a desired zoom position using **▲/▼/◀/▶** buttons, then press **ENTER** button. The zoom play will start.

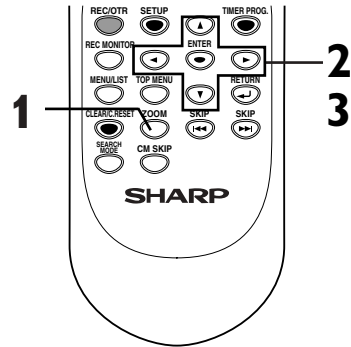

#### Note

- When selecting a smaller factor than the current one, the zoom area will not be displayed.
- To remove the zoom menu, press **ZOOM** button again at step 1.
- To cancel the zoom function, select x1.0 using **◀/▶** buttons, then press **ENTER** button.

### Marker Setup



This feature allows you to assign a specific point on a disc to be called back later.

1

During playback, press **DISPLAY** button.

The display menu will appear.

Screen:




2


Select **☆** icon using **◀/▶** buttons, then press **ENTER** button.

Marker setup menu will appear.

Screen for DVD:

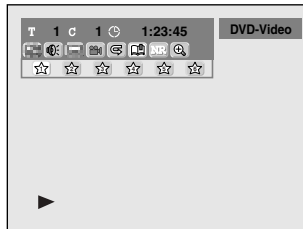

Screen for CD:

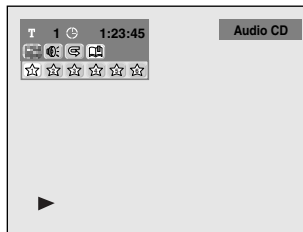


3

Select a desired marker number using **◀/▶** buttons. When it reaches the desired point, press **ENTER** button.

4

To return to the marker later, select the desired marker number using **◀/▶** buttons, then press **ENTER** button.

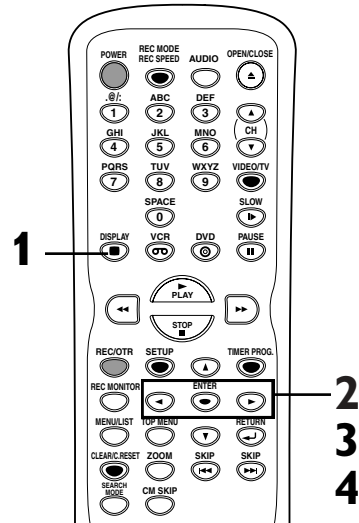

#### Note

- To clear a marker, select the marker number to be cleared, then press **CLEAR/C.RESET** button.
- All markers will be erased when you operate these operations listed below.
  - Opening the disc tray.
  - Turning off the power.
  - Recording to a recordable disc.
  - Changing the mode between Original and Playlist.(VR mode)
- You can mark up to 6 points.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

# Playing discs

## Search

### Title/Chapter search




#### Using SKIP ◀◀ / ▶▶ buttons

1

During playback, press SKIP ▶▶ button to skip the current title or chapter and move to the next.

The title or chapter will move forward one at a time.

To go back to the previous title or chapter, press SKIP ◀◀ button. The title or chapter will move backward one title at a time.

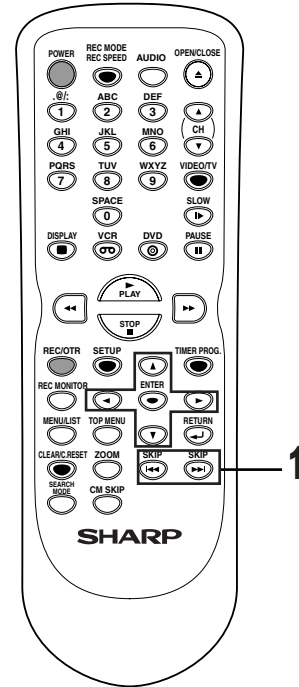

#### Using DISPLAY button

1

During playback, press DISPLAY button.

The display menu will appear.

Screen:



2

Select  icon using ◀ / ▶ buttons, then press ENTER button.

'T' for title will be highlighted.

**Title:**

Enter a desired title number to search using ▲ / ▼ buttons or number buttons, then press ENTER button.


Title search will start.

**Chapter:**

To move to 'C' for chapter, press ▶ button.

Enter a desired chapter number to search using ▲ / ▼ buttons or number buttons, then press ENTER button.

Chapter search will start.

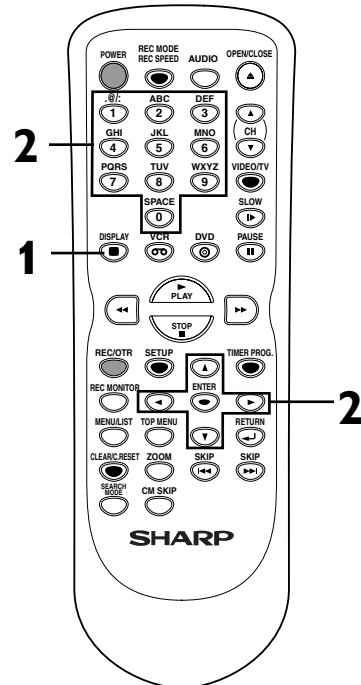

# Playing discs

## Search (cont'd)

### Track search



#### Using SKIP <<< / >>> buttons

1

During playback, press SKIP >>> button to skip the current track and move to the next.

The track will move forward one at a time.

To go back to the previous track, press SKIP <<< button. The track will move backward one at a time.

 
#### Using DISPLAY button

1

During playback, press DISPLAY button.

The display menu will appear.

Screen:

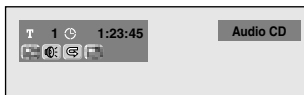

2

Select icon using < / > buttons, then press ENTER button. 'T' for track will be highlighted.

3

Enter a desired track number to search using ▲ / ▼ buttons or number buttons, then press ENTER button.

Track search will start.

### Time search



1

 
During playback, press DISPLAY button.

The display menu will appear.

Screen for DVD:



Screen for CD:

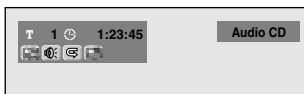

2

Select icon using < / > buttons, then press ENTER button.




'T' for title or track will be highlighted.

To move to the clock icon, press ► button.

3

Enter a desired time to search using ▲ / ▼ buttons or number buttons, then press ENTER button.

Time search will start.

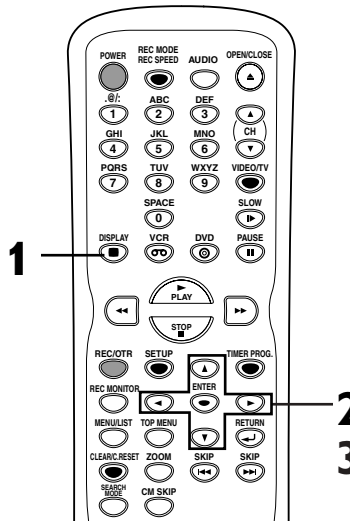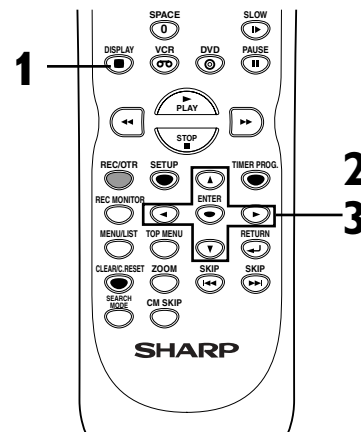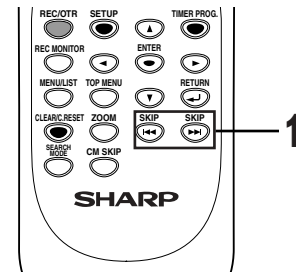

#### Note

- Time search function is available only in the same track or title.

 
# Playing discs


## Repeat/Random/Program play




### Repeat play



**1** During playback, press **DISPLAY** button. The display menu will appear.

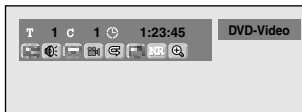

**2** Select  icon using **◀/▶** buttons, then press **ENTER** button. Repeat menu will appear.  
Screen:

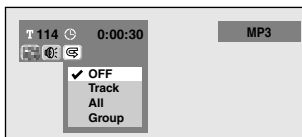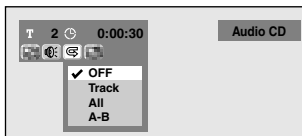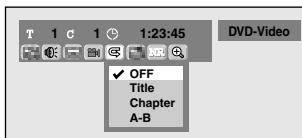

**3** Select a desired option to repeat using **▲/▼** buttons, then press **ENTER** button. The selected repeat play will start.

**Title:**  
The current title will be played repeatedly. (DVD only)

**Chapter:**  
The current chapter will be played repeatedly. (DVD only)


**All:**  
The current disc will be played repeatedly (CD, MP3 and DVD-RW (VR mode) only).

**A-B:**  
The A-B point will be played repeatedly.  
When pressing **ENTER** button while A-B is highlighted, the starting point (A) will be decided.

Press **ENTER** button again to select the ending point (B).

**Track:**  
The current track will be played repeatedly. (CD, MP3 only)

**Group:**  
The current group will be played repeatedly. (MP3 only)

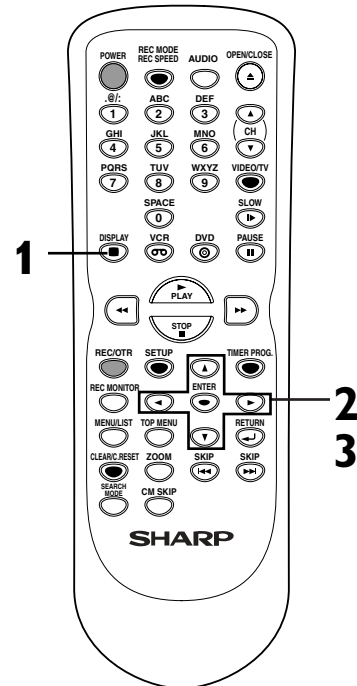

#### Note

- The A-B Repeat playback can only be set within the current title (for DVDs), or current track (for Audio CDs).
- To cancel the repeat playback, select OFF at step 2. The repeat setting will also be cancelled when you stop playback.
- You cannot select "Group" during the random playback of MP3 files.


### Random play




With this function, you can play a disc randomly instead of playing it in the original order.

**First:** 


**1** Press **SETUP** button to display **SETUP/CD** menu. **SETUP/CD** menu will appear.  
Screen:

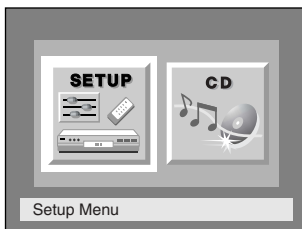

**2** Select "CD" using **◀/▶** buttons, then press **ENTER** button. CD Playback Mode menu will appear.

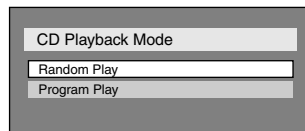

**3** Select "Random Play" using **▲/▼** buttons, then press **ENTER** button. Random playback will start.

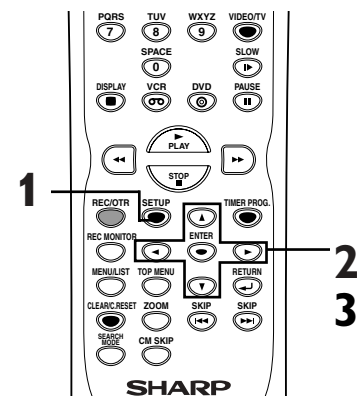

#### Note

- To cancel random playback, press **STOP** button twice during random playback.
- "Playmode OFF" appears on the screen.

# Playing discs

## Repeat/Random/Program play (cont'd)

### Program play



You can program the disc to play in your desired order.


First:

1

Press **SETUP** button to display **SETUP/CD** menu.

SETUP/CD menu will appear.


Screen:

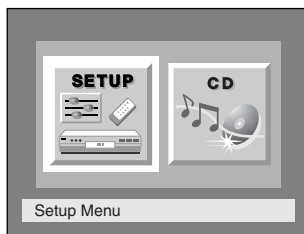

2

Select **"CD"** using **◀/▶** buttons, then press **ENTER** button.


CD Playback Mode menu will appear.

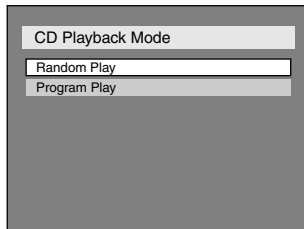

3

Select **"Program Play"** using **▲/▼** buttons, then press **ENTER** button.


Program play list will appear.

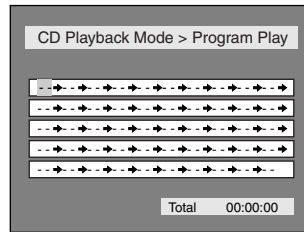

4

Select a desired track using **▲/▼** buttons, then press **ENTER** button or **▶** button.


A cursor will move to the next.

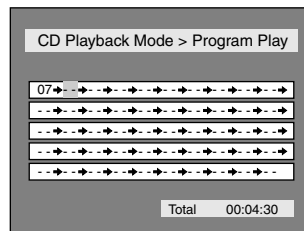

5

Press **PLAY ▶** button to start program playback.

Program playback will start.

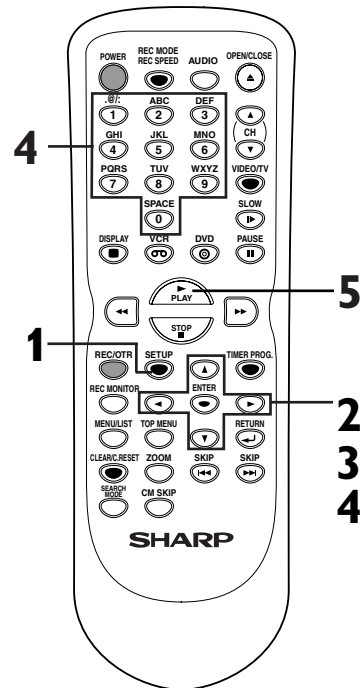

### Note

- To erase tracks you selected, press **CLEAR/C.RESET** button.
- You can make program settings up to 50.
- To cancel program playback, press **STOP ■** button twice during program playback.
- "Playmode OFF" appears on the screen.
- You may also select a desired track using Number buttons at step 4.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Espanol

# Playing discs

## Selecting the format of audio and video

You can select the format of audio and video as you prefer depending on the contents of the disc you are playing.

### Switching audio soundtrack



When playing a DVD-Video disc recorded with two or more soundtracks (these are often in different languages), you can switch between them anytime during playback.

On DVD-RW discs recorded in VR mode, you can switch to main (L), sub audio (R) or a mix of both (L/R).

**1** During playback, press **DISPLAY** button.

The display menu will appear.  
Screen:



**2** Select icon using **◀ / ▶** buttons, then press **ENTER** button.

Audio menu will appear.  
<DVD-Video>




<DVD-RW VR mode>




**3** Select a desired audio soundtrack using **▲ / ▼** buttons, then press **ENTER** button. Audio soundtrack will switch.

<DVD-RW VR mode>

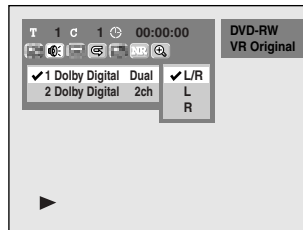

**4** Select a desired audio channel using **▲ / ▼** buttons, then press **ENTER** button. Audio channel will switch.

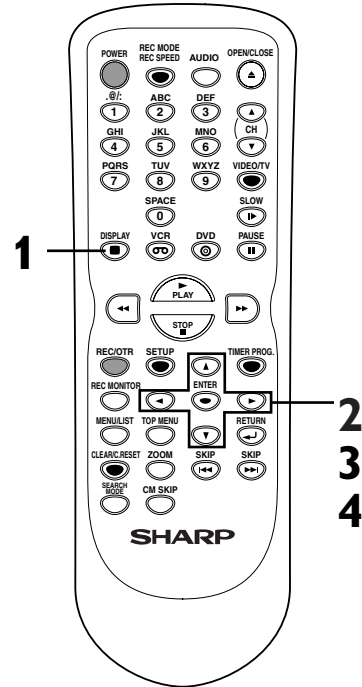

**Note**

- Some discs will only allow you to change the soundtrack from the disc's menu. Press **TOP MENU** button or **MENU / LIST** button to display the disc's menu.
- On DVD-RW discs recorded in VR mode that may have both a main and a sub audio channel, you can switch to main (L), sub audio (R), or a mix of both (L/R).
- This unit **CANNOT** record in both stereo and SAP (Secondary Audio Program) at the same time.



# Playing discs

## Selecting the format of audio and video (cont'd)



When playing Audio CDs or MP3 files you can switch between stereo, just the left channel or just the right channel.

**1**

During playback, press **DIS-PLAY** button.

The display menu will appear.  
Screen:



**2**



Select icon using **◀ / ▶** buttons, then press **ENTER** button.

Audio menu will appear.

**3**

Select a desired audio channel using **▲ / ▼** buttons, then press **ENTER** button.

Audio channel will switch.

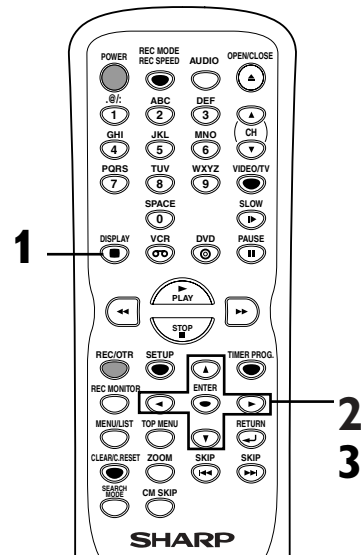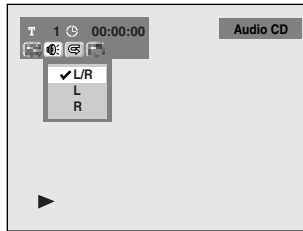

## Switching subtitles




Many DVD Video discs have subtitles in one or more languages. The case usually tells you which subtitle languages are available. You can switch subtitle languages anytime during playback.

**1**

During playback, press **DIS-PLAY** button.

The display menu will appear.  
Screen:

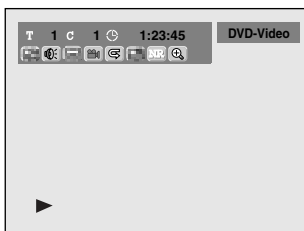

**2**

Select icon using **◀ / ▶** buttons, then press **ENTER** button.


Subtitle menu will appear.

**3**

Select a desired subtitle language using **▲ / ▼** buttons, then press **ENTER** button.

Subtitle will be displayed in the selected language.

When selecting "OFF," subtitle will disappear.

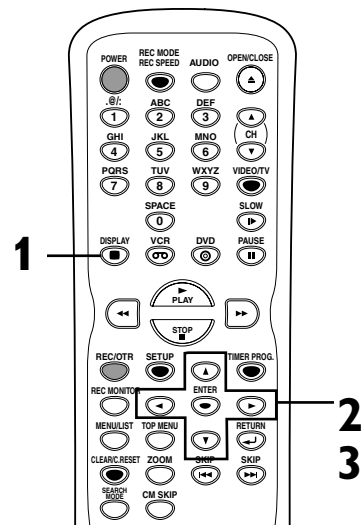

### Note

- Some discs will only allow you to change the subtitle from the disc's menu. Press **TOP MENU** button or **MENU / LIST** button to display the disc's menu.
- If a 4-digit language code appears in the subtitle menu at step 2, please refer to the Language code on page 101.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

# Playing discs

## Selecting the format of audio and video (cont'd)

### Switching camera angles




Some DVD Video discs feature scenes shot from two or more angles, check the case for details: it should be marked with an angle icon if it contains multi-angle scenes.

**1**

During playback, press **DISPLAY** button.

The display menu will appear.

Screen:

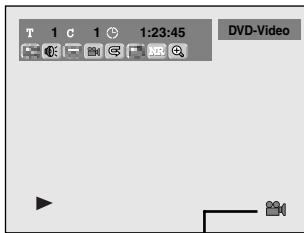


Angle icon appears when a switching camera angle is available.

**2**

Select icon using **◀/▶** buttons, then press **ENTER** button.

Angle will switch each time you press ENTER button.

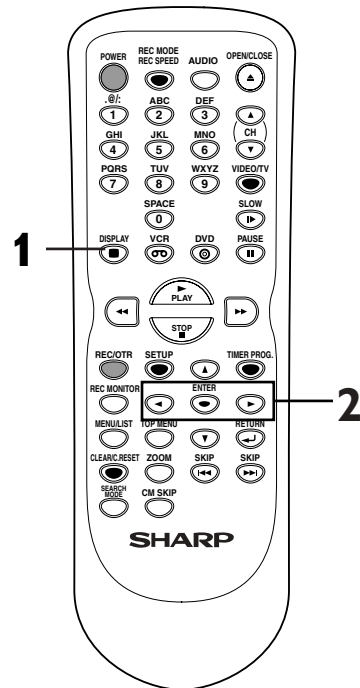

### Reducing block noise



**1**

During playback, press **DISPLAY** button.

The display menu will appear.


Screen:



**2**

Select icon using **◀/▶** buttons, then press **ENTER** button.

Noise Reduction menu will appear.

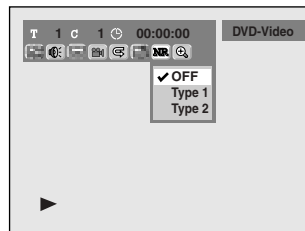


**3**

Select a desired option using **▲/▼** buttons, then press **ENTER** button.

Your setting will be activated.

This function reduces noise in the playback picture. When playing back discs recorded in long time mode such as SLP or SEP mode, select "Type 1" or "Type 2". ("Type 2" is more effective.) When playing back discs with a few noises such as DVD-Video discs, select "OFF".

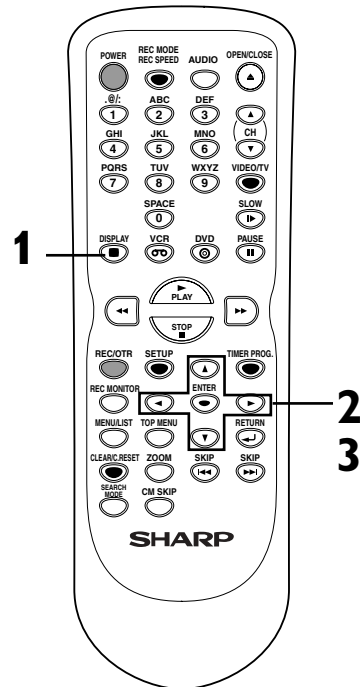


# Editing

## Information on disc editing

### Guide to a title list

Title list allows you to check the titles recorded on the disc easily. You can choose a title to play from this screen and easily edit the titles as you prefer.

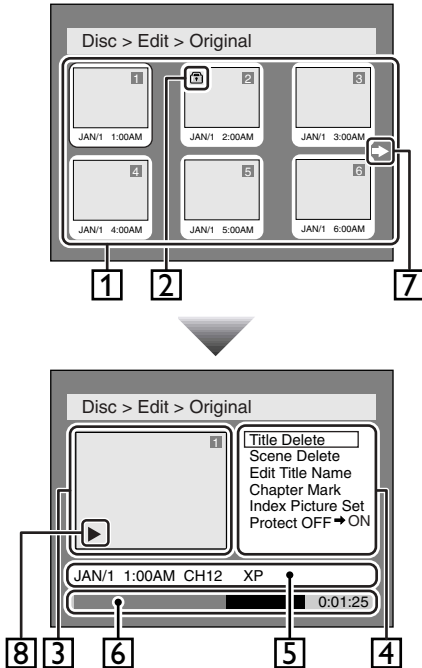

1. Titles recorded on the disc can be selected to edit by pressing ENTER button with the cursor on the title.
2. Protect icon, which appears when the title has been protected.
3. The selected title thumbnails from the title list.
  - The selected title will be played back automatically.
  - The sound will be muted.
4. The menus in here for editing titles as you prefer. The available menus depends on the disc type and the format type.
5. The details of the title, which can be changed to the title name you will edit.
6. Time status bar of the title.
7. The arrow icon, which means the title list includes a next or a previous page. Press ► or ◀ button by following direction of the icon.
8. Playback status of the current disc.

### Editing discs in Video mode

You can edit discs in Video mode for the following items. Be sure that once you edit titles, they will not remain as recorded originally.

- Deleting titles (Refer to page 61)
- Putting names on titles (Refer to pages 62-63)
- Setting or clearing chapter markers (Refer to page 64)

#### Note

- Once a disc is finalized, editing the disc or recording to the disc will not be available. (Except DVD-RW discs in VR mode.)
- A playlist is not available with the DVD-R discs and DVD-RW discs in Video mode.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

# Editing

## Information on disc editing (cont'd)

### Editing discs in VR mode

For discs in VR mode, you can edit from “Original” menu or “Playlist” menu, which is created from the original.

#### Editing original titles

The following items can be used to edit the original titles.

- Deleting titles (Refer to page 65)
- Deleting parts of titles (Refer to pages 66-67)
- Putting names on titles (Refer to pages 67-68)
- Setting or clearing chapter markers (Refer to pages 69-70)
- Setting pictures for thumbnails (Refer to pages 70-71)
- Setting titles to protect (Refer to page 72)
- Releasing titles from protecting (Refer to page 73)

#### Editing playlists

You can create a playlist from original titles, so that you can edit as you prefer without losing original titles.

The following items you can edit with a playlist.

- Deleting titles (Refer to page 74)
- Deleting parts of titles (Refer to pages 75-76)
- Putting names on titles (Refer to pages 76-77)
- Setting or clearing chapter markers (Refer to pages 78-79)
- Setting pictures for thumbnails (Refer to pages 79-80)
- Adding titles to a playlist (Refer to page 81)
- Deleting a playlist (Refer to page 82)

#### Note

- Original titles once edited will not remain as recorded originally. When you want to leave the original as it is, edit the playlist as you prefer.

# Editing

## Editing DVD-RW discs in Video mode

### Deleting titles



You can delete titles which you do not need anymore.


Be sure to know that the titles once deleted cannot be brought back to the disc.

When the last title in the title list in Video mode is deleted, the disc space to record will be increased.

**First:**

**1**

Press **SETUP** button. Select **"DISC"** using **◀/▶** buttons, then press **ENTER** button. DISC menu will appear.

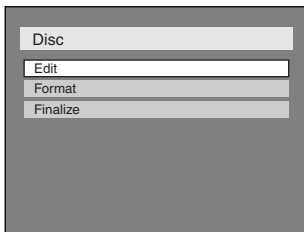


**2**

Select **"Edit"** using **▲/▼** buttons, then press **ENTER** button.

Titlelist will appear.


Screen:

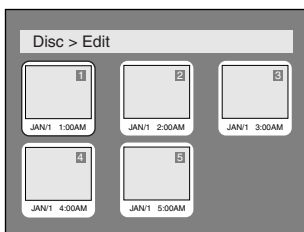

**3**

Select a desired title using **▲/▼/◀/▶** buttons, then press **ENTER** button.


Edit menu will appear.

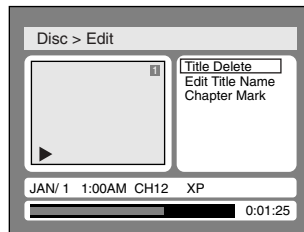

**4**

Select **"Title Delete"** using **▲/▼** buttons, then press **ENTER** button.


Option window will appear.

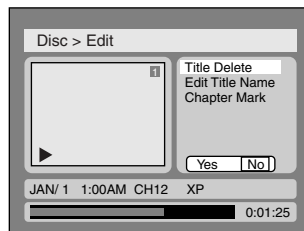

**5**

Select **"Yes"** using **◀/▶** buttons, then press **ENTER** button.


Title will be deleted.

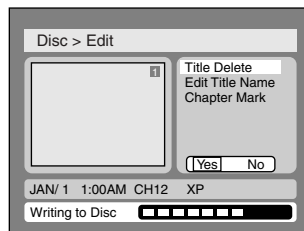

**This operation may take a while to be completed.**

**6**

After writing to disc is completed, press **SETUP** button to exit DISC menu.

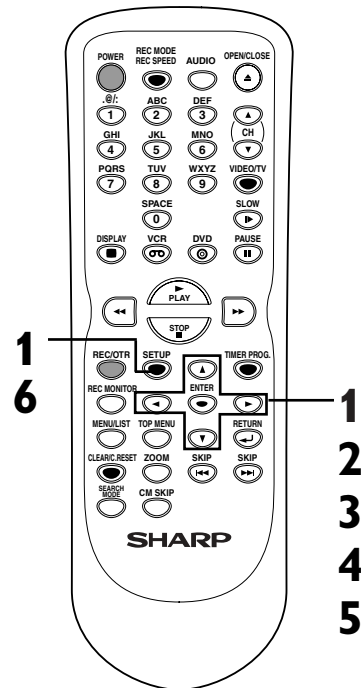

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

# Editing

## Editing DVD-RW discs in Video mode (cont'd)

### Putting names on titles




You can put title names on the titles and change the names from this menu.

The names you put on the titles will be displayed on a titelist.

First:

**1**


Press **SETUP** button. Select **"DISC"** using **◀/▶** buttons, then press **ENTER** button. DISC menu will appear.

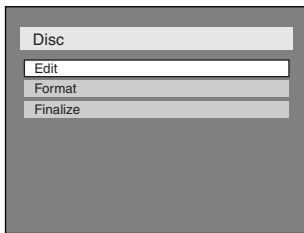

**2**


Select **"Edit"** using **▲/▼** buttons, then press **ENTER** button. Titelist will appear.

Screen:

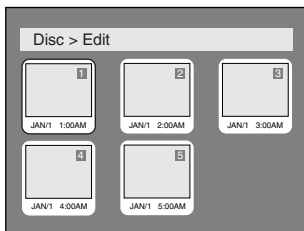


**3**

Select a desired title using **▲/▼/◀/▶** buttons, then press **ENTER** button. Edit menu will appear.

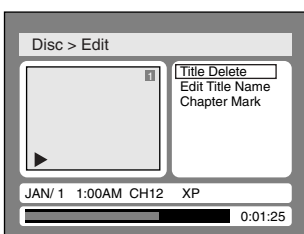

**4**


Select **"Edit Title Name"** using **▲/▼** buttons, then press **ENTER** button. A window for entering a title name will appear.

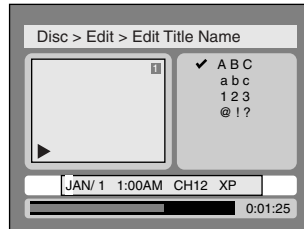

**5**


To enter a title name, follow the steps of "Guide to edit title name" on this page.

character set

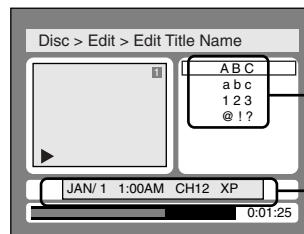

area for entering title names

When you finish entering a title name, press **ENTER** button.

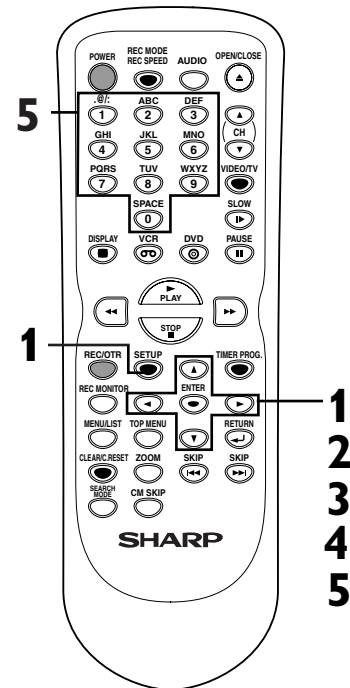

#### [ Guide to edit title name ]

**[Step1]:** Select a desired character set using **▲/▼** buttons, then press **ENTER** button.

**[Step2]:** Press Number buttons following by the list below.

Select	ABC	abc	123	@!?
0	<space>	<space>	0	<space>
1	*1	*1	1	! " # \$ % & ' ( ) * + , - . / : ; < = > ? @ [ ] ^ _ { }
2	ABC	abc	2	-
3	DEF	def	3	-
4	GHI	ghi	4	-
5	JKL	jkl	5	-
6	MNO	mno	6	-
7	PQRS	pqrs	7	-
8	TUV	tuv	8	-
9	WXYZ	wxyz	9	-

\*1 Press **1** button, character set will be changed to the **"@!?"** mode automatically.

- To delete letters, press **CLEAR/C.RESET** button repeatedly. Holding **CLEAR/C.RESET** button to delete all letters.
- To go on to the next entering area for letters, press **▶** button.
- You can enter up to 30 letters.


# Editing

## Editing DVD-RW discs in Video mode (cont'd)

6

Select "Yes" using ◀/▶ buttons, then press ENTER button.


The name you entered will be activated for the title.

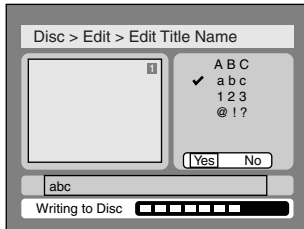

This operation may take a while to be completed.

7

After writing to disc is completed, press SETUP button to exit DISC menu.

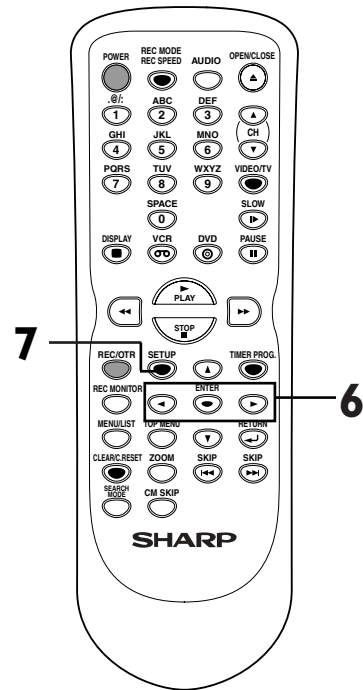

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

# Editing

## Editing DVD-RW discs in Video mode (cont'd)

### Setting or clearing chapter markers




You can put chapter markers in each title. Once a chapter is marked, you can use it for the chapter search feature. You can set chapter markers at a specified time you selected for titles with more than 5 minutes.

**First:**

**1**


Press **SETUP** button. Select **"DISC"** using **◀/▶** buttons, then press **ENTER** button. DISC menu will appear.

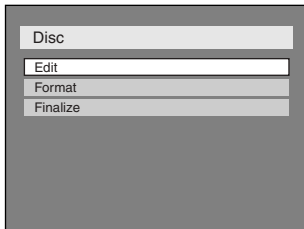

**2**


Select **"Edit"** using **▲/▼** buttons, then press **ENTER** button. Titlelist will appear.

Screen:

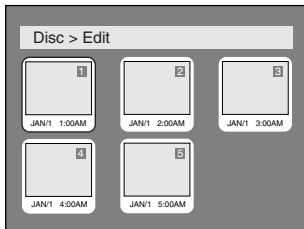

**3**


Select a desired title using **▲/▼/◀/▶** buttons, then press **ENTER** button. Edit menu will appear.

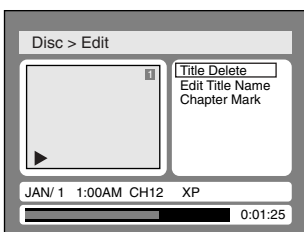

**4**

Select **"Chapter Mark"** using **▲/▼** buttons, then press **ENTER** button.


Option window will appear.

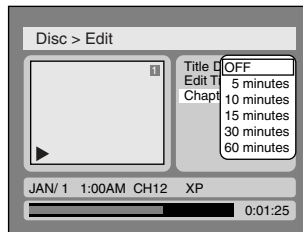

**5**

Select a desired time using **▲/▼** buttons, then press **ENTER** button.

Option window will appear.

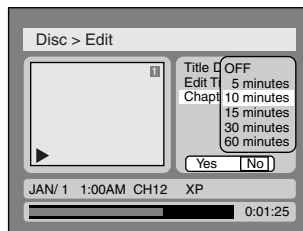


**6**

Select **"Yes"** using **◀/▶** buttons, then press **ENTER** button.

A chapter marker will be added. If you select **"OFF"** at step 5, all the chapter markers will be erased.

**7**

After writing to disc is completed, press **SETUP** button to exit DISC menu.

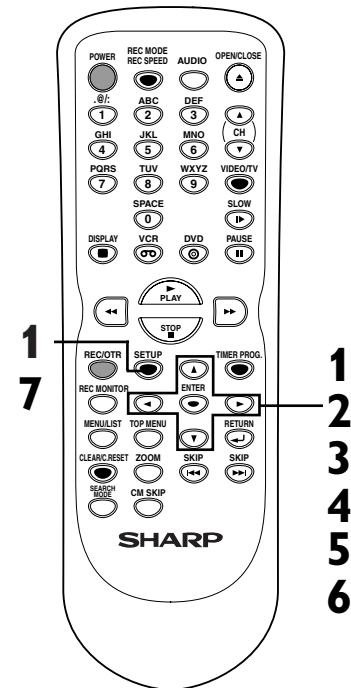

#### Note

- You cannot select a time for putting markers beyond a length of a title.
- The length of chapters may be slightly longer or shorter than the one specified at the step 5.
- A chapter marker may be delayed according to the recording content.



# Editing

## Editing DVD-RW discs in VR mode (Original)

### Deleting titles




When a title is deleted from an original list in VR mode, the disc space to record will be increased. Be advised that the titles once deleted cannot be brought back to the disc.

**First:**


**1**

Press **SETUP** button. Select **"DISC"** using **◀/▶** buttons, then press **ENTER** button. DISC menu will appear.

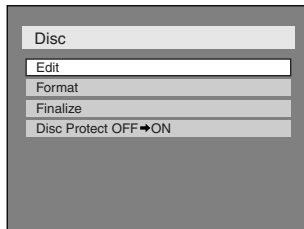

**2**


Select **"Edit"** using **▲/▼** buttons, then press **ENTER** button. Original/PlayList menu will appear. Screen:

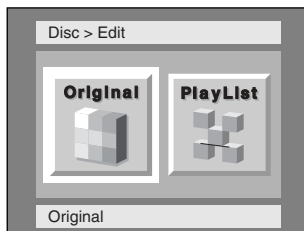

**3**

Select **"Original"** using **◀/▶** buttons, then press **ENTER** button.


Original list will appear.

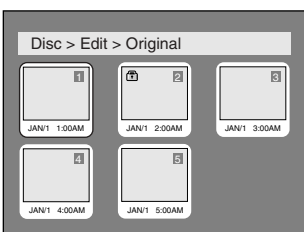

**4**

Select a desired title using **▲/▼/◀/▶** buttons, then press **ENTER** button.


Original menu will appear.

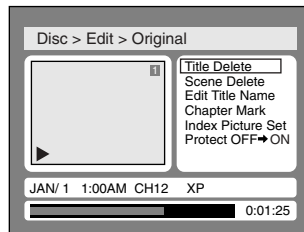

**5**

Select **"Title Delete"** using **▲/▼** buttons, then press **ENTER** button.


Option window will appear.

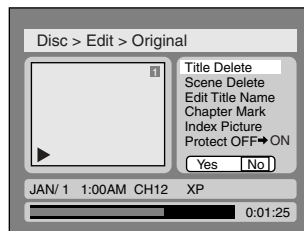

**6**

Select **"Yes"** using **◀/▶** buttons, then press **ENTER** button.


Title will be deleted.

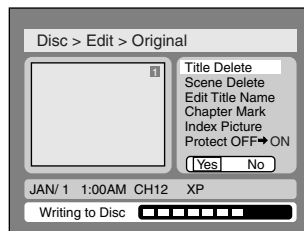

**This operation may take a while to be completed.**

**7**

After writing to disc is completed, press **SETUP** button to exit DISC menu.

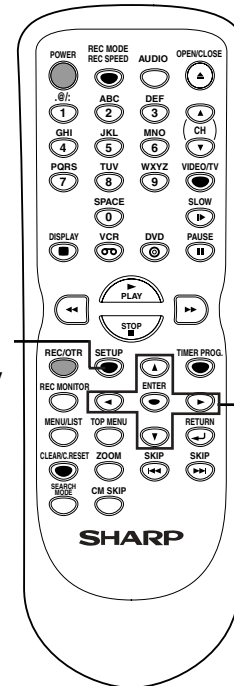

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

# Editing

## Editing DVD-RW discs in VR mode (Original) (cont'd)

### Deleting parts of titles




You can delete part of a title, the disc space to record will be increased.

Be advised that the parts once deleted cannot be brought back to the disc.

First:


**1**

Press **SETUP** button. Select **"DISC"** using **◀/▶** buttons, then press **ENTER** button. DISC menu will appear.

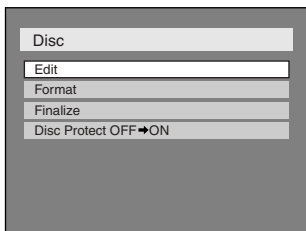


**2**

Select **"Edit"** using **▲/▼** buttons, then press **ENTER** button. Original/PlayList menu will appear. Screen:

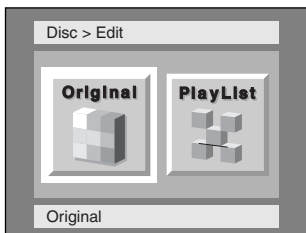

**3**


Select **"Original"** using **◀/▶** buttons, then press **ENTER** button. Original list will appear.

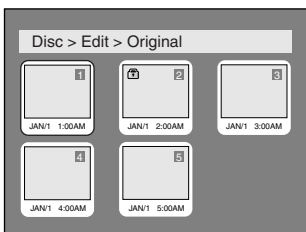

**4**

Select a desired title using **▲/▼/◀/▶** buttons, then press **ENTER** button.


Original menu will appear.

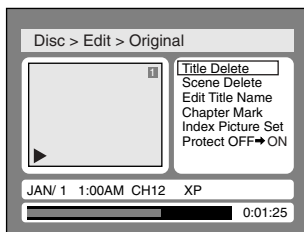

**5**

Select **"Scene Delete"** using **▲/▼** buttons, then press **ENTER** button.

Option window will appear.

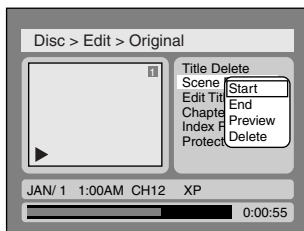


**6**


Use **SKIP ◀◀/▶▶, ◀◀, ▶▶, PLAY ▶, and PAUSE ||** buttons to decide the start point, then press **ENTER**. Then use **SKIP ◀◀/▶▶, ◀◀, ▶▶, PLAY ▶, and PAUSE ||** buttons again to move to the end point, and press **ENTER**. Press **ENTER** again to start the preview.

A cursor will move to "Preview." You can check the preview by pressing **ENTER**.

The bar at the bottom of the screen indicates the total and the elapsed time of the title, and the area selected for deletion will be indicated in red during the preview.

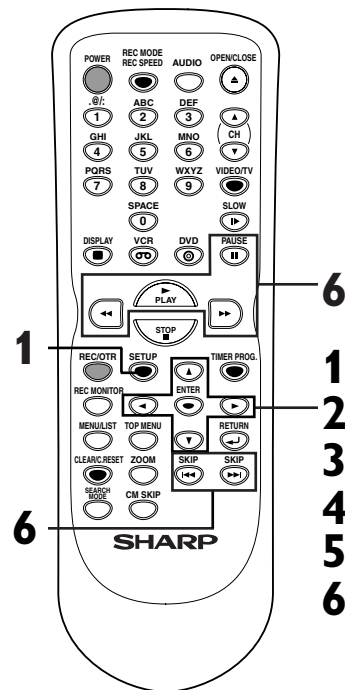

<Preview>

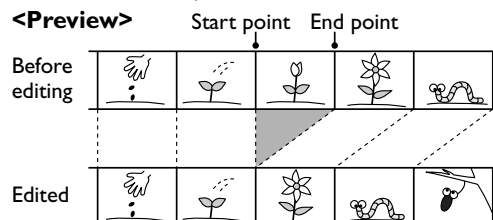

# Editing

## Editing DVD-RW discs in VR mode (Original) (cont'd)

**7**

Select "Delete" using **▲ / ▼** buttons, then press **ENTER** button.

Option window will appear.




**8**

Select "Yes" using **◀ / ▶** buttons, then press **ENTER** button.

Selected area will be deleted, and a chapter marker is created automatically where deletion is performed.


If the thumbnail of the title is in the deleted area, the thumbnail will be set to the first picture of the title. Playback will start from the newly created chapter marker.

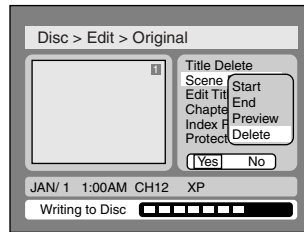

This operation may take a while to be completed.

**9**

After writing to disc is completed, press **SETUP** button to exit **DISC** menu.

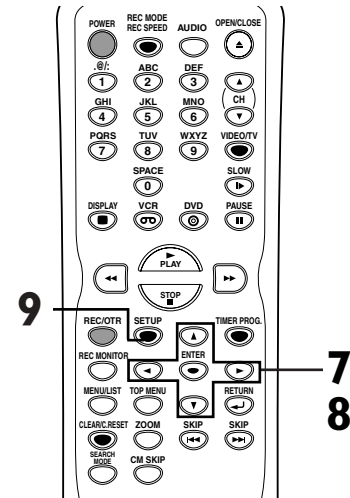

### Note

- You cannot select "Scene Delete" when the number of chapter markers in the original or playlist is more than 900.

## Putting names on titles




You can put title names on the titles and change the names from this menu.

The names you put on the titles will be displayed on a titlelist.

First:

**1**



Press **SETUP** button. Select "DISC" using **◀ / ▶** buttons, then press **ENTER** button. **DISC** menu will appear.

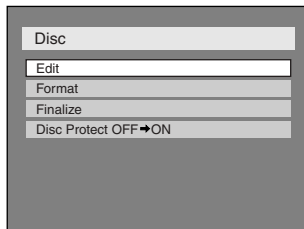

**2**

Select "Edit" using **▲ / ▼** buttons, then press **ENTER** button.

Original/PlayList menu will appear. Screen:

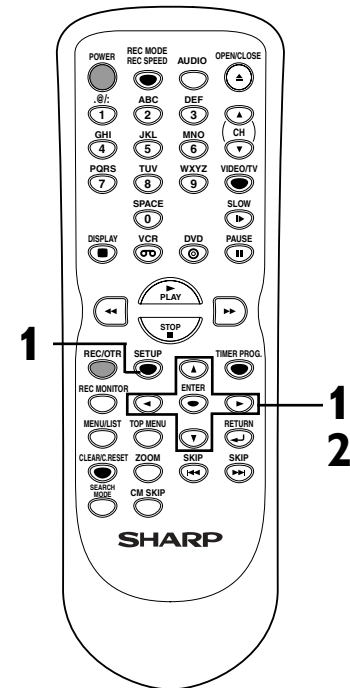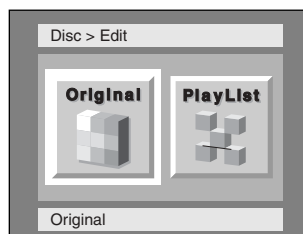

Instructions continue on page 68.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Espanol


# Editing

## Editing DVD-RW discs in VR mode (Original) (cont'd)

**3**

Select "Original" using ◀/▶ buttons, then press ENTER button.


Original list will appear.

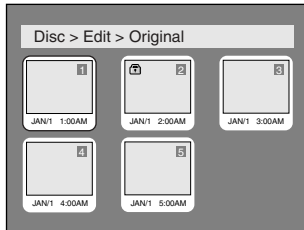

**4**

Select a desired title using ▲/▼/◀/▶ buttons, then press ENTER button.


Original menu will appear.

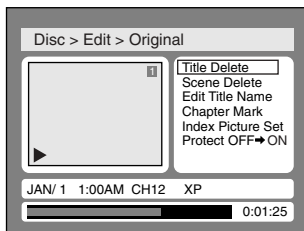

**5**

Select "Edit Title Name" using ▲/▼ buttons, then press ENTER button.


A window for entering a title name will appear.

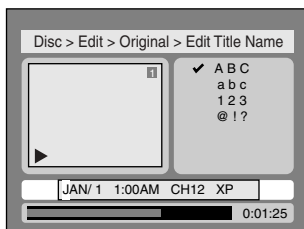

**6**

To enter a title name, follow the steps of "Guide to edit title name" on this page.

character set

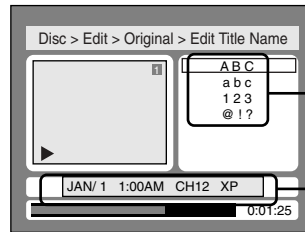


area for entering title names

When you finish entering a title name, press ENTER button.

**7**

Select "Yes" using ◀/▶ buttons, then press ENTER button.


The name you entered will be activated for the title.

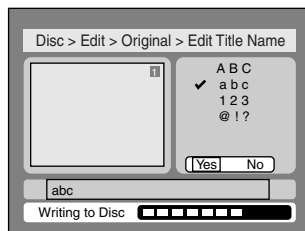

This operation may take a while to be completed.

**8**

After writing to disc is completed, press SETUP button to exit DISC menu.

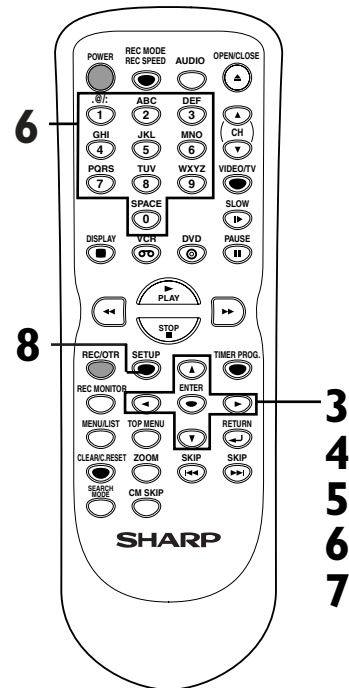

### [ Guide to edit title name ]

**[Step1]:** Select a desired character set using ▲/▼ buttons, then press ENTER button.

**[Step2]:** Press Number buttons following by the list below.

Select Press	ABC	abc	123	@!?
0	<space>	<space>	0	<space>
1	*1	*1	1	!"#\$%&'()*+,-./:;<=>?@[ ]^_{}
2	ABC	abc	2	-
3	DEF	def	3	-
4	GHI	ghi	4	-
5	JKL	jkl	5	-
6	MNO	mno	6	-
7	PQRS	pqrs	7	-
8	TUV	tuv	8	-
9	WXYZ	wxyz	9	-

\*1 Press 1 button, character set will be changed to the "@!?" mode automatically.

- To delete letters, press CLEAR/C.RESET button repeatedly. Holding CLEAR/C.RESET button to delete all letters.
- To go on to the next entering area for letters, press ◀ button.
- You can enter up to 30 letters.

# Editing

## Editing DVD-RW discs in VR mode (Original) (cont'd)

### Setting or clearing chapter markers




You can put chapter markers in each title. Once a chapter is marked, you can use it for the chapter search feature.

You can put a chapter marker anywhere you want.

When the number of chapter markers in the original list comes to 999 in total, you cannot add any more chapter markers.


**First:**

**1** Press **SETUP** button. Select **"DISC"** using **◀/▶** buttons, then press **ENTER** button. DISC menu will appear.

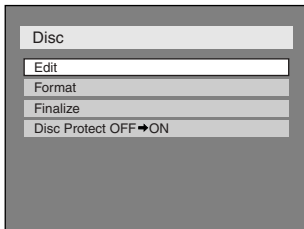


**2** Select **"Edit"** using **▲/▼** buttons, then press **ENTER** button. Original/PlayList menu will appear.


Screen:

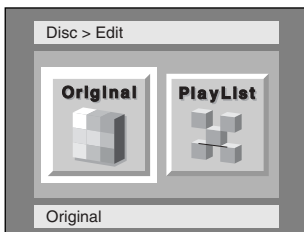


**3** Select **"Original"** using **◀/▶** buttons, then press **ENTER** button. Original list will appear.

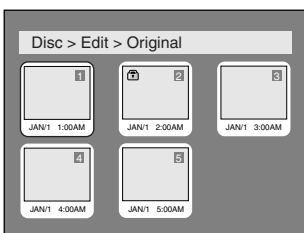

**4** Select a desired title using **▲/▼/◀/▶** buttons, then press **ENTER** button. Original menu will appear.

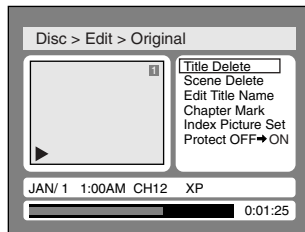



**5** Select **"Chapter Mark"** using **▲/▼** buttons, then press **ENTER** button. Option window will appear.

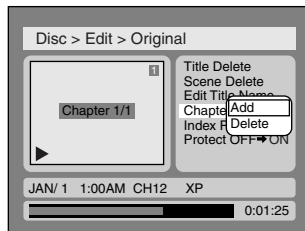

**6** Use **SKIP** **◀◀/▶▶**, **◀▶**, **▶▶**, **PLAY** **▶**, and **PAUSE** **||** buttons to decide the point at which you will create a new chapter marker. Or, use **SKIP** **◀◀/▶▶** to decide a chapter marker that you will delete. Select **"Add"** or **"Delete"** accordingly using **▲/▼** buttons, then press **ENTER** button.

Option window will appear.

<Add>:

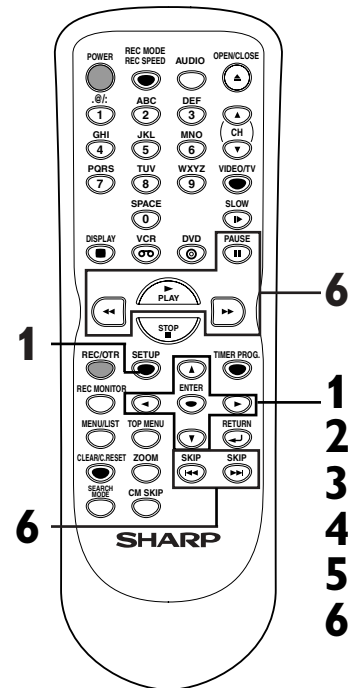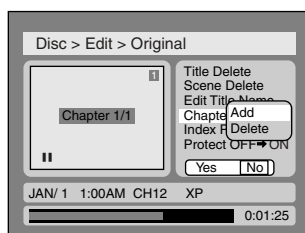

Instructions continue on page 70.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions


Others

Español

# Editing

## Editing DVD-RW discs in VR mode (Original) (cont'd)


<Delete>:

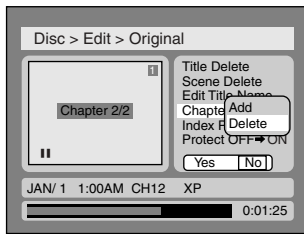

**This operation may take a while to be completed.**

The chapter marker which you selected will be deleted.

<Delete>:

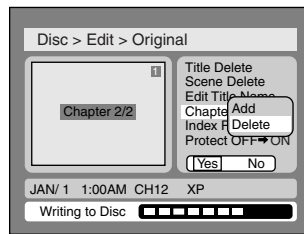


**This operation may take a while to be completed.**

- You cannot delete the first chapter marker of each title.

**7**


Select "Yes" using **◀/▶** buttons, then press **ENTER** button. When you select "Add" at step 6, a new chapter marker will be created at the point you have decided. When you select "Delete" at step 6, the chapter marker you have selected will be deleted.

<Add>:

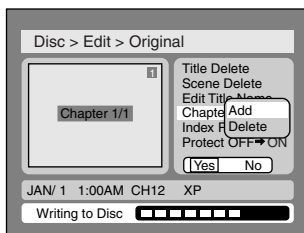

**8**

After writing to disc is completed, press **SETUP** button to exit **DISC** menu.

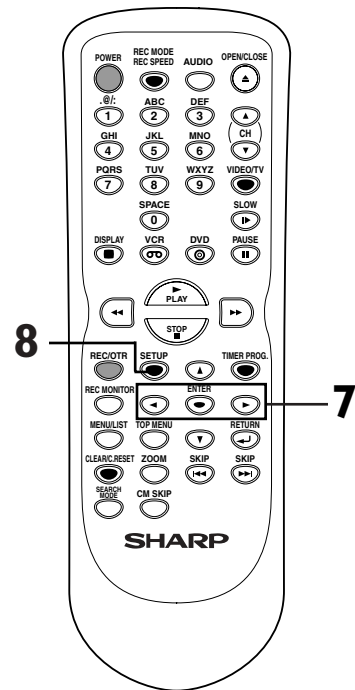

## Setting pictures for thumbnails




You can set a picture to each title for a thumbnail. It helps you to remember the contents of the title you are playing. The beginning picture has been selected as the default.

First:

**1**

Press **SETUP** button. Select "DISC" using **◀/▶** buttons, then press **ENTER** button. **DISC** menu will appear.


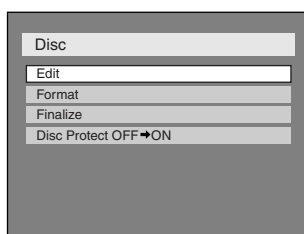


**2**

Select "Edit" using **▲/▼** buttons, then press **ENTER** button.

Original/PlayList menu will appear.

Screen:

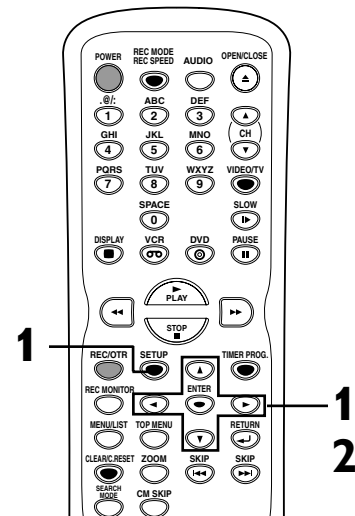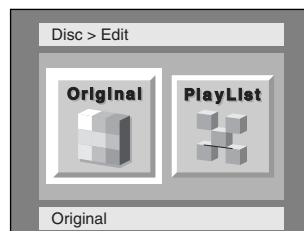

### Note

- If a selected picture for a thumbnail is deleted by deleting a part of a title, a default picture will be selected.


# Editing

## Editing DVD-RW discs in VR mode (Original) (cont'd)

**3**

Select "Original" using ◀/▶ buttons, then press ENTER button.


Original list will appear.

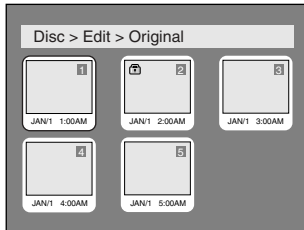

**4**

Select a desired title using ▲ / ▼ / ◀/▶ buttons, then press ENTER button.


Original menu will appear.

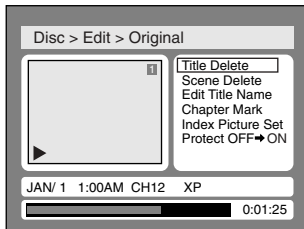

**5**

Select "Index Picture Set" using ▲ / ▼ buttons. Use SKIP ◀◀ / ▶▶, ◀◀, ▶▶, PLAY ▶, and PAUSE II buttons to decide the picture you want to select as a thumbnail. Then press ENTER button.


Option window will appear.

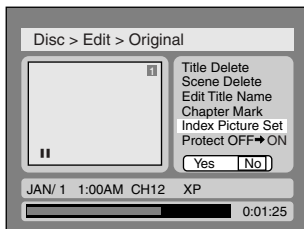

**6**

Select "Yes" using ◀/▶ buttons, then press ENTER button.


A picture for thumbnail will be set.

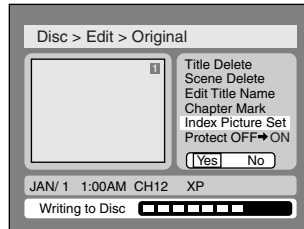

This operation may take a while to be completed.

**7**

After writing to disc is completed, press SETUP button to exit DISC menu.

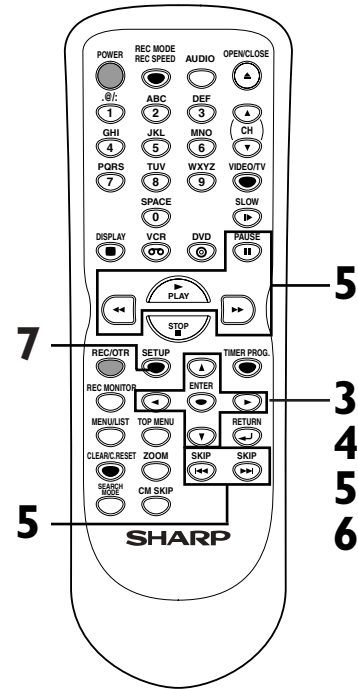

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Espanol

# Editing

## Editing DVD-RW discs in VR mode (Original) (cont'd)

### Setting titles to protect




To prevent accidental editing or erasing the titles, you can protect them from the original menu.

**First:**


**1**

Press **SETUP** button. Select **"DISC"** using **◀/▶** buttons, then press **ENTER** button. DISC menu will appear.

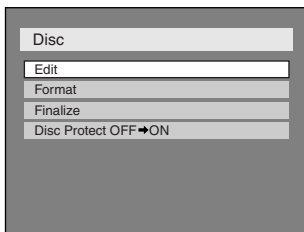


**2**

Select **"Edit"** using **▲/▼** buttons, then press **ENTER** button. Original/PlayList menu will appear. Screen:

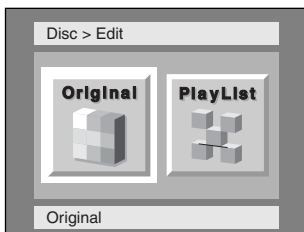


**3**

Select **"Original"** using **◀/▶** buttons, then press **ENTER** button. Original list will appear.

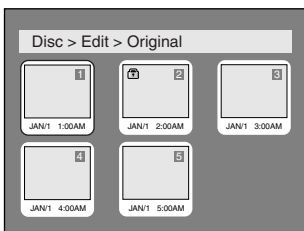


**4**

Select a desired title using **▲/▼/◀/▶** buttons, then press **ENTER** button. Original menu will appear.

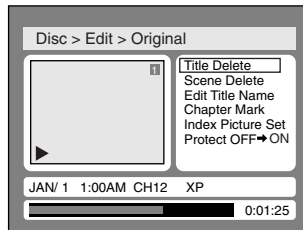


**5**

Select **"Protect OFF → ON"** using **▲/▼** buttons, then press **ENTER** button. Option window will appear.

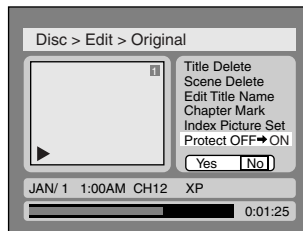

**6**

Select **"Yes"** using **◀/▶** buttons, then press **ENTER** button.

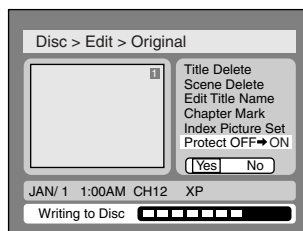


**This operation may take a while to be completed.**

**7**

After writing to disc is completed, press **SETUP** button to exit DISC menu.

**To protect a whole disc:** Select **"Disc Protect"** from Disc menu, then select **"Yes"**. Refer to **"Setting a disc to protect"** on page 42.

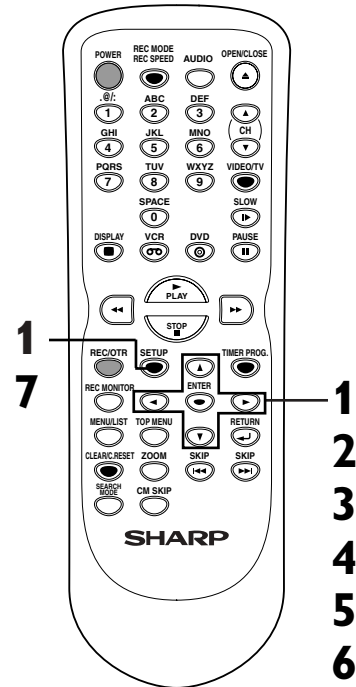

#### Note

- The protected title will be marked with a key icon in the original list.



# Editing

## Editing DVD-RW discs in VR mode (Original) (cont'd)

### Releasing titles from protecting




You are allowed to release the titles protecting feature once protected.

**First:**

**1**


Press **SETUP** button. Select **"DISC"** using **◀/▶** buttons, then press **ENTER** button. DISC menu will appear.

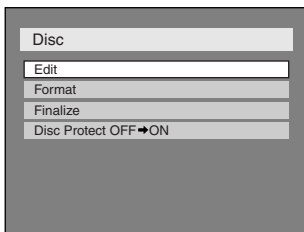

**2**

Select **"Edit"** using **▲/▼** buttons, then press **ENTER** button.


Original/PlayList menu will appear.  
Screen:

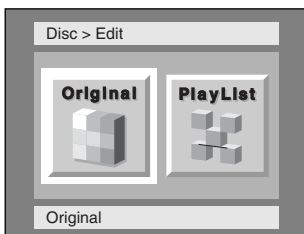

**3**

Select **"Original"** using **◀/▶** buttons, then press **ENTER** button.


Original list will appear.

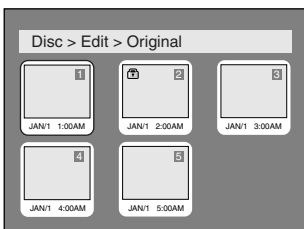

**4**

Select a desired title using **▲/▼/◀/▶** buttons, then press **ENTER** button.


Original menu will appear.

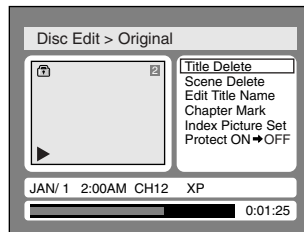

**5**

Select **"Protect ON → OFF"** using **▲/▼** buttons, then press **ENTER** button.


Option window will appear.

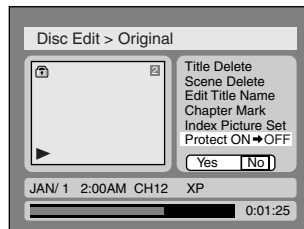

**6**

Select **"Yes"** using **◀/▶** buttons, then press **ENTER** button.


The key icon will disappear from the title in the original list.

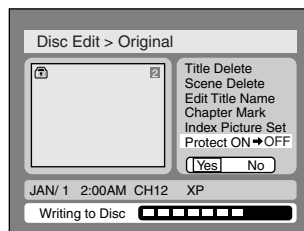

**This operation may take a while to be completed.**

**7**

After writing to disc is completed, press **SETUP** button to exit DISC menu.

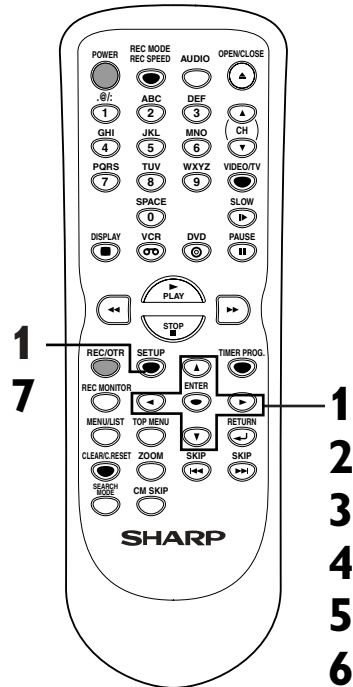

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Changing the SETUP menu

VCR functions

Others

Español

# Editing

## Editing DVD-RW discs in VR mode (Playlist)

### Deleting titles




In VR mode, even when a title is deleted from a Playlist, the original title will remain in an Original list. The disc space to record will not be increased.

First:


1

Press **SETUP** button. Select **"DISC"** using **◀/▶** buttons, then press **ENTER** button. DISC menu will appear.

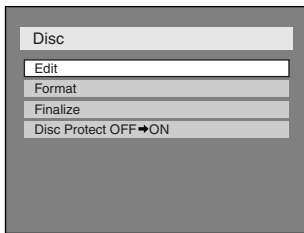


2

Select **"Edit"** using **▲/▼** buttons, then press **ENTER** button. Original/PlayList menu will appear. Screen:

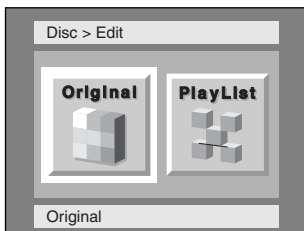


3

Select **"PlayList"** using **◀/▶** buttons, then press **ENTER** button. Playlist will appear.

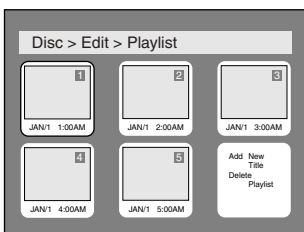


4

Select a desired title using **▲/▼/◀/▶** buttons, then press **ENTER** button. Playlist menu will appear.

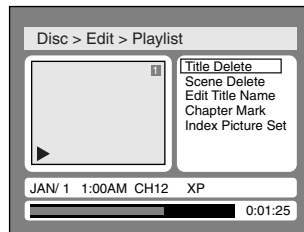


5

Select **"Title Delete"** using **▲/▼** buttons, then press **ENTER** button. Option window will appear.

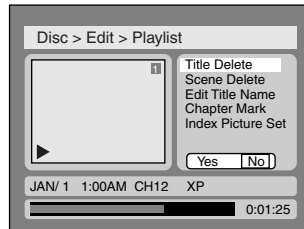

6


Select **"Yes"** using **◀/▶** buttons, then press **ENTER** button. Title will be deleted.

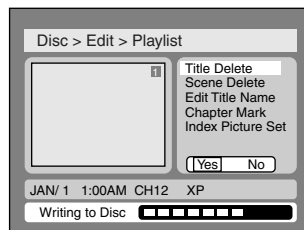

**This operation may take a while to be completed.**

7

After writing to disc is completed, press **SETUP** button to exit DISC menu.

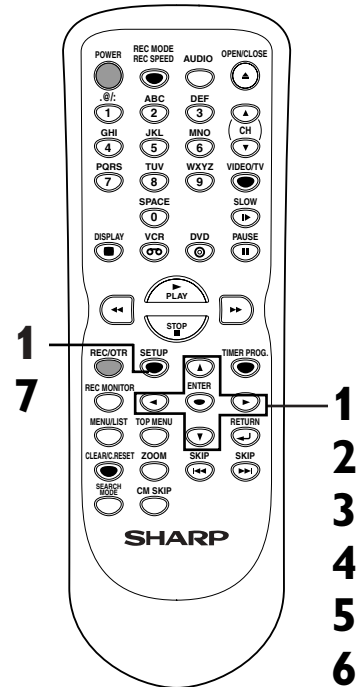

# Editing

## Editing DVD-RW discs in VR mode (Playlist) (cont'd)


### Deleting parts of titles




You can delete a specific part of a title. Even when a title is deleted from the playlist, the original title will remain. The disc space to record will not be increased.

**First:**


**1** Press **SETUP** button. Select **"DISC"** using **◀/▶** buttons, then press **ENTER** button. DISC menu will appear.

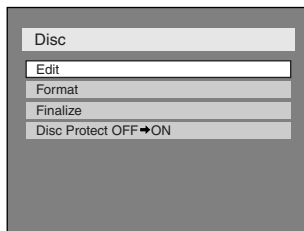


**2** Select **"Edit"** using **▲/▼** buttons, then press **ENTER** button. Original/PlayList menu will appear. Screen:

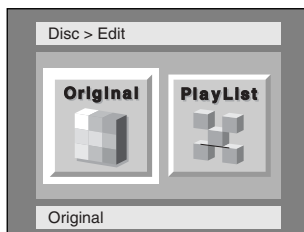


**3** Select **"PlayList"** using **◀/▶** buttons, then press **ENTER** button. Playlist will appear.

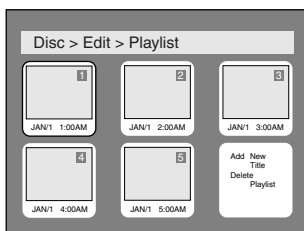



**4** Select a desired title using **▲/▼/◀/▶** buttons, then press **ENTER** button. Playlist menu will appear.

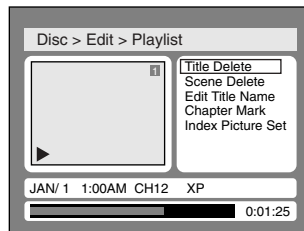

**5** Select **"Scene Delete"** using **▲/▼** buttons, then press **ENTER** button. Option window will appear.

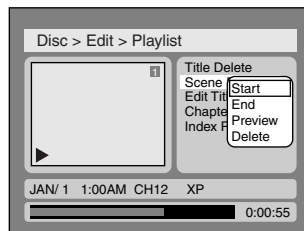

**6** Use **SKIP** **◀◀/▶▶**, **◀▶, ▶▶**, **PLAY ▶**, and **PAUSE** **||** buttons to decide the start point, then press **ENTER**. Then use **SKIP** **◀◀/▶▶**, **◀▶, ▶▶**, **PLAY ▶**, and **PAUSE** **||** buttons again to move to the end point, and press **ENTER**. Press **ENTER** again to start the preview. A cursor will move to "Preview." You can check the preview by pressing **ENTER**. The bar at the bottom of the screen indicates the total and the elapsed time of the title, and the area selected for deletion will be indicated in red during the preview.

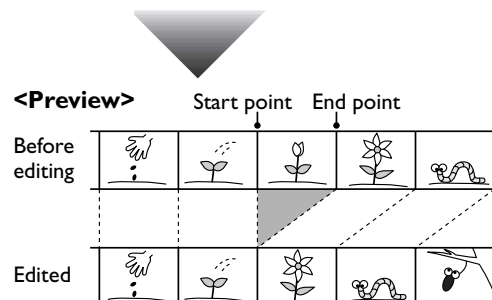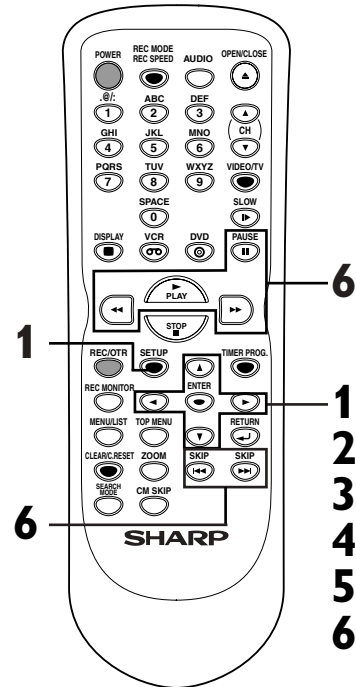

Instructions continue on page 76.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español


# Editing

## Editing DVD-RW discs in VR mode (Playlist) (cont'd)


7

Select "Delete" using ▲ / ▼ buttons, then press ENTER button.

Option window will appear.

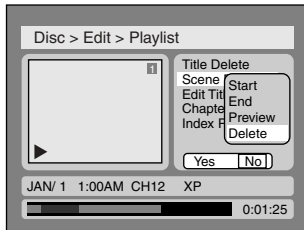

Part of a title will be deleted.

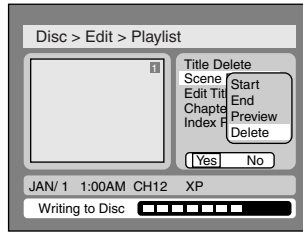


This operation may take a while to be completed.

9

After writing to disc is completed, press SETUP button to exit DISC menu.

8

Select "Yes" using ◀ / ▶ buttons, then press ENTER button.

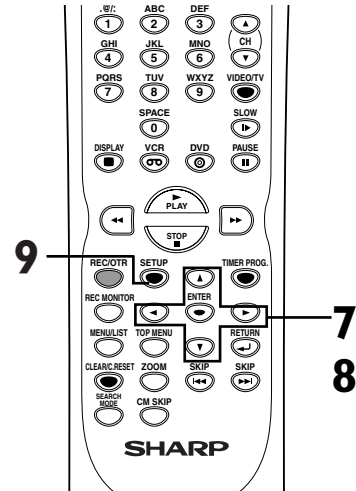

### Note

- You cannot select "Scene Delete" when the number of chapter markers in the original or playlist is more than 900.

## Putting names on titles




You can put title names on the titles and change the names from this menu.

The names you put on the titles will be displayed on a titlelist.


First:

1

Press SETUP button. Select "DISC" using ◀ / ▶ buttons, then press ENTER button. DISC menu will appear.

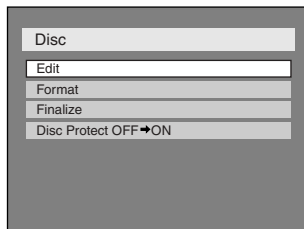


Original/PlayList menu will appear. Screen:

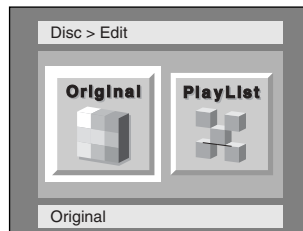


3

Select "PlayList" using ◀ / ▶ buttons, then press ENTER button.

Playlist will appear.

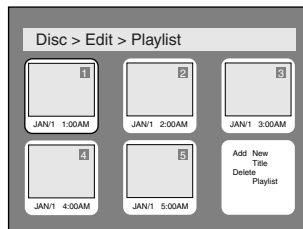

1

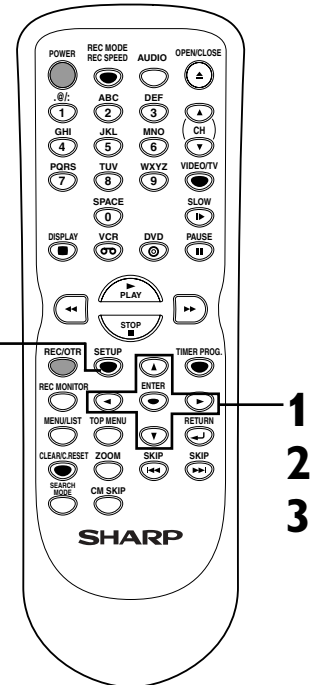

2


Select "Edit" using ▲ / ▼ buttons, then press ENTER button.

# Editing

## Editing DVD-RW discs in VR mode (Playlist) (cont'd)


4

Select a desired title using ▲ / ▼ / ◀ / ▶ buttons, then press ENTER button. Playlist menu will appear.

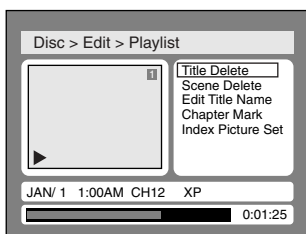


5

Select "Edit Title Name" using ▲ / ▼ buttons, then press ENTER button. A window for entering a title name will appear.

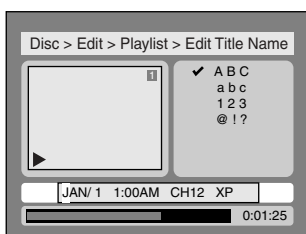

6

To enter a title name, follow the steps of "Guide to edit title name" on this page.

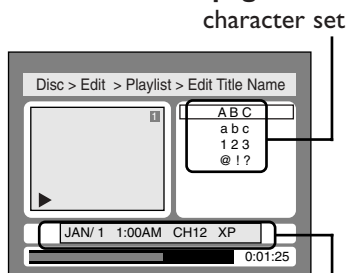


area for entering title names

When you finish entering a title name, press ENTER button.

7


Select "Yes" using ◀ / ▶ buttons, then press ENTER button. The name you entered will be activated for the title.

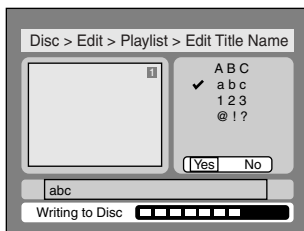

This operation may take a while to be completed.

8

After writing to disc is completed, press SETUP to exit DISC menu.

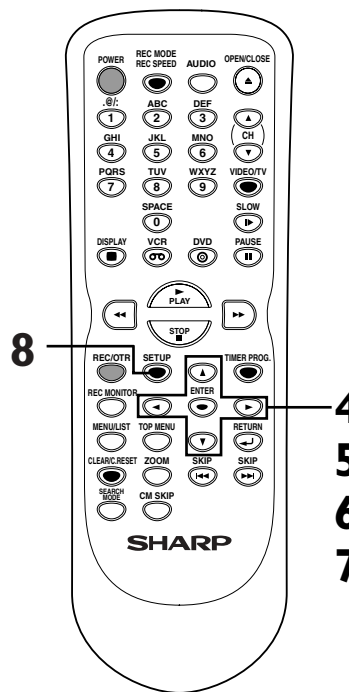

### [ Guide to edit title name ]

[Step1]: Select a desired character set using ▲/▼ buttons, then press ENTER button.

A B C  
 a b c  
 1 2 3  
 @ ! ?

[Step2]: Press Number buttons following by the list below.

Select	ABC	abc	123	@ ! ?
0	<space>	<space>	0	<space>
1	*1	*1	1	! " # \$ % & ' ( ) * + , - . / : ; < = > ? @ [ ] ^ _ { }
2	ABC	abc	2	-
3	DEF	def	3	-
4	GHI	ghi	4	-
5	JKL	jkl	5	-
6	MNO	mno	6	-
7	PQRS	pqrs	7	-
8	TUV	tuv	8	-
9	WXYZ	wxyz	9	-

\*1 Press 1 button, character set will be changed to the "@!?" mode automatically.

- To delete letters, press CLEAR/C.RESET button repeatedly. Holding CLEAR/C.RESET button to delete all letters.
- To go on to the next entering area for letters, press ▶ button.
- You can enter up to 30 letters.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

# Editing

## Editing DVD-RW discs in VR mode (Playlist) (cont'd)

### Setting or clearing chapter markers



You can put chapter markers in each title. Once a chapter is marked, you can use it for the chapter search feature.


You can put a chapter marker anywhere you want.

When the number of chapter markers in the playlist comes to 999 in total, you cannot add any more chapter markers.

First:

**1**


Press **SETUP** button. Select **"DISC"** using **◀/▶** buttons, then press **ENTER** button. DISC menu will appear.

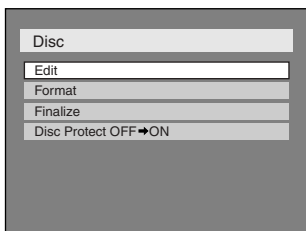

**2**

Select **"Edit"** using **▲/▼** buttons, then press **ENTER** button.


Original/PlayList menu will appear. Screen:

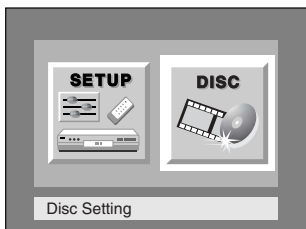

**3**


Select **"PlayList"** using **◀/▶** buttons, then press **ENTER** button.

Playlist will appear.

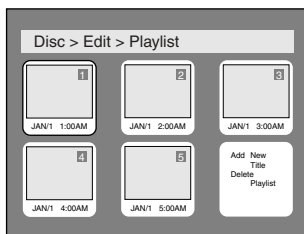


**4**

Select a desired title using **▲/▼/◀/▶** buttons, then press **ENTER** button. Playlist menu will appear.

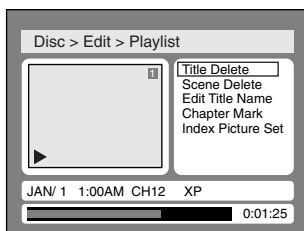

**5**



Select **"Chapter Mark"** using **▲/▼** buttons, then press **ENTER** button. Option window will appear.

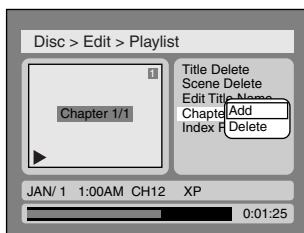

**6**

Use **SKIP** **◀◀/▶▶**, **◀▶/▶▶**, **PLAY** **▶**, and **PAUSE** **||** buttons to decide the point at which you will create a new chapter marker. Or, use **SKIP** **◀◀/▶▶** to decide a chapter marker that you will delete. Select **"Add"** or **"Delete"** accordingly using **▲/▼** buttons, then press **ENTER** button. Option window will appear.


<Add>:

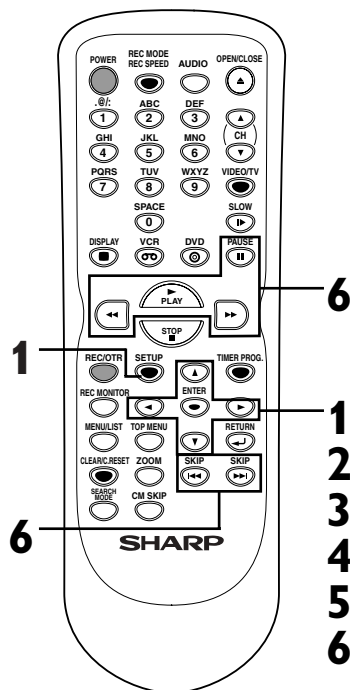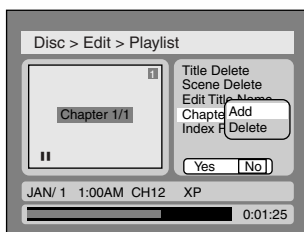

# Editing

## Editing DVD-RW discs in VR mode (Playlist) (cont'd)

<Delete>:

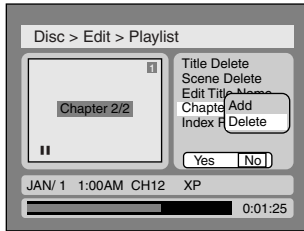


- You cannot delete the first chapter of each title.

**7**

Select "Yes" using ◀ / ▶ buttons, then press ENTER button. When you select "Add" at step 6, a new chapter marker will be created at the point you have decided. When you select "Delete" at step 6, the chapter marker you have selected will be deleted.


<Add>:

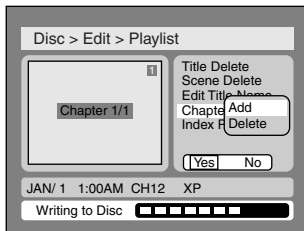

This operation may take a while to be completed.

The chapter marker which you selected will be deleted.


<Delete>:

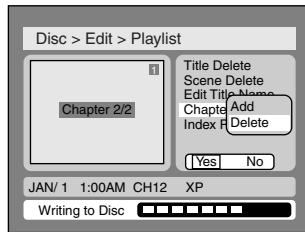

This operation may take a while to be completed.

**8**

After writing to disc is completed, press SETUP button to exit DISC menu.

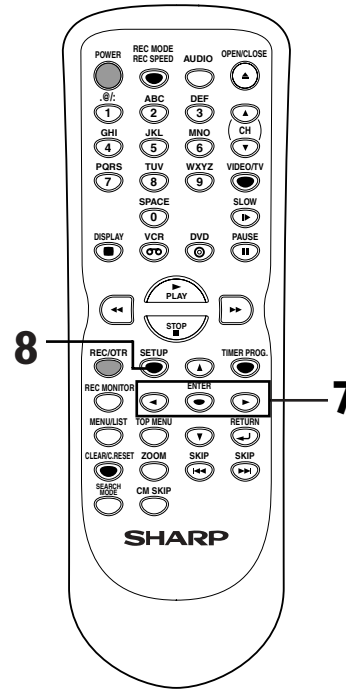

### Setting pictures for thumbnails




You can set a picture to each title for a thumbnail. It helps you to remember the contents of the title you are playing. The beginning picture has been selected as the default.

First:

**1**



Press SETUP button. Select "DISC" using ◀ / ▶ buttons, then press ENTER button. DISC menu will appear.

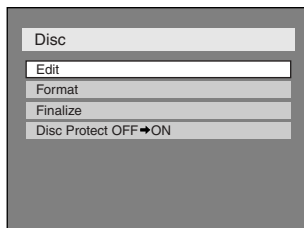

**2**

Select "Edit" using ▲ / ▼ buttons, then press ENTER button.

Original/PlayList menu will appear. Screen:

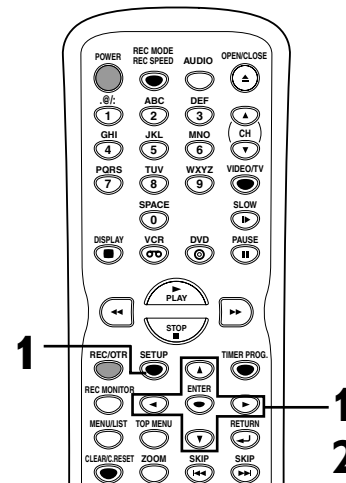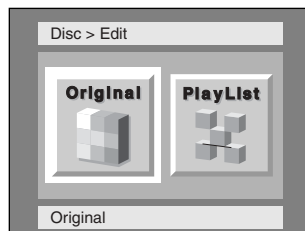

#### Note

- If a selected picture for a thumbnail is deleted by deleting a part of a title, a default picture will be selected.

Instructions continue on page 80.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español


# Editing

## Editing DVD-RW discs in VR mode (Playlist) (cont'd)

**3**

Select "PlayList" using ◀ / ▶ buttons, then press ENTER button.


Playlist will appear.

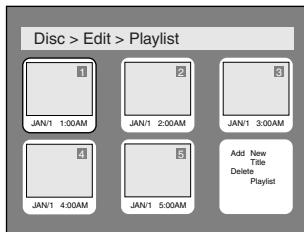

**4**

Select a desired title using ▲ / ▼ / ◀ / ▶ buttons, then press ENTER button.


Playlist menu will appear.

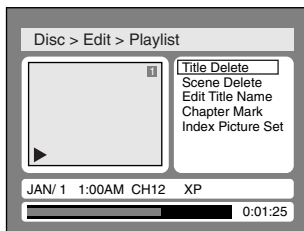

**5**

Select "Index Picture Set" using ▲ / ▼ buttons. Use SKIP ◀◀ / ▶▶, ◀◀, ▶▶, PLAY ▶, and PAUSE ⏸ buttons to decide the picture you want to select as a thumbnail. Then press ENTER button.


Option window will appear.

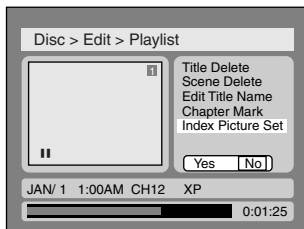

**6**

Select "Yes" using ◀ / ▶ buttons, then press ENTER button.


A picture for thumbnail will be set.

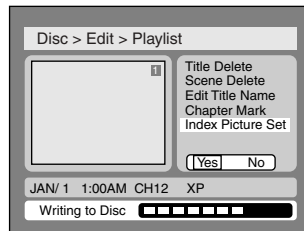

This operation may take a while to be completed.

**7**

After writing to disc is completed, press SETUP button to exit DISC menu.

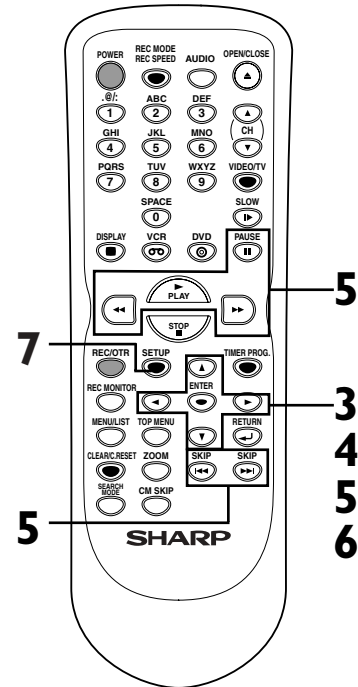



# Editing

## Editing DVD-RW discs in VR mode (Playlist) (cont'd)

### Adding titles to a Playlist




You can add or delete a title in the playlist as you prefer. You can add titles to a Playlist up to 99.

First:


1

Press **SETUP** button. Select **"DISC"** using **◀/▶** buttons, then press **ENTER** button. DISC menu will appear.

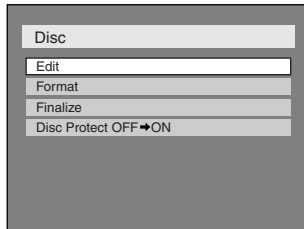


2

Select **"Edit"** using **▲/▼** buttons, then press **ENTER** button. Original/PlayList menu will appear. Screen:

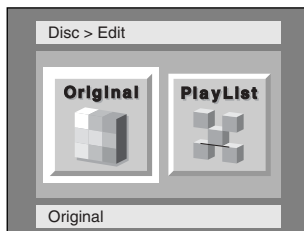

3

Select **"PlayList"** using **◀/▶** buttons, then press **ENTER** button. Playlist will appear.

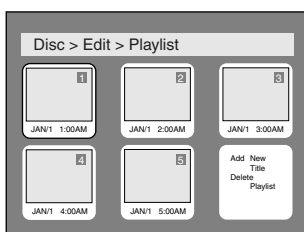

4

Select **"Add New Title"** using **▲/▼/◀/▶** buttons, then press **ENTER** button. Original list will appear.



5

Select a desired title using **▲/▼/◀/▶** buttons, then press **ENTER** button.




6

After writing to disc is completed, press **SETUP** button to exit DISC menu.

To delete a title from Playlist, refer to "Deleting titles" on page 74.

To delete a Playlist, refer to "Deleting a Playlist" on page 82.

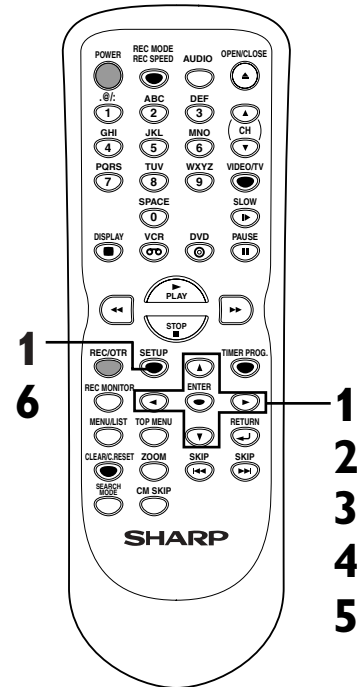

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

# Editing

## Editing DVD-RW discs in VR mode (Playlist) (cont'd)

### Deleting a Playlist




A Playlist can be deleted if no longer needed.

First:

1


Press **SETUP** button. Select **"DISC"** using **◀/▶** buttons, then press **ENTER** button. DISC menu will appear.

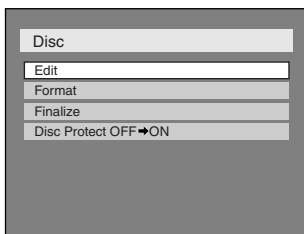

2

Select **"Edit"** using **▲/▼** buttons, then press **ENTER** button.


Original/PlayList menu will appear.  
Screen:

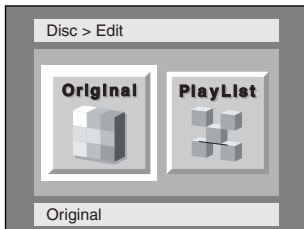

3

Select **"PlayList"** using **◀/▶** buttons, then press **ENTER** button.


Playlist will appear.

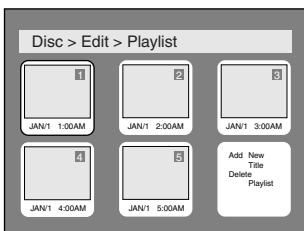

4

Select **"Delete Playlist"** using **▲/▼/◀/▶** buttons, then press **ENTER** button.

Option window will appear.

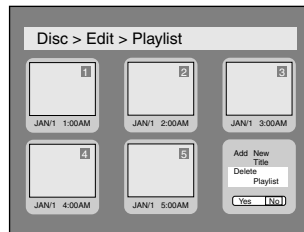


5

Select **"Yes"** using **◀/▶** buttons, then press **ENTER** button.

A Playlist will be erased.

The unit will be in stop mode after exiting the DISC menu automatically.

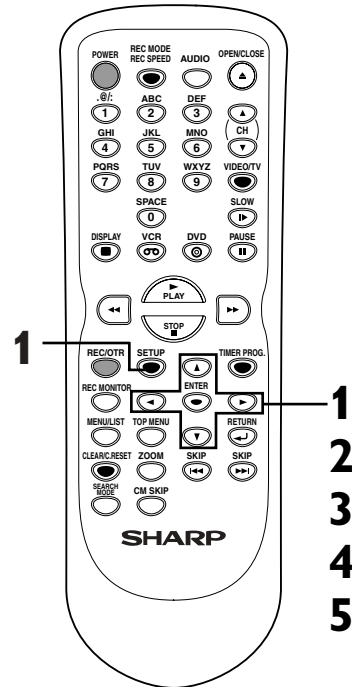

#### Note

- Deleting a Playlist will not increase the available recording time on disc.

# Editing

## Editing DVD-R discs

### Deleting titles




You can delete titles which you do not need, however the disc space to record on the disc will not be changed.

Be aware to know that the titles once deleted cannot be brought back to the disc.

**First:**

**1**

Press **SETUP** button. Select **"DISC"** using **◀ / ▶** buttons, then press **ENTER** button. DISC menu will appear.

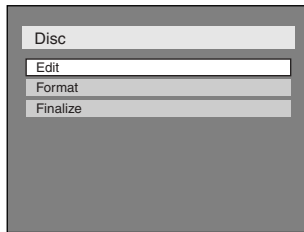


**2**

Select **"Edit"** using **▲ / ▼** buttons, then press **ENTER** button.

Titlelist will appear.


Screen:

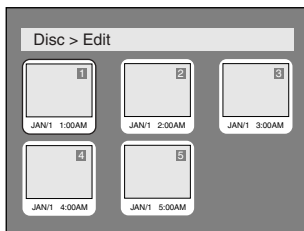

**3**

Select a desired title using **▲ / ▼ / ◀ / ▶** buttons, then press **ENTER** button.

Edit menu will appear.

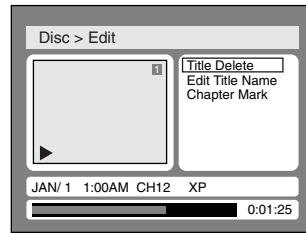


You cannot select "Chapter Mark".

**4**

Select **"Title Delete"** using **▲ / ▼** buttons, then press **ENTER** button.


Option window will appear.

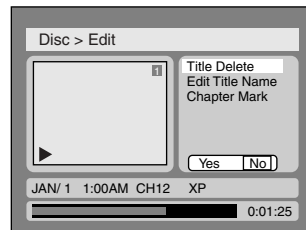

**5**

Select **"Yes"** using **◀ / ▶** buttons, then press **ENTER** button.


Title will be deleted.

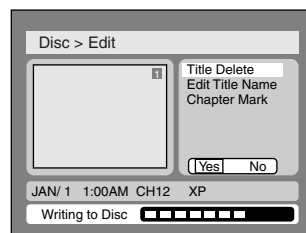

**This operation may take a while to be completed.**

**6**

After writing to disc is completed, press **SETUP** button to exit DISC menu.

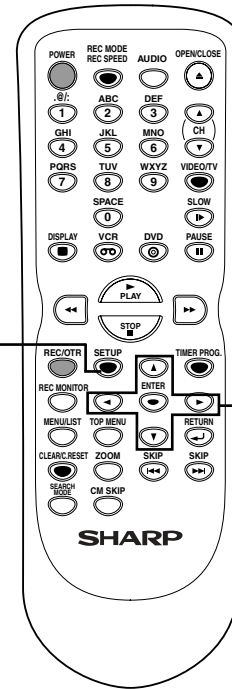

Before you start

Connections

Getting started

Recording

Playing discs

**Editing**

Change the SETUP menu

VCR functions

Others

Español

# Editing

## Editing DVD-R discs (cont'd)

### Putting names on titles



You can put names on the titles and change the names from this menu.


The names you put on the titles will be displayed on a titelist.

First:

**1**

Press **SETUP** button. Select **"DISC"** using **◀/▶** buttons, then press **ENTER** button.

DISC menu will appear.

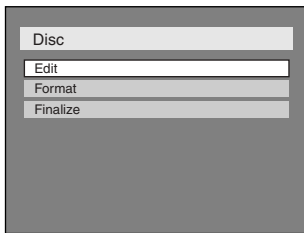


**2**

Select **"Edit"** using **▲/▼** buttons, then press **ENTER** button.

Titelist will appear.


Screen:

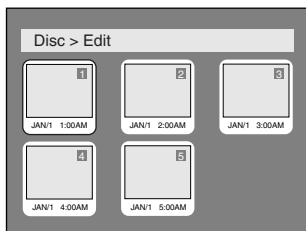

**3**

Select a desired title using **▲/▼/◀/▶** buttons, then press **ENTER** button.

Edit menu will appear.

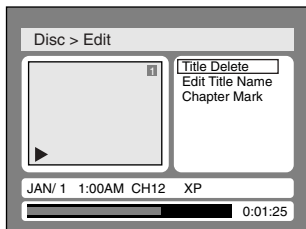


You cannot select "Chapter Mark".

84

**4**

Select **"Edit Title Name"** using **▲/▼** buttons, then press **ENTER** button.


A window for entering a title name will appear.

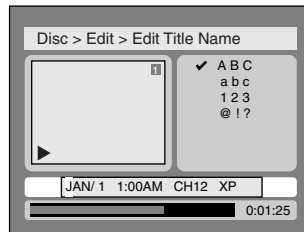

**5**

To enter a title name, follow the steps of "Guide to edit title name" on this page.

character set

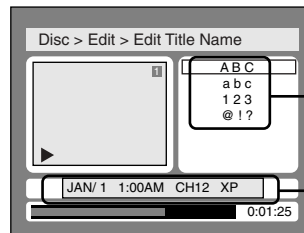


area for entering title names

When you finish entering a title name, press **ENTER** button.

**6**


Select **"Yes"** using **◀/▶** buttons, then press **ENTER** button.

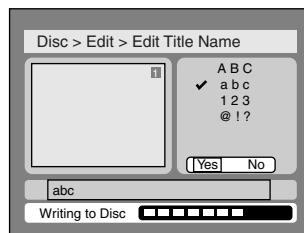

**This operation may take a while to be completed.**

**7**

After writing to disc is completed, press **SETUP** button to exit **DISC** menu.

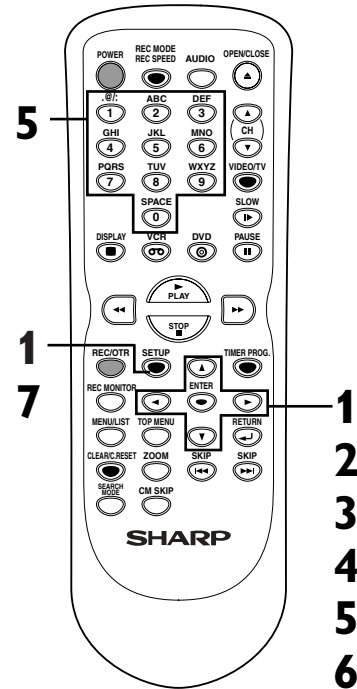

#### [ Guide to edit title name ]

**[Step1]:** Select a desired character set using **▲/▼** buttons, then press **ENTER** button.

**[Step2]:** Press Number buttons following by the list below.

Select	ABC	abc	123	@!?
0	<space>	<space>	0	<space>
1	*1	*1	1	! " # \$ % & ' ( ) * + , - . / : ; < = > ? @ [ ] ^ _ {   }
2	ABC	abc	2	-
3	DEF	def	3	-
4	GHI	ghi	4	-
5	JKL	jkl	5	-
6	MNO	mno	6	-
7	PQRS	pqrs	7	-
8	TUV	tuv	8	-
9	WXYZ	wxyz	9	-

\*1 Press **0** button, character set will be changed to the "@!?" mode automatically.

- To delete letters, press **CLEAR/C.RESET** button repeatedly. Holding **CLEAR/C.RESET** button to delete all letters.
- To go on to the next entering area for letters, press **▶** button.
- You can enter up to 30 letters.

# Changing the SETUP menu

## Tour of the SETUP menu

The following table is the contents which you can set and the default settings. Refer to the following table for useful operation.

SETUP menu	Items (highlight is the default)	Contents	
1. Language setting ➡ Pages 86-87	Disc Menu Language	English French Spanish ⋮	Set the language for disc menu.
	Audio Language	Original English French ⋮	Set the language for audio.
	Subtitle Language	OFF English French ⋮	Set the language for subtitle.
2. Display setting ➡ Pages 88-89	OSD Background Transparency	100% ⋮ 35% 25% ⋮	Set the background transparency of OSD screen.
	OSD Background Color	1 2 3	Set the OSD screen color. 1 (Green), 2 (Blue), 3 (Red)
	OSD Language	English Français Español	Set the language for OSD (On Screen Display).
	Screen Saver	OFF 5 minutes 10minutes ⋮	Set the time to work the screen saver on the screen.
3. Audio setting ➡ Pages 90-91	Digital Out	Dolby Digital PCM Stream	Set the type of sound signal which outputs from the digital audio output jack.
		PCM Auto 48kHz 96kHz	Set whether the sound recorded in 96kHz will be down sampled in 48kHz.
		DTS ON OFF	Set whether DTS signal will be output or not.
	Dynamic Range Control	ON OFF	Compressing the range of sound volume.
	Fast Forward with Audio	ON OFF	Outputting the sound during play in fast forward.
4. Parental setting ➡ Pages 92-93	Parental Lock	ALL level 8 to 1	Set the parental level of your DVD discs.
	(Change password)	Enter the current four-digit password	Set and change the password.

### Note

- If you change the setting in SETUP menu, the information of contents stays on even when the power is switched off.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Changing the SETUP menu

VCR functions

Others

Español


# Changing the SETUP menu

## Language setting

Press STOP button if you are playing a disc.


**1**

Press **SETUP** button to display **SETUP/DISC** menu.  
SETUP/DISC menu will appear.

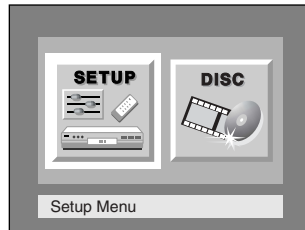


**2**

Select **"SETUP"** using **◀ / ▶** buttons, then press **ENTER** button.  
SETUP menu will appear.

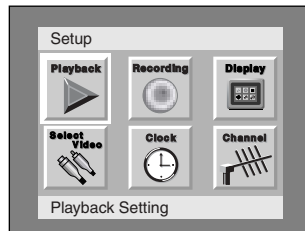


**3**

Select **"Playback"** using **▲ / ▼ / ◀ / ▶** buttons, then press **ENTER** button.  
Option window will appear.

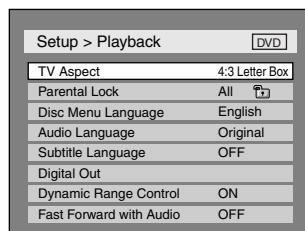

**4**

Select a desired item using **▲ / ▼** buttons, then press **ENTER** button.

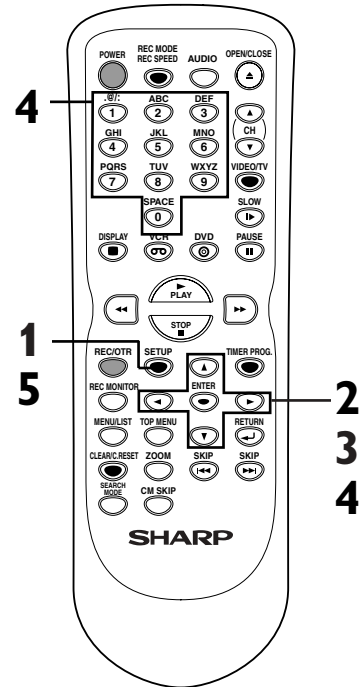

### Note



- Only the languages supported by the disc can be selected.
- Audio Language setting may not be available to some discs.
- You can change or switch off the subtitles on a DVD disc also from the disc menu if it is available.

# Changing the SETUP menu

## Language setting (cont'd)

### Disc Menu Language (Default : English)


Set the language for Disc Menu.

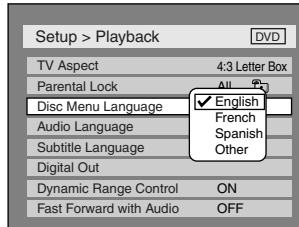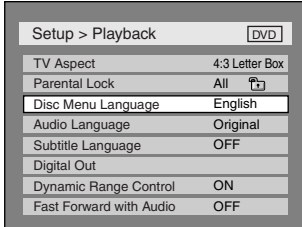

- Select a setting using **▲ / ▼** buttons, then press **ENTER** button.  
Your setting will be activated.

### Audio Language (Default : Original)



Set the Audio language.

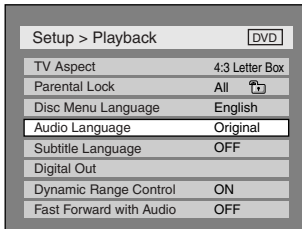

- Select a setting using **▲ / ▼** buttons, then press **ENTER** button.  
Your setting will be activated.
- When Original is selected, the audio language will be in the disc's default language.


### Subtitle Language (Default : OFF)

Set the subtitle language.

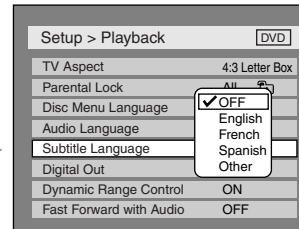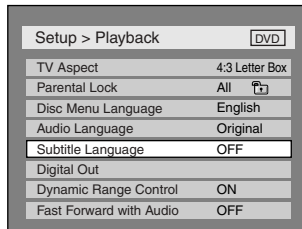

- Select a setting using **▲ / ▼** buttons, then press **ENTER** button.  
Your setting will be activated.

If "Other" is selected, press 4-digit code using number buttons.

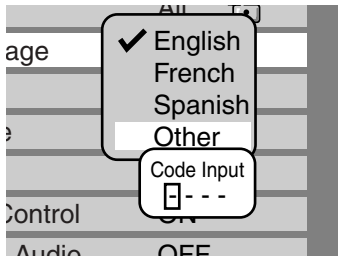

- When you finish entering the code, press **ENTER** button. Refer to the language code table on page 101.

## 5

Press **SETUP** button to exit **SETUP** menu.


# Changing the SETUP menu

## Display setting

Press STOP button if you are playing a disc.

1

Press **SETUP** button to display **SETUP/DISC** menu.  
SETUP/DISC menu will appear.

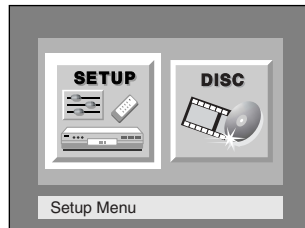


2

Select "**SETUP**" using **◀ / ▶** buttons, then press **ENTER** button.  
SETUP menu will appear.




3

Select "**Display**" using **▲ / ▼ / ◀ / ▶** buttons, then press **ENTER** button.  
Option window will appear.

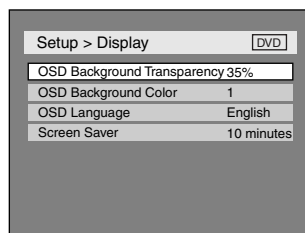

4

Select a desired item using **▲ / ▼** buttons, then press **ENTER** button.

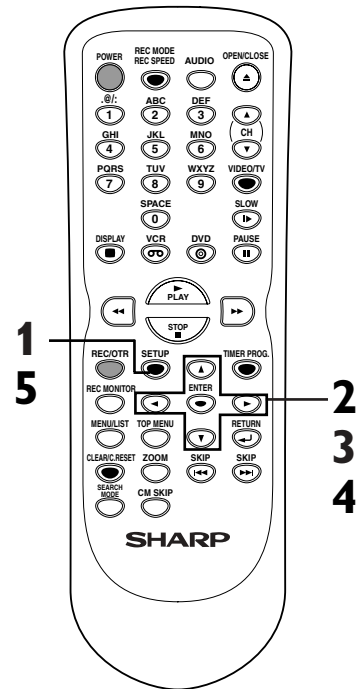




# Changing the SETUP menu

## Display setting (cont'd)

### OSD Background Transparency (Default : 35%)


Set the background transparency of OSD screen.  
You can choose one among 0% through 100%.

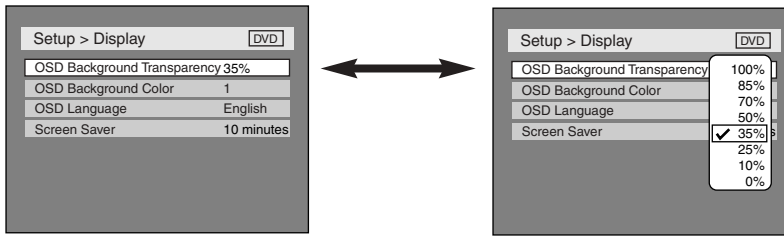

- Select a setting using **▲ / ▼** buttons, then press **ENTER** button.  
Your setting will be activated.

### OSD Background Color (Default : 1 Green)


Set the OSD screen color.  
You can choose one among 1(Green), 2(Blue), and 3(Red).

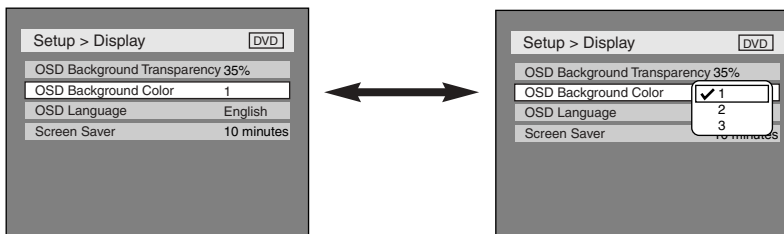

- Select a setting using **▲ / ▼** buttons, then press **ENTER** button.  
Your setting will be activated.

### OSD Language (Default : English)


Set the language for OSD.

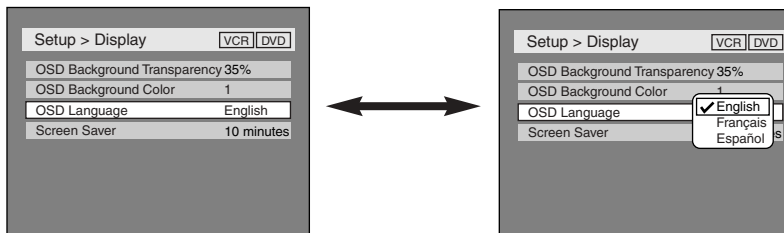

- Select a setting using **▲ / ▼** buttons, then press **ENTER** button.  
Your setting will be activated.

### Screen Saver (Default : 10 minutes)

Set the time to work the screen saver function on the screen.

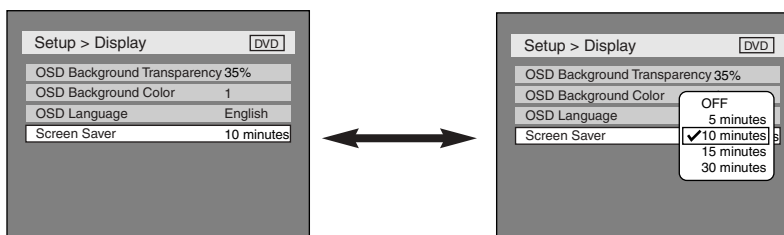

- Select a setting using **▲ / ▼** buttons, then press **ENTER** button.  
Your setting will be activated.

## 5

Press **SETUP** button to exit **SETUP** menu.

# Changing the SETUP menu


## Audio setting

Choose the appropriate Audio settings for your equipment.  
It will only affect DVD discs during playback.

Press STOP button if you are playing a disc.


**1**

Press **SETUP** button to display **SETUP/DISC** menu.  
SETUP/DISC menu will appear.

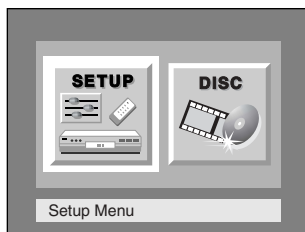


**2**

Select "**SETUP**" using **◀/▶** buttons, then press **ENTER** button.  
SETUP menu will appear.

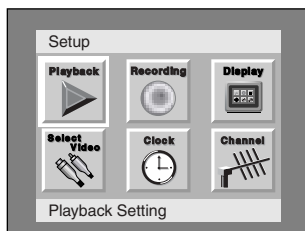

**3**

Select "**Playback**" using **▲/▼/◀/▶** buttons, then press **ENTER** button.  
Option window will appear.



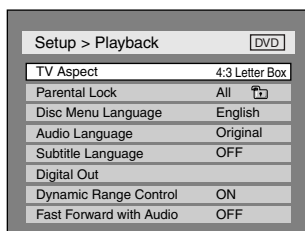


**4**

Select a desired item using **▲/▼** buttons, then press **ENTER** button.

### Digital Out

Set the digital audio output.

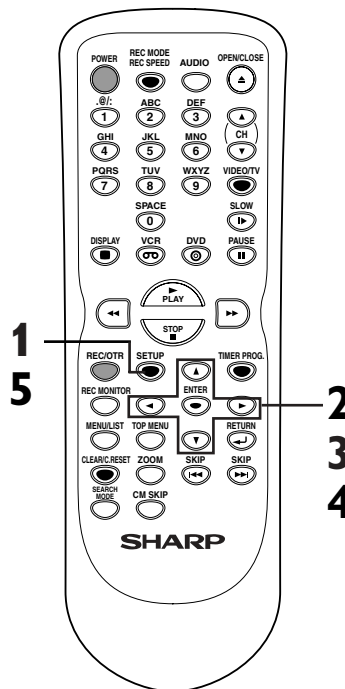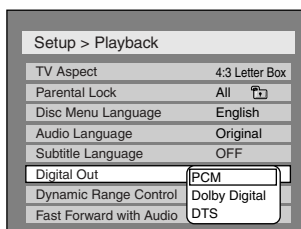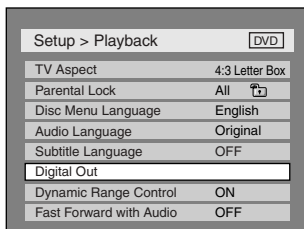

### Note

- Dynamic Range Control function is available only on the discs which are recorded in the Dolby Digital format.


- Select a setting using **▲/▼** buttons, then press **ENTER** button.

Option window will appear.  
Proceed to steps A, B or C.

# Changing the SETUP menu

## Audio setting (cont'd)

### A Settings for PCM (Default : Auto)

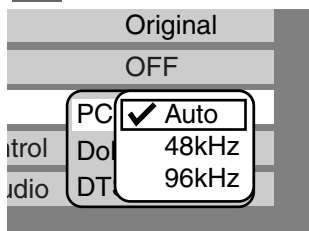


- Select a setting using **▲ / ▼** buttons, then press **ENTER** button.  
Your setting will be activated.
- Auto : Select "Auto" usually.
- 48kHz : If your amplifier/decoder is NOT compatible with 96kHz PCM, select "48kHz". 96kHz sound will be output in 48kHz.
- 96kHz : If your amplifier/decoder is compatible with 96kHz PCM, select "96kHz". 96kHz sound will be output.

**Note**  
.....  
**When playing disc with copy-right protection**

- If you select "Auto", the sound will be down sampled at 48kHz.
- If you select "96kHz", no digital sound will be output. Select "Auto", so that outputting 48kHz digital sound.

### B Settings for Dolby Digital (Default : Stream)

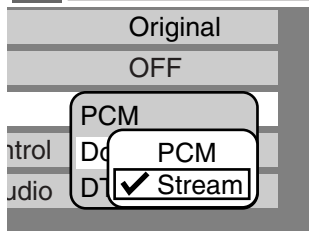


- Select a setting using **▲ / ▼** buttons, then press **ENTER** button.  
Your setting will be activated.
- PCM : Convert the Dolby Digital into PCM (2 channel).  
When your amplifier/decoder is NOT compatible with Dolby Digital, set to "PCM".
- Stream : Outputs Dolby Digital signals.  
When your amplifier/decoder is compatible with Dolby Digital, set to "Stream".

**Note**  
.....  
**When playing a DVD-RW disc recorded in VR mode**

- If the audio source on a disc is Dolby Digital format, set "Dolby Digital" to "PCM" so that you can switch to main (L), sub audio (R), or a mix of both (L/R) with your amplifier/decoder.



### C Settings for DTS (Default : OFF)

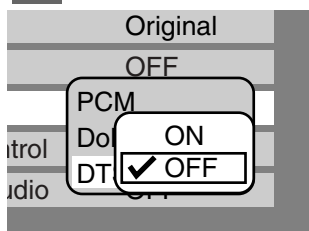

- Select a setting using **▲ / ▼** buttons, then press **ENTER** button.  
Your setting will be activated.
- ON : Outputs DTS signals.  
When your amplifier/decoder is compatible with DTS, set to "ON".
- OFF : No DTS signal is output.  
When your amplifier/decoder is NOT compatible with DTS, set to "OFF".

### Dynamic Range Control (Default : ON)



Set to ON to compress the range between soft and loud sounds.

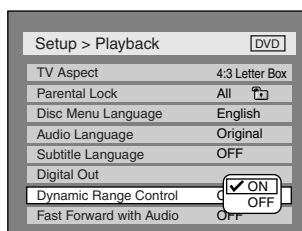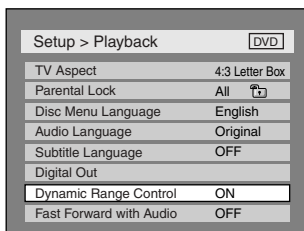

- Select a setting using **▲ / ▼** buttons, then press **ENTER** button.  
Your setting will be activated.
- Dynamic Range Control function is effective only with analog audio connection.

### Fast Forward with Audio (Default : OFF)

Set to ON to output the sound during playback in fast forward of x2.

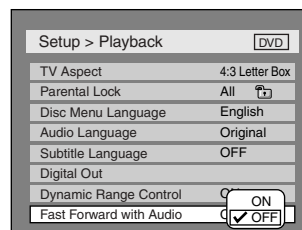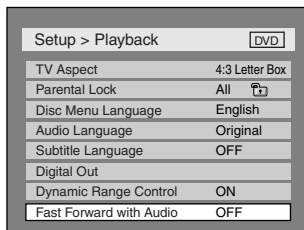

- Select a setting using **▲ / ▼** buttons, then press **ENTER** button.  
Your setting will be activated.

## 5

Press **SETUP** button to exit **SETUP** menu.

# Changing the SETUP menu


## Settings for Parental lock level

Some DVD-Video discs feature a Parental Lock level. Playback will stop if the ratings exceed the levels you set, it will require you to enter a password before the disc will playback. This feature prevents your children from viewing inappropriate material.

Press STOP button if you are playing a disc.


1

Press **SETUP** button to display **SETUP/DISC** menu. SETUP/DISC menu will appear.

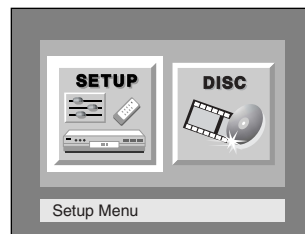


2

Select "**SETUP**" using **◀ / ▶** buttons, then press **ENTER** button. SETUP menu will appear.

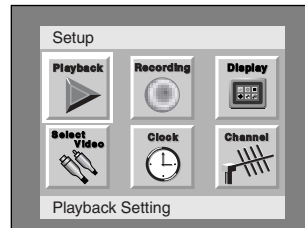


3

Select "**Playback**" using **▲ / ▼ / ◀ / ▶** buttons, then press **ENTER** button. Option window will appear.

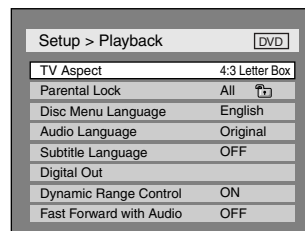

4

Select "**Parental Lock**" using **▲ / ▼** buttons, then press **ENTER** button.

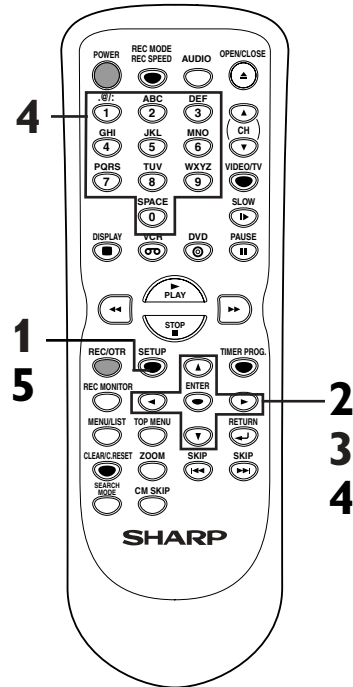

### Note



- Parental lock function may not be available to some discs.
- With some DVDs, it may be difficult to find if they are compatible with parental lock. Be sure to check if the parental lock function operates in the way that you have set.
- Record the password in case you forget it.

# Changing the SETUP menu

## Settings for Parental lock level (cont'd)



### Parental Lock (Default :All)

Set the Parental Lock level.

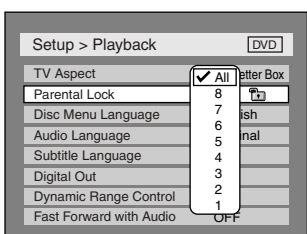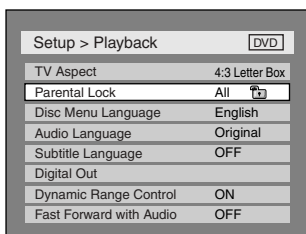

- Change the parental level using ▲ / ▼ buttons, then press ENTER button. Option window will appear. Proceed to steps A or B.

### A A password has not been set yet


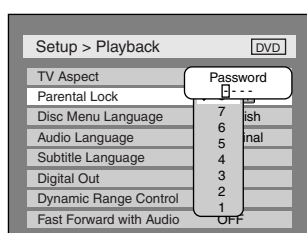
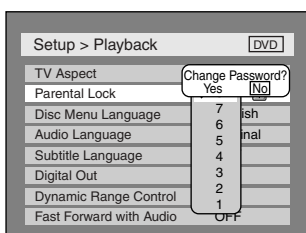


- Select "Yes" using ◀ / ▶ buttons, then enter a new password using Number buttons. Your setting will be activated.

- If you select "No", proceed to Step 5.

### B A password has been set already

### Change the password

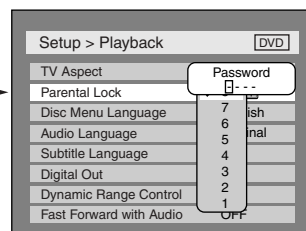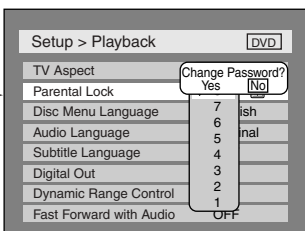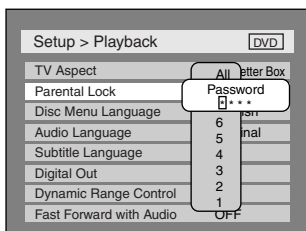

- Enter the current password using Number buttons.

- If you select "No", proceed to Step 5.

- Select "Yes" using ◀ / ▶ buttons, then enter a new password using Number buttons. Your setting will be activated.

## 5

Press SETUP button to exit SETUP menu.

### Note

- Press CLEAR/C.RESET button to erase numbers entered incorrectly.
- When you forget the password or you want to clear all settings in Parental lock, enter 4,7,3,7 using Number buttons in option window. Password will be cleared and parental levels will be set to All.

# VCR functions

## Playback



**1**

Press **POWER** button on the remote control or the front panel of the unit.

When you are playing a videotape, turn the TV on and be sure to select the input to which the unit is connected.

Press:

**2**

Insert a prerecorded videotape, then press **PLAY** button to begin playback.

**3**

During playback, press **PAUSE** button. Playback will pause and sound will be muted.

**4**


Press **PLAY** button to resume play.

**5**

Press **STOP** button to stop playback.

**6**

Press **STOP/EJECT** button on the front panel of the unit to eject the videotape.

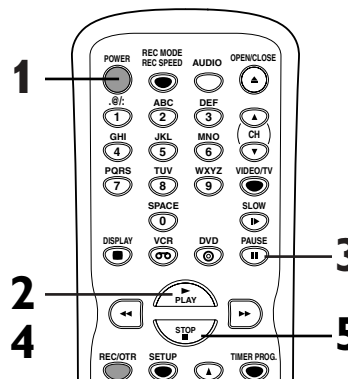

### Note

- When a videotape without record tab is inserted, the unit will start playback automatically.
- Tracking will be automatically adjusted upon playback. To adjust the tracking manually, press the CHANNEL  $\blacktriangle/\blacktriangledown$  buttons on the front panel of the unit or CH $\blacktriangle$ /CH $\blacktriangledown$  buttons on the remote control.

## Recording and One-touch timer recording

### Recording



Before recording, make sure:

- The desired channel is selected by pressing the number buttons on the remote control or CHANNEL  $\blacktriangle/\blacktriangledown$  buttons on the front panel of the unit.
- There is a videotape with a record tab in the unit.
- The desired recording speed is selected in SP (standard play) or SLP (super long play) mode by pressing REC MODE/REC SPEED button on the remote control.

#### Recording speed:

Tape speed	Recording/Playback Time		
Type of tape	T60	T120	T160
SP mode	1hour	2hours	2-2/3hours
SLP mode	3hours	6hours	8hours

- Stereo or SAP is selected. Refer to page 21.
- Refer to page 34 for instructions on timer recording.

First:

**1**

Press **REC/OTR** button to begin the recording.


 
To temporarily stop recording or to resume it, press **PAUSE** button. After the unit has been in Pause mode for 5 minutes, it will stop automatically to protect the videotape and the video head from damage.

**2**

Press **STOP** button when the recording is completed.

#### Accidental erasure prevention

To prevent accidental recording on a recorded videotape, remove its record tab. To record on it later, cover the hole with cellophane tape.

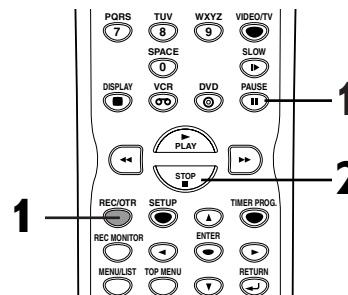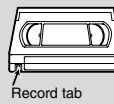

### Note

- To view one channel while recording another
  - 1) While you are recording on the unit, press VIDEO/TV button.
  - 2) At the cable box or satellite box, select the channel you want to view.
 If you have connected the unit to a cable box or satellite box, refer to "Connection to a Cable Box or Satellite Box" section on page 15.

# VCR functions

## Recording and One-touch timer recording (cont'd)

### One-touch timer recording



 
This feature allows you to set the recording length simply by pressing REC/OTR button on the remote control or the front panel of the unit.

**First:**

**1**

**During normal recording, press REC/OTR button to begin one-touch timer recording.**


You can select a fixed recording time by pressing the REC/OTR button repeatedly.

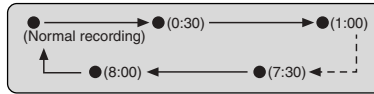

When one-touch timer recording is finished, the unit will turn off automatically.

To change the recording length during the one-touch timer recording, press REC/OTR repeatedly until the desired length appear.

To cancel the one-touch timer recording within the specified time, press STOP ■ button.

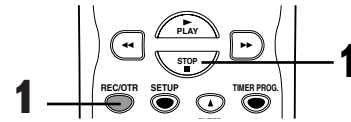

#### Note

- The remaining recording time will appear on the display panel during an one-touch timer recording. Press DISPLAY button to see it on the TV screen.
- You cannot pause a one-touch timer recording.
- If OTR is finished in VCR during playback or REC mode in DVD, the VCR will be in STOP mode and the DVD keeps the current mode.
- Unlike a timer recording, you can perform the following operations during a one-touch timer recording.
  - Turning the power off
  - Using REC or STOP ■ buttons.

## Search

### Index search



An index mark will be assigned at the beginning of each recording you make. You may skip to a specific marked point by following the steps below.


**First:**

**1**

**Press SEARCH MODE button so that the index search menu appears.**

**2**



**Enter the number of recordings you wish to skip using Number buttons with in 30 seconds.**

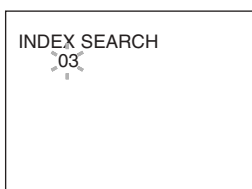

**3**

**Press ►►/◄◄ buttons to start index search.**

If you want to go in the forward direction, press ►► button. If you want to go in the reverse direction, press ◄◄ button. After index search, the VCR will play the videotape automatically.

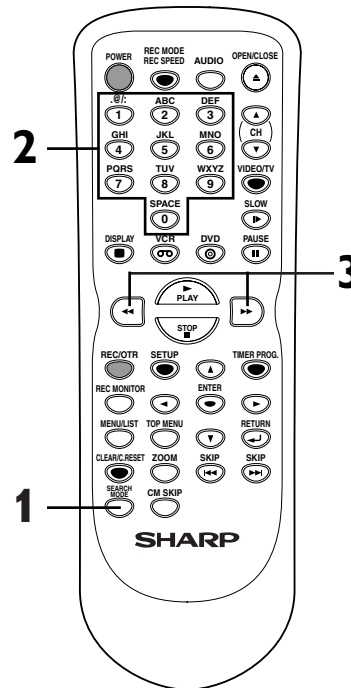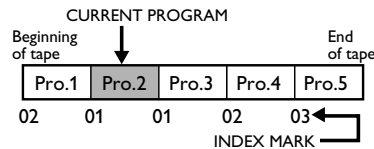

#### Note

- Every time a videotape is recorded, an index mark is written on the videotape.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

# VCR functions


## Search (cont'd)

### Time search



This feature allows you to go to a specific point on a videotape by entering the exact amount of time you wish to skip in order to reach the point.


First:

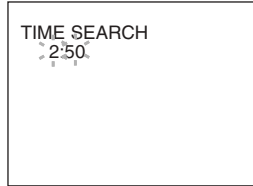

**1**  
Press **SEARCH MODE** button repeatedly so that the Time search menu appears.

**2**  
Enter your desired time to skip using **Number** buttons with in **30** seconds.

**3**  
Press **▶▶/◀◀** buttons to start time search.  
If you want to go in the forward direction, press **▶▶** button.  
If you want to go in the reverse direction, press **◀◀** button.  
After time search, the unit will play the videotape automatically.

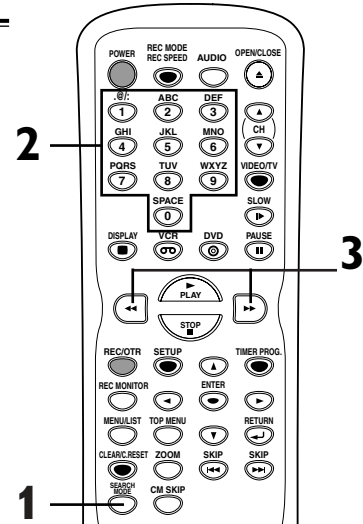

**Note**

- These functions are not available during recording.
- Press **STOP** button to stop the search.
- If the end of the videotape is reached during a Search, this unit will cancel the search and rewind the videotape.

## Other operations



First:

**Fast forward:**  
When the unit is in stop mode, press **▶▶** to fast forward the videotape.

**Rewind:**  
When the unit is in stop mode, press **◀◀** to rewind the videotape.

**To cue or review picture during playback (Picture Search):**  
Press **▶▶/◀◀** buttons during playback.  
Press it again and the unit will search in super high speed. (in the SLP mode only)

**To freeze the picture on TV screen during playback (Still mode):**  
Press **PAUSE** **||** button. Each time you press the button, the picture will be forwarded by one frame.  
If the picture begins to vibrate vertically during the still mode, stabilize the picture by pressing the **CHANNEL ▲/▼** or **CH▲/CH▼** buttons.  
If the picture is distorted or rolling vertically, adjust the vertical hold control on your TV, if equipped.

**Counter Reset:**  
Press **CLEAR/C.RESET** button.

**To playback in slow motion:**  
Press **SLOW** **|▶** button during playback or the still mode.  
If the noise bars appear on the TV screen, you can reduce it by pressing **CHANNEL ▲/▼** or **CH▲/CH▼** buttons.

**Automatic Rewind**  
When a videotape is played or fast forwarded to its end, the videotape will rewind to the beginning, stop, and eject itself.

**When you playback a videotape recorded in Hi-Fi stereo:**  
Press **AUDIO** button on the remote control to select Hi-Fi or MONO for playback sound mode.

- If you have connected a stereo TV to this unit, select "Hi-Fi".
- If you have connected a monaural TV to this unit, select "MONO".

**Note**

- Still/Slow/Pause mode will be automatically cancelled after 5 minutes to prevent damage to the videotape and the video head.
- To return to playback from the Picture Search/Still/Slow mode, press **PLAY** button.


Your Selection	HI-FI		MONO
	L-channel	R-channel	
Type of recorded tape	L-channel	R-channel	MONO
non Hi-Fi tapes	Monaural	Monaural	Monaural
Hi-Fi tapes recorded in Hi-Fi stereo	L	R	L+R
Hi-Fi tapes recorded main audio program	Main audio program	Main audio program	Main audio program
Hi-Fi tapes recorded second audio program	Second audio program	Second audio program	Second audio program



# Others

## Troubleshooting

Before requesting service for this unit, check the table below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation.

Symptom	Remedy
The power does not turn on.	<ul style="list-style-type: none"> <li>• Check that the AC power cord is connected securely.</li> <li>• (In case of power failure) Check the breaker.</li> </ul>
There is no picture.	<ul style="list-style-type: none"> <li>• Re-connect the connecting cord securely.</li> <li>• The connecting cords are damaged.</li> <li>• Check the connection to your TV (page 14).</li> <li>• Check the RF output channel when you view a TV program using RF connection.</li> <li>• Switch the input selector on your TV (such as to "LINE1") so that the signal from this unit appears on the TV screen.</li> </ul>
TV program reception does not fill the screen.	<ul style="list-style-type: none"> <li>• Try to set the channels with "Auto Preset" in SETUP menu (page 19).</li> <li>• Select a channel of any TV program using the CH ▲ / ▼ buttons.</li> <li>• Press VIDEO/TV button if necessary.</li> </ul>
TV program pictures are distorted.	<ul style="list-style-type: none"> <li>• Adjust TV antenna.</li> <li>• Adjust the picture (see the TV's instruction manual).</li> <li>• Place the unit and TV farther apart.</li> <li>• Place the TV and any bunched antenna cables farther apart.</li> </ul>
TV channels cannot be changed.	<ul style="list-style-type: none"> <li>• Switch the input to TV.</li> <li>• Connect the antenna cable correctly (page 14).</li> </ul>
Playback picture is distorted.	<ul style="list-style-type: none"> <li>• Keep the equipment which may cause electrical disturbances, such as a cellular phone, away.</li> </ul>
The playback picture or TV program from the equipment connected through the unit is distorted.	<ul style="list-style-type: none"> <li>• If the playback picture output from a DVD player, VCR, or tuner goes through the unit before reaching your TV, the copy-protection signal applied to some programs could affect picture quality. Disconnect the playback equipment in question and connect it directly to your TV.</li> </ul>
There is no sound.	<ul style="list-style-type: none"> <li>• Re-connect all connections securely.</li> <li>• The connecting cord is damaged.</li> <li>• Check the connections to the amplifier input.</li> <li>• The input source setting on the amplifier is incorrect.</li> <li>• The unit is in pause mode or in Slow-motion Play mode.</li> <li>• The unit is in fast forward or fast reverse mode.</li> </ul>
The channel cannot be changed from the channel you are recording.	<ul style="list-style-type: none"> <li>• Set the TV's input to "TV".</li> </ul>
Nothing was recorded even though you set the timer setting correctly.	<ul style="list-style-type: none"> <li>• There was a power failure during recording.</li> <li>• The internal clock of the unit stopped due to a power failure that lasted for more than 30 seconds. Reset the clock (pages 22-24).</li> <li>• Disconnect the AC power cord from the AC outlet, and connect it again.</li> <li>• The program contains copy protection signals that restricts copying.</li> <li>• The timer setting overlapped with another setting that was set later or has priority.</li> </ul>
Timer recording is not complete or did not start from the beginning.	<ul style="list-style-type: none"> <li>• The timer setting overlapped with another setting that was set later or has priority (page 36).</li> <li>• Disc space was not enough.</li> </ul>
Timer recording is impossible.	<ul style="list-style-type: none"> <li>• Make sure  indicator appears on the front display of this unit. If not, press POWER button.</li> </ul>
The remote control does not function.	<ul style="list-style-type: none"> <li>• Batteries are weak.</li> <li>• There are obstacles between the remote and the unit.</li> <li>• The remote control is far from the unit.</li> <li>• There are no batteries in the remote.</li> <li>• Turn on the unit.</li> <li>• The remote control is not pointed at the remote sensor on the unit.</li> <li>• Press the DVD or VCR button, whichever you need. Then, try again.</li> <li>• If above remedies do not solve the problem, please call the Service Center for help.</li> </ul>
The unit does not operate properly.	<ul style="list-style-type: none"> <li>• When static electricity, etc., causes the unit to operate abnormally, unplug the unit and then plug it in again.</li> </ul>

DVD • VCR

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

 
 



VCR functions

Others

Español


## Others

### Troubleshooting (cont'd)

 Symptom	Remedy
There is no picture.	<ul style="list-style-type: none"> <li>The Setup Display appears. Press RETURN  button to turn off the display.</li> <li>Check if the INTERLACE/PROGRESSIVE mode is set correctly according to your TV. See page 14.</li> </ul>
Picture noise appears.	<ul style="list-style-type: none"> <li>The disc is dirty or flawed.</li> <li>If the picture output signal from the unit passes through your VCR to get to your TV, or if you are connected to a combination TV/VIDEO player, the copy-protection signal applied to some DVD programs could affect picture quality. If you still experience this problem even when you connect the unit directly to your TV, try connecting the unit to your TV's S-VIDEO input.</li> </ul>
There is no sound.	<ul style="list-style-type: none"> <li>If the audio signal does not come through the DIGITAL OUT (COAXIAL) jack, check the Audio Setup settings (pages 90-91).</li> <li>The disc is dirty or flawed.</li> </ul>
Sound is noisy.	<ul style="list-style-type: none"> <li>The disc is dirty or flawed.</li> </ul>
The disc does not play.	<ul style="list-style-type: none"> <li>No disc is inserted.</li> <li>A blank disc is inserted.</li> <li>The disc is upside down. Insert the disc with the labeled side facing up.</li> <li>The disc is not correctly inserted.</li> <li>The unit cannot play certain discs (such as a CD-ROM) (page 43).</li> <li>The region code on the DVD VIDEO does not match the unit (page 43).</li> <li>Moisture has condensed inside the unit. Remove the disc and leave the unit turned on for about two hours until the moisture evaporates (page 4).</li> <li>If the disc was recorded on another recorder, the unit cannot play the disc if it was not finalized (page 41).</li> </ul>
Playback image freezes for a second.	<ul style="list-style-type: none"> <li>During the playback of two layered disc, picture may freeze for a moment when the 1st layer switches to the 2nd layer. This is not a malfunction.</li> </ul>
The disc does not start playback from the beginning.	<ul style="list-style-type: none"> <li>Resume play was activated (page 48). Press STOP  button twice.</li> <li>You have inserted a disc whose Title menu or DVD menu automatically appears on the TV screen when it is first insert.</li> </ul>
The unit starts playing from the disc automatically.	<ul style="list-style-type: none"> <li>The DVD VIDEO features an auto playback function.</li> </ul>
Some functions such as Stop, Search, or Slow-motion Play cannot be performed.	<ul style="list-style-type: none"> <li>Depending on the disc, you may not be able to do some of the operations above. See the instruction manual supplied with the disc.</li> </ul>
The language for the sound track cannot be changed.	<ul style="list-style-type: none"> <li>Multilingual tracks are not recorded on the DVD VIDEO, DVD-R or DVD-RW being played.</li> <li>The DVD VIDEO prohibits the changing of the language for the sound track.</li> <li>Try changing the language using the DVD VIDEO's menu.</li> </ul>
The subtitle language cannot be changed or turned off.	<ul style="list-style-type: none"> <li>Multilingual subtitle are not recorded on the DVD VIDEO.</li> <li>The DVD VIDEO prohibits changing of the subtitles.</li> <li>Try changing the subtitle using the DVD VIDEO's menu.</li> </ul>
The angles cannot be changed.	<ul style="list-style-type: none"> <li>Multi-angles are not recorded on the DVD VIDEO being played.</li> <li>You are trying to change the angles when  icon does not appear on the TV screen (page 58).</li> <li>The DVD VIDEO prohibits changing angles.</li> <li>Try changing the angle using the DVD VIDEO's menu.</li> </ul>
Recording does not stop immediately after you press STOP  button.	<ul style="list-style-type: none"> <li>It will take a few seconds for the unit to input disc data before recording can stop.</li> </ul>
Recording does not start immediately after you press REC/OTR button.	<ul style="list-style-type: none"> <li>An unused DVD-R or DVD-RW was inserted. It takes a while for the unit to automatically format a DVD-RW.</li> </ul>
The disc tray does not open when you press OPEN/CLOSE  button.	<ul style="list-style-type: none"> <li>It may take a few seconds for the disc tray to open after you have recorded or edited a disc.</li> <li>This is because the unit is adding disc data to the disc.</li> </ul>

# Others

## Troubleshooting (cont'd)

Symptom	Remedy	
<b>D V D</b>	The disc tray does not open when you press OPEN/CLOSE $\blacktriangle$ button.	<ul style="list-style-type: none"> <li>It may take a few seconds for the disc tray to open after you have recorded or edited a disc.</li> <li>This is because the unit is adding disc data to the disc.</li> </ul>
	"Repairing" appears on the display. 	<ul style="list-style-type: none"> <li>If there is a power failure or unplugging during recording, finalizing, formatting or editing, a Repairing process will begin automatically just after turning the unit on again. It may take several minutes up to about four hours.</li> </ul>
<b>V C R</b>	Picture noise appears.	<ul style="list-style-type: none"> <li>Head cleaning for VCR may be necessary. Refer to "AUTO HEAD CLEANING".</li> <li>Adjust tracking control for better picture by pressing CHANNEL (<math>\blacktriangle</math>/<math>\blacktriangledown</math>) buttons on this unit or CH (<math>\blacktriangle</math>/<math>\blacktriangledown</math>) buttons while you are playing a videotape.</li> </ul>
	The tape does not play.	<ul style="list-style-type: none"> <li>No videotape is inserted.</li> </ul>
	Recording does not start immediately after you press REC/OTR button.	<ul style="list-style-type: none"> <li>Make sure the videotape has a record tab when you record to a videotape. If needed, cover the hole with cellophane tape.</li> </ul>
	The remote control does not function.	<ul style="list-style-type: none"> <li>Check if a videotape is in this unit.</li> </ul>
	The motor rotates even when playback / recording is stopped.	<ul style="list-style-type: none"> <li>The motor may rotate for the duration of approximately 5 minutes for efficient operation. This is not a malfunction.</li> </ul>

Error message	Cause	Solution
<div style="border: 1px solid black; padding: 2px; text-align: center;">Disc Error</div> — Please eject the disc. — Playback feature may not be available on this Disc.	Unplayable disc is inserted in the unit. The disc is upside down.	Insert the standardized disc which bear the marks on page 43. Insert the disc with the labeled side facing up.
<div style="border: 1px solid black; padding: 2px; text-align: center;">Region Error</div> — Please eject the disc. — Playback is not authorized in your region.	Playback is not authorized in the region of the DVD-Video disc which you inserted in the unit.	Insert the DVD-Video disc with region codes 1 or ALL.
<div style="border: 1px solid black; padding: 2px; text-align: center;">Parental Lock On</div> — Please eject the disc. — The current selected parental level Prohibits playback.	The current selected parental level in the SETUP Menu prohibits playback.	Check the "Parental Lock" setting (pages 92-93).
<div style="border: 1px solid black; padding: 2px; text-align: center;">Recording Error</div> This program is not allowed to be recorded.	The recording function encountered the copy prohibited program.	You cannot record copy prohibited programs.
<div style="border: 1px solid black; padding: 2px; text-align: center;">Recording Error</div> This program is not recordable in Video mode.	You are trying to record the copy-once program onto the DVD-RW disc in Video mode.	Set "DVD-RW Recording Format" to "VR mode" (page 29).
<div style="border: 1px solid black; padding: 2px; text-align: center;">Recording Error</div> Can not record on this disc.	You are trying to record onto the disc which is unrecordable, or the disc status is unable to record. The disc is dirty. The disc is damaged.	Insert the recordable disc, and ensure the disc status satisfies the recording requirements (pages 27-28). Clean the disc with a cleaning cloth. Replace the disc.
<div style="border: 1px solid black; padding: 2px; text-align: center;">Recording Error</div> This program is not allowed to be recorded on this disc.	You are trying to record the copy-once program onto the DVD-RW disc which is not compatible with CPRM.	Insert the DVD-RW disc (ver.1.1 compatible with CPRM).
<div style="border: 1px solid black; padding: 2px; text-align: center;">Recording Error</div> This disc is protected and not recordable.	You are trying to record on to the protected disc which is set in the Disc Setting Menu.	Release the disc protect setting in the Disc Setting menu (page 42).
<div style="border: 1px solid black; padding: 2px; text-align: center;">Recording Error</div> Disc is full. (No area for new recording)	You are trying to record onto the disc which has no space for recording.	Insert the recordable disc with enough recording space.

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

## Others

### Troubleshooting (cont'd)

Error message	Cause	Solution
<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">Recording Error</div> You cannot record more than 99 titles on one disc. (The maximum is 99)	You are trying to record onto the disc on which the number of recording titles comes up to the maximum (99).	Delete unnecessary titles (pages 61, 65, 74).
<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">Recording Error</div> You cannot record more than 999 chapters on one disc. (The maximum is 999)	You are trying to record onto the VR mode DVD-RW disc on which the number of recording chapters comes up to the maximum (999).	Delete unnecessary chapter markers (pages 69, 78).
<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">Recording Error</div> You cannot record on this disc as Control Information is full.	This disc has no space to write the Control Information when recording or deleting contents.  When editing has been repeatedly performed, the control Information area may come up to be full even the recording area has enough space.	Delete unnecessary titles (pages 61, 65, 74).
<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">Recording Error</div> You cannot record on the disc as Power Calibration Area is full.	When recordings are performed repeatedly onto an unstable disc, this area may come up to be full.  Every time you insert a disc for recording, the disc's working area will be taken up. And if you repeat this frequently, it will be used up sooner and you may not be able to record full 99 titles.	Insert a new disc.
<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">Recording Error</div> This disc is already finalized.	You are trying to record onto the disc already finalized.	Release the finalizing for this disc (page 41).

\* If you are still having trouble with this unit after checking Troubleshooting, write down the error code and the error description, and contact a Sharp Authorized Service Center for inspection. (See **Service Information** on page 103.)

### RF converter output

You can watch the TV programs with the tuner of the unit. (Usually channel 3 or 4 of the TV is available for the RF converter setting.) Be sure to connect the unit to a TV using the Round Coaxial cable. Refer to page 14.

**1**


**Select channel 3 on your TV.**

- Be sure that the unit is in DVD mode.


**2**

**Press VIDEO/TV button on the remote control.**


- If noise appears, change the RF output channel of the unit to CH 4 by pressing VIDEO/TV button for 3 seconds. The RF output channel will alternate between CH3 and CH4 as follows.

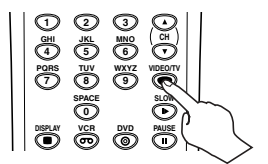

for more than  
3 seconds

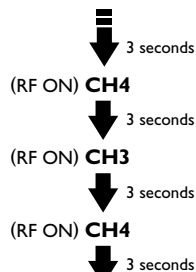

- Changing the RF output channel is available only when the unit is in DVD mode.

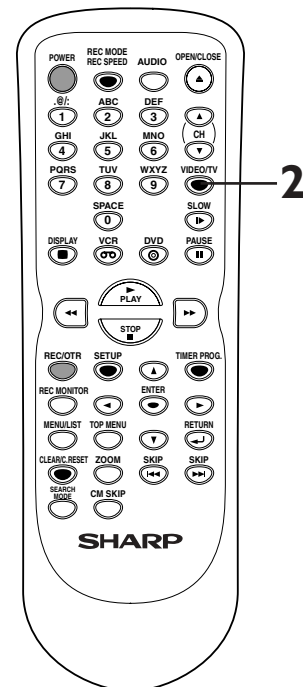

## Others

### Language code

Language	Code
(Afan) Oromo	6159
Abkhazian	4748
Afar	4747
Afrikaans	4752
Albanian	6563
Amharic	4759
Arabic	4764
Armenian	5471
Assamese	4765
Aymara	4771
Azerbaijani	4772
Bashkir	4847
Basque	5167
Bengali; Bangla	4860
Bhutani	5072
Bihari	4854
Bislama	4855
Breton	4864
Bulgarian	4853
Burmese	5971
Byelorussian	4851
Cambodian	5759
Catalan	4947
Chinese	7254
Corsican	4961
Croatian	5464
Czech	4965
Danish	5047
Dutch	6058
English	5160
Esperanto	5161
Estonian	5166
Faroese	5261
Fiji	5256
Finnish	5255
French	5264
Frisian	5271
Galician	5358
Georgian	5747
German	5051
Greek	5158
Greenlandic	5758
Guarani	5360
Gujarati	5367
Hausa	5447
Hebrew	5569

Language	Code
Hindi	5455
Hungarian	5467
Icelandic	5565
Indonesian	5560
Interlingua	5547
Interlingue	5551
Inupiak	5557
Irish	5347
Italian	5566
Japanese	5647
Javanese	5669
Kannada	5760
Kashmiri	5765
Kazakh	5757
Kinyarwanda	6469
Kirghiz	5771
Kirundi	6460
Korean	5761
Kurdish	5767
Laothian	5861
Latin	5847
Latvian; Lettish	5868
Lingala	5860
Lithuanian	5866
Macedonian	5957
Malagasy	5953
Malay	5965
Malayalam	5958
Maltese	5966
Maori	5955
Marathi	5964
Moldavian	5961
Mongolian	5960
Nauru	6047
Nepali	6051
Norwegian	6061
Occitan	6149
Oriya	6164
Panjabi	6247
Pashto; Pushto	6265
Persian	5247
Polish	6258
Portuguese	6266
Quechua	6367
Rhaeto-Romance	6459
Romanian	6461

Language	Code
Russian	6467
Samoan	6559
Sangho	6553
Sanskrit	6547
Scots Gaelic	5350
Serbian	6564
Serbo-Croatian	6554
Sesotho	6566
Setswana	6660
Shona	6560
Sindhi	6550
Singhalese	6555
Siswat	6565
Slovak	6557
Slovenian	6558
Somali	6561
Spanish	5165
Sundanese	6567
Swahili	6569
Swedish	6568
Tagalog	6658
Tajik	6653
Tamil	6647
Tatar	6666
Telugu	6651
Thai	6654
Tibetan	4861
Tigrinya	6655
Tonga	6661
Tsonga	6665
Turkish	6664
Turkmen	6657
Twi	6669
Ukrainian	6757
Urdu	6764
Uzbek	6772
Vietnamese	6855
Volapuk	6861
Welsh	4971
Wolof	6961
Xhosa	7054
Yiddish	5655
Yoruba	7161
Zulu	7267

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

WCR functions

Others

Espanol

# Others

## Glossary

### **Analog audio**

An electrical signal that directly represents sound. Compare this to digital audio which can be an electrical signal, but is an indirect representation of sound. See also Digital audio.

### **Aspect ratio**

The width of a TV screen relative to its height. Conventional TVs are 4:3 (in other words, the screen is almost square); widescreen models are 16:9 (the screen is almost twice as wide as it is high).

### **Chapter**

Just as a book is split up into several chapters, a title on a DVD disc is usually divided into chapters. See also Title.

### **Component video output**

Each signal of luminance(Y) and component(PB/Cb, PR/CR) is independent to output so that you can experience picture color as it is. Also, due to compatibility with progressive video (480p), you can experience higher-density picture than that in interlace (480i).

### **CPRM (Content Protection for Recordable Media)**

CPRM is a copy protection system with scramble system regarding the recording of "copy-once" broadcast programs (e.g. some satellite broadcasts).

### **Digital audio**

An indirect representation of sound by numbers. During recording, the sound is measured at discrete intervals (44, 100 times a second for CD audio) by an analog-to-digital converter, generating a stream of numbers. On playback, a digital-to-analog converter generates an analog signal based on these numbers. See also Sampling frequency and Analog audio.

### **Dolby Digital**

The system to compress digital sound developed by Dolby Laboratories. It offers you sound of stereo(2ch) or multi-channel audio (up to 5.1ch).

### **DTS (Digital Theater System)**

DTS is a 5.1 channel surround sound system, but it is different from Dolby Digital. The formats were developed by Digital Theater System, Inc.

### **Finalize**

To make DVD discs, which have been recorded on, possible to play in DVD players. With this unit, it is possible to finalize DVD-RW/ DVD-R discs.

### **MP3 (MPEG Audio Layer 3)**

MP3 is a method of compressing files. You can copy MP3 files on CD-RW/R discs from the computer and play the files on this unit.

### **PCM (Pulse Code Modulation)**

The most common system of encoding digital audio, found on CDs and DAT. Excellent quality, but requires a lot of data compared to formats such as Dolby Digital and MPEG audio. For compatibility with digital audio recorders (CD, MD and DAT) and AV amplifiers with digital inputs, this unit can convert Dolby Digital and MPEG audio to PCM. See also Digital audio.

### **Playlist**

From this list you can play contents of a disc as your desired order or in sequence. Also it is allowed to search a specific scene directly.

### **Progressive Scan (480p)**

A type of display that does not split each frame into fields, and instead scans directly through all the scanlines of each frame in order. Progressive Scan provides less flickering and higher image resolution than traditional (480i) TV signals. Refer to page 14 for instructions on selective Progressive Scan mode.

### **Regions code**

Regions associate discs and players with particular areas of the world. This unit will only play discs that have compatible region codes. You can find the region code of your unit by looking on the rear panel. Some discs are compatible with more than one region (or all regions).

### **Sampling frequency**

The rate which sound is measured by a specified interval to turn into digital audio data. The numbers of sampling in one second defines as sampling frequency. The higher the rate, the better the sound quality as possible as it is.

### **SAP (Secondary Audio Program)**

Sub-audio channel which is delivered separately from main-audio channel. This audio channel is used as an alternate in bilingual broadcasting.

### **S-Video output**

It delivers independently each signal of color(C) and luminance(Y) to TV as video signals, so that higher-quality picture will be gained.

### **Title (DVD only)**

A collection of chapters on DVD disc. See also chapter.

### **Track**

Audio CDs use tracks to divide up the content of a disc. The DVD equivalent is called a chapter. See also Chapter.

## Others

### Specifications

#### General

System	DVD-Video, DVD-RW/R, CD-DA, CD-RW/R, Video Cassette Tape
VCR video heads	Four heads
Power requirements	AC120V, 60 Hz
Power consumption	37 W (standby: 4.3 W)
Weight	9.5 lbs ( 4.3 kg )
Dimensions (width x height x depth)	17 1/8" x 3 15/16" x 10 1/4" (435 x 100 x 261 mm)
Operating temperature	41F° to 104F° (5°C to 40°C)
Operating humidity	5% to 85% (no condensation)
TV format	NTSC

#### Recording

Recording format	Video Recording format (DVD-RW only), Video format (DVD-RW, DVD-R)
Recordable discs	DVD-ReWritable, DVD-Recordable
<b>Video recording format</b>	
Sampling frequency	13.5MHz
Compression format	MPEG
<b>Audio recording format</b>	
Sampling frequency	48kHz
Compression format	Dolby Digital

#### Tuner

<b>Receivable channels</b>	
VHF	2-13ch
UHF	14-69ch
CATV	C1-C125ch
<b>RF Converter</b>	Built-in VHF converter
<b>Converter output</b>	VHF channel 3 or 4

#### Input/Output

VHF/UHF antenna input/output terminal	VHF/UHF set 75Ω
<b>Video input</b>	
Input level	Input 1 (rear), 2 (front) 1 Vp-p (75Ω)
Jacks	RCA jack
<b>Video output</b>	
Output level	1 Vp-p (75Ω)
Jacks	RCA jack
<b>S-Video input</b>	
Y (luminance) - Input level	Input 1 (rear), 2 (front) 1 Vp-p (75Ω)
C (color) - Input level	286 mVp-p (75Ω)
Jacks	4 pin mini DIN
<b>S-Video output</b>	
Y (luminance) - Output level	1 Vp-p (75Ω)
C (color) - Output level	286 mVp-p (75Ω)
Jacks	4 pin mini DIN
<b>Component video output</b>	
Output level	Y: 1.0 Vp-p (75Ω), Pb/Cb, Pr/Cr: 0.7 Vp-p (75Ω)
Jacks	RCA jacks
<b>Audio input</b>	
During audio input	Input 1 (rear), 2 (front) L/R 2V rms (47kΩ)
Jacks	RCA jacks
<b>Audio output</b>	
During audio output	Output 1,2 L/R 2V rms (47kΩ)
Jacks	RCA jacks
<b>Digital audio output</b>	
Output level	500 mVp-p (75Ω)
Jacks	RCA jack

#### Note:

The specifications and design of this product are subject to change without notice.

### Service Information (For the U.S.)

For the location of the nearest Sharp Authorized Service Center, or to obtain product literature, accessories, supplies or customer assistance, please call **1-800-BE-SHARP** (1-800-237-4277) or visit SHARP's website (<http://www.sharpusa.com>).

Before you start

Connections

Getting started

Recording

Playing discs

Editing

Change the SETUP menu

VCR functions

Others

Español

## Precaciones

Para futura referencia, anote los números de modelo y de serie (indicados en la parte posterior esta unidad) en el espacio provisto.



No. de modelo: \_\_\_\_\_

No. de serie: \_\_\_\_\_

**AVISO: PARA REDUCIR EL RIESGO DE INCENDIO O ELECTROCHOQUE NO EXPONGA ESTE APARATO A LA HUMEDAD.**

**PRECAUCIÓN: PARA EVITAR DESCARGAS ELÉCTRICAS, HAGA QUE LA PALETA ANCHA DEL ENCHUFE COINCIDA CON LA RANURA ANCHA E INTRODÚZCALA HASTA EL FONDO.**

	<b>PRECAUCION</b> PELIGRO DE DESCARGA ELECTRICA NO ABRIR DECLARACION DE CONFORMIDAD	
<b>PRECAUCION:</b> TPARA REDUCIR EL RIESGO DE DESCARGA ELECTRICA, NO quite la cubierta. EL USUARIO NO DEBERA DAR NINGUN TIPO DE SERVICIO A NINGUNA PARTE INTERNA. DEBERA SER REALIZADO SOLO POR PERSONAL DE SERVICIO CALIFICADO.		

	Este símbolo previene al usuario del voltaje aislado dentro de la unidad que puede provocar descargas eléctricas peligrosas.
	Este símbolo advierte al usuario que existen instrucciones de operación y de mantenimiento en la literatura incluida en esta unidad.

**“ADVERTENCIA—Las reglas de la FCC (Comisión Federal de Comunicaciones) estipulan que cualquier modificación o cambio a este equipo no aprobado expresamente por el fabricante podrá anular la autorización del usuario para operar este equipo”.**

Este dispositivo cumple con la Parte 15 de las reglas de la FCC (Comisión Federal de Comunicaciones). La operación se encuentra sujeta a las dos condiciones siguientes:

- (1) Este dispositivo no debería producir interferencias perjudiciales, y
- (2) este dispositivo debe aceptar cualquier interferencia recibida, incluyendo las que puedan producir una operación indeseable.

### INFORMACION

Este equipo se ha sometido a todo tipo de pruebas y cumple con las normas establecidas para dispositivo digital de Clase B, de conformidad con la Parte 15 de las reglas de la FCC (Comisión Federal de Comunicaciones). Estas reglas están diseñadas para asegurar una protección razonable contra interferencias perjudiciales en las instalaciones residenciales. Este equipo genera, utiliza y puede emitir energía de radiofrecuencia y, si no se instala y utiliza debidamente, es decir, conforme a las instrucciones, podrían producirse interferencias perjudiciales en las radiocomunicaciones. Sin embargo, no se garantiza que estas interferencias no se produzcan en una instalación determinada. Si este equipo ocasiona interferencias en la recepción de radio o televisión, lo cual puede comprobarse con sólo apagar y encender el equipo, intente corregir el problema mediante una o una combinación de las siguientes medidas:

- Reoriente la antena receptora o cámbiela de lugar.
- Aumente la separación entre el equipo y el receptor.
- Enchufe el equipo a una toma de corriente situada en un circuito distinto del receptor.
- Consulte a su distribuidor o a un técnico experto en radio/televisión.

**This Class B digital apparatus complies with Canadian ICES-003.**

**Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.**

**Este aparato digital de la Clase B cumple con la norma ICES-003 de Canadá.**

### PRECAUCION:

ESTA UNIDAD HA SIDO CLASIFICADA COMO PRODUCTO CLASS 1 LASER.

EL USO DE MANDOS O AJUSTES O LA REALIZACION DE PROCEDIMIENTOS DISTINTOS DE LOS INDICADOS EN LA PRESENTE IMPLICA EL RIESGO DE EXPOSICION A UNA RADIACION PELIGROSA.

COMO LOS RAYOS LASER UTILIZADOS EN ESTA UNIDAD PUEDEN RESULTAR PERJUDICIALES PARA SUS OJOS, NO INTENTE DESARMAR EL GABINETE. SOLICITE EL SERVICIO UNICAMENTE A PERSONAL CUALIFICADO.




## Importantes Medidas de Seguridad y Precauciones

- 1) Lea las instrucciones - Lea detenidamente todas las instrucciones de seguridad y operación antes de usar el producto.
- 2) Conserve las instrucciones - Conserve las instrucciones de seguridad y operación para consultas futuras.
- 3) Respete las advertencias - Observe estrictamente todas las advertencias impresas en el producto y las incluidas en el manual de instrucciones.
- 4) Siga las instrucciones - Siga todas las instrucciones de operación.
- 5) Limpieza - Desconecte el producto del tomacorriente mural antes de limpiarlo. No use limpiadores líquidos ni aerosol. Use un paño húmedo para la limpieza del producto.
- 6) Enchufes - No use enchufes no recomendados por el fabricante del producto, ya que podría ser peligroso.
- 7) Agua y humedad - No use este producto cerca del agua, por ejemplo, cerca de una bañera o lavamanos, cerca del fregadero de la cocina o lavandería, en un piso mojado, cerca de una piscina, etc.
- 8) Accesorios - No instale este producto en un carro, soporte, trípode o mesa inestables. El grabador de videocassettes podría caerse, causando serias lesiones a un niño o adulto, resultando también severamente dañado. Úselo sólo en un carro, soporte, trípode o mesa recomendados por el fabricante, o vendidos con el producto. Toda instalación del producto deberá hacerse de acuerdo a las instrucciones del fabricante, empleando los accesorios de instalación recomendados por el mismo.
- 9) La combinación de producto y carro debe ser movida con cuidado. Las detenciones bruscas, la fuerza excesiva y las superficies dispares harán que el producto y el carro se vuelquen.
- 10) Ventilación - El gabinete del producto tiene renuras y aberturas de ventilación que garantizan el funcionamiento confiable del producto, evitando que se recaliente. Estas aberturas no deberán ser bloqueadas, nunca se tute el grabador de videocassettes encima de una cama, sofá, alfombra u otra superficie similar. El grabador de videocassettes no debe ser instalado en un mueble empujable, como una repisa para libros o bastidor, a menos que se pueda garantizar una ventilación adecuada, o cuando las instrucciones del fabricante así lo especifiquen.
- 11) Alimentación - Este grabador de videocassettes sólo debe ser operado mediante el tipo de fuente de alimentación especificado en la etiqueta indicadora. Si no se usa el tipo de fuente de alimentación que tiene en su casa, consulte a su distribuidor o a la compañía de electricidad local. En el caso de grabador de diseños para funcionar a pilas o con otras fuentes de alimentación, consulte el manual de instrucciones respectivo.
- 12) Conexión a tierra o polarización - Este producto está equipado con una clavija polarizada de corriente alterna (una clavija que tiene una espiga más ancha que la otra). Esta clavija solamente podrá ser insertada en el tomacorriente en una sola dirección. Esta es una medida de seguridad. Si no pudiera insertar completamente la clavija en el tomacorriente, vuelva a intentarlo invirtiendo la clavija. Si aún no fuera posible insertar la clavija, tome contacto con un electricista para que repare su tomacorriente obsoleto. No modifique las características de seguridad de la clavija polarizada.
- 13) Protección del cable de alimentación - Los cables de alimentación deberán ser tendidos de manera tal que la probabilidad de que sean pisados o aplastados por otros objetos sea mínima. Preste especial atención a las clavijas de los cables, a los receptáculos, y al punto por donde salen del producto.
- 14) Conexión Tierra de una Antena Exterior: Si una antena exterior o sistema de cable es conectado al aparato de vídeo, asegúrese de que la antena o el cableado tenga conexión tierra para conseguir de esta manera una protección contra voltajes no deseados y cargas estáticas. El artículo 810 del Código de Electricidad Nacional ANSI/NFPA número 70, proporciona información acerca de la manera adecuada de conexiones a tierra de la estructura del mástil y la estructura soporte, sobre la unidad del cable del interior de cobre de antena, tamaño de los conductores tierra, ubicación de la



unidad de descarga de la antena, conexión a los electrodos tierra, y requerimientos de los electrodos tierra (Fig. A).

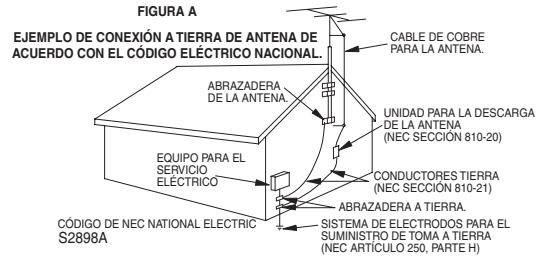

- 15) Tormentas eléctricas - Como medida adicional de protección durante tormentas eléctricas, o cuando el producto permanezca sin uso durante períodos prolongados de tiempo, desconéctelo del tomacorriente mural y desconecte la antena o sistema de cable. Esto evitará que el grabador de videocassettes resulte dañado por tormentas eléctricas o sobretensiones en la línea de alimentación.
- 16) Líneas de alimentación - Una antena exterior no debe ser instalada en la cercanía de líneas de alimentación aéreas ni de otros circuitos de potencial para iluminación eléctrica, o donde pueda caerse y hacer contacto con tales líneas o circuitos. Al instalar un sistema de antena exterior, entienda mucho cuidado de no tocar tales líneas o circuitos de alimentación, ya que el contacto con ellos podría ser fatal.
- 17) Sobrecarga - No sobrecargue los tomacorrientes murales ni los cables de extensión, ya que esto podría causar incendios o descargas eléctricas.
- 18) Entrada de objetos y líquidos - Nunca introduzca objetos de ningún tipo por las aberturas de este producto, ya que podría tocar peligrosos puntos de alta tensión o cortocircuitar partes, provocando incendios o descargas eléctricas. Nunca derrame ningún tipo de líquido sobre el producto.
- 19) Servicio - No intente reparar el producto usted mismo; al abrir o desmontar las coberturas usted se expondrá a alta tensión y a otros peligros. Solicite todo servicio a personal calificado.
- 20) Daños que requieran reparación - En los siguientes casos, desconecte el producto del tomacorriente mural y llame a un técnico de servicio calificado:
  - a) Cuando el cable de alimentación o la clavija estén dañados,
  - b) Si se ha derramado líquido sobre la unidad, o si algún objeto ha caído dentro del producto,
  - c) Si el producto ha sido expuesto a la lluvia o al agua,
  - d) Cuando a pesar de haber seguido las instrucciones de operación, el producto no funcione normalmente. Ajuste solamente los controles mencionados en el manual de instrucciones; el ajuste incorrecto de otros controles podrá causar daños a la unidad, la que por lo general requerirá de un prolongado trabajo de reparación (por un técnico calificado) para que sus condiciones normales de operación puedan ser restablecidas,
  - e) Si el producto se ha caído o si el gabinete se ha dañado.
  - f) Cuando el producto muestre un cambio notorio en su rendimiento.
- 21) Piezas de reemplazo - Cuando sea necesario reemplazar piezas, asegúrese de que el técnico de servicio emplee las piezas de reemplazo especificadas por el fabricante, o piezas que tengan las mismas características que las piezas originales. Las sustituciones no autorizadas podrán causar incendios, descargas eléctricas y otros problemas.
- 22) Revisión de seguridad - Al finalizar cualquier servicio de mantenimiento o reparación de este producto, solicite al técnico que efectúe comprobaciones de seguridad para determinar si el producto se encuentra o no en condiciones óptimas de operación.
- 23) Calor - Este producto debe colocarse fuera del alcance de fuentes de calor tales como radiadores, rejillas de calefacción, estufas o cualquier otro producto destinado a producir calor, incluyendo los amplificadores.

## Fácil grabación de DVD

Estas instrucciones le ayudarán a entender fácilmente cómo grabar discos DVD.

### Nota:

Asegúrese que las pilas están en el mando a distancia y que ha conectado correctamente esta unidad y el TV.

### Paso 1: Elija un tipo de disco

Puede elegir entre distintos tipos de discos DVD grabables. Elija un tipo de disco DVD grabable de acuerdo con sus necesidades de reproducción/grabación. Vea los "tipos de discos DVD" en la parte inferior de esta página para más detalles sobre las diferencias entre los distintos medios compatibles.

Este grabador de DVD puede grabar los siguientes tipos de discos.



\* Esta unidad no puede grabar en los discos siguientes.

 
- DVD-RW Ver 1.2 / 2-4x compatible con CPRM
- DVD-R General Ver 2.0 / 8x

Por ejemplo, cuando desea grabar repetidamente en el mismo disco o cuando desea editar el disco después de grabar, seleccione el disco de tipo regrabable DVD-RW.


Cuando desea guardar grabaciones sin alterarlos, un DVD no regrabable DVD-R puede ser más conveniente.

### Paso 2: Coloque un disco en blanco

**Mando a distancia**

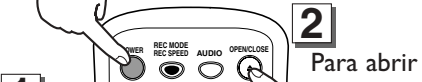

**1**  
Para encender

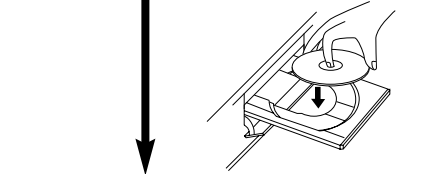

**2**  
Para abrir



**3**  
Para cerrar

Esta operación puede demorar en reconocerse.

### Tipos de disco DVD

☆☆☆ : Más adecuado    ☆☆☆ : Puede utilizar    ☆ : Algunas funciones son limitadas    — : No puede utilizar

Desea	DVD-RW VR	DVD-RW Video	DVD-R
Grabar programas de TV	☆☆☆	☆☆☆	☆☆
Volver a utilizar borrando partes no deseadas	☆☆☆	☆☆	—
Editar las grabaciones	☆☆☆	☆	☆
Editar/grabar de equipos conectados	☆☆☆	☆☆☆	☆☆☆
Copiar discos para distribución	☆☆ <sup>*1</sup>	☆☆☆	☆☆☆
Reproducir en otro equipo de DVD	☆☆ <sup>*1</sup>	☆☆☆	☆☆☆

Detalles	DVD-RW VR	DVD-RW Video	DVD-R
<b>Grabación</b>			
¿Regrabable?	Sí	Sí	No
Puede crear capítulos a intervalos fijos (auto.)	Sí	Sí	Sí
Puede crear capítulos donde desee (manual)	Sí	No	No
Puede grabar imágenes de tamaño 16:9	Sí	Sí	Sí
Puede grabar un programa de Copia-una-vez	Sí	No	No
<b>Edición</b>			
Puede hacer funciones de edición básica	Sí	Sí	Sí
Puede hacer funciones de edición avanzadas (edición de lista a reproducir)	Sí	No	No

\*1 El DVD-RW (modo VR) sólo puede reproducirse en equipos de DV compatibles con VR.

**Nota:**  
Para más detalles sobre las funciones anteriores y las limitaciones implícitas, lea las explicaciones en este manual.


### Formato del disco

Coloque el disco en el grabador. Haga el formato del disco del menú SETUP, existen los formatos de video (modo de Video) o de grabación de video (modo VR) según el tipo de disco colocado. Esto es necesario para preparar el disco para grabación. Vea los detalles en las páginas 29-30. Al formatear, todo el contenido de ese disco se borrarán.

- La unidad empieza a formatear automáticamente cuando se inserta un disco no usado.

**Paso 3: Seleccione la velocidad de grabación**



1 Para seleccionar el modo DVD

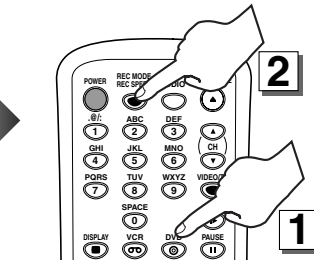


2 Para seleccionar la velocidad de grabación



**Paso 4: Seleccione el canal deseado**

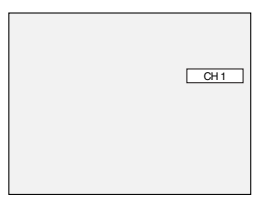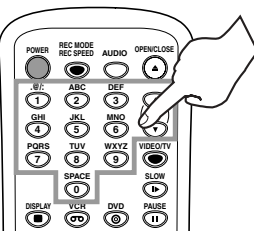

**Paso 5: Grabe en discos DVD**

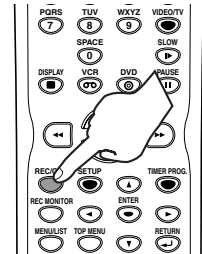


**Sugerencia 1: Reproduzca el contenido grabado**

Puede seleccionar el título que desea reproducir de un menú indicado y empiece a reproducir inmediatamente. El contenido grabado se puede acceder fácilmente con un simple procedimiento de elegir un título en un capítulo en la pantalla del menú.

**¿Qué son títulos y capítulos?**

El contenido de un disco DVD se divide generalmente en títulos. Los títulos pueden dividirse a su vez en capítulos.

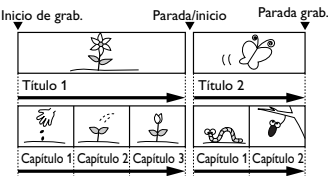

**Sugerencia 2: Edite el disco grabado**

La edición de discos es fácil. Esta unidad ofrece convenientes funciones de edición que sólo son posibles con discos DVD-R/RW.

**Puede editar lo siguiente de la lista de títulos.**

- Poniendo nombres en títulos
- Seleccionando imágenes para índices (modo VR)
- Seleccionando/borrando marcadores de capítulos
- Borrado de partes de títulos o escenas (modo VR)

**Title Delete:** Esto borra permanentemente una escena completa del disco.

**Scene Delete:** Esto permite que el usuario edite dentro de una escena específica (anuncios comerciales, por ejemplo).

**Original y Playlist (modo VR)**

Puede editar las grabaciones en la lista a reproducir sin cambiar las grabaciones originales. Cualquier lista a reproducir no ocupa mucho espacio en el disco.

**¿Qué significa "Original" o "Playlist"?**




A lo largo de este manual encontrará *Original* y *Playlist* que se refieren a las grabaciones reales y la versión editada.

- La grabación **Original** se refiere a la grabación real en el disco.
- El **Playlist** se refiere a la versión editada del disco; cómo se va a reproducir la versión Original.

**Finalización de un disco**

- Esto permitirá que un disco que se grabe en nuestra unidad pueda ser reproducido en un reproductor DVD diferente. Un disco sin finalizar no se podrá reproducir en otro reproductor.
- Después de finalizar un disco, si la grabación se hizo en el modo de vídeo, usted no podrá editar ninguna información que se encuentre en ese disco.
- Si ha grabado en el modo VR en un disco DVD-RW, la edición podrá realizarse incluso después de la finalización.

 **Paso 6: Pare la grabación**

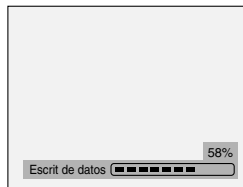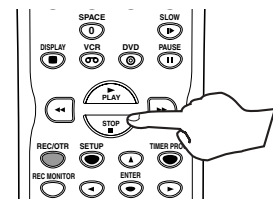

Esta operación puede demorar en completarse.

## Reproducción con videograbadora



**1**

Presione el botón **POWER** en el mando a distancia o el panel frontal de la unidad. Cuando reproduzca una cinta, conecte el TV y asegúrese de seleccionar la entrada donde se conecta la unidad.

Presione:

**2**

Coloque una cinta pregrabada y presione el botón **PLAY** ► para empezar la reproducción.

**3**

Durante la reproducción, presione el botón **PAUSE** II. Se hará una pausa de reproducción y se silenciará el sonido.

**4**


Presione el botón **PLAY** ► para continuar la reproducción.

**5**

Presione el botón **STOP** ■ para detener la reproducción.

**6**

Presione el botón **STOP/EJECT** ■ ▲ en el panel frontal de la unidad para expulsar la cinta.

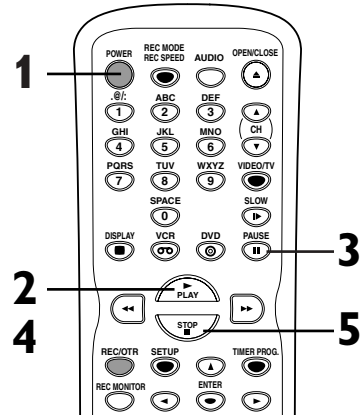

### Nota

- Cuando se coloca una cinta sin la lengüeta de grabación, la unidad empezará a reproducir automáticamente.
- El seguimiento se ajustará automáticamente para la reproducción. Para ajustar manualmente el seguimiento, presione los botones CHANNEL ▲/▼ en el panel frontal de la unidad o los botones CH▲/CH▼ en el mando a distancia.

## Grabación y grabación con temporizador de un toque (VCR)

### Grabación



Antes de grabar, asegúrese de que:

- Se seleccionó el canal deseado presionando los botones numéricos en el mando a distancia o botones CHANNEL ▲/▼ en el panel frontal de la unidad.
- Hay una cinta con la lengüeta para grabación intacta en la unidad.
- Se seleccionó la velocidad de grabación deseada en SP (reproducción estándar) o SLP (reproducción de super larga duración) presionando el botón REC MODE/REC SPEED en el mando a distancia.

#### Velocidad de grabación:

Velocidad de la cinta	Tiempo de grabación/reproducción		
	T60	T120	T160
Modo SP	1 hora	2 horas	2-2/3 horas
Modo SLP	3 horas	6 horas	8 horas

- Se selecciona Estéreo o SAP.


Primero:

**1**  
**Presione el botón REC/OTR para empezar la grabación.** Para detener temporalmente la grabación o continuarla, presione el botón PAUSE **II**. Después de que la unidad haya estado en el modo de pausa durante 5 minutos, se detendrá automáticamente para proteger al cinta y el cabezal de video contra cambios.

**2**  
**Presione el botón STOP cuando se complete la grabación.**

#### Prevención contra borrado accidental

Para evitar una grabación por accidente en un casete grabado, rompa la lengüeta de grabación. Para volver a grabar posteriormente, cubra el orificio con cinta adhesiva.

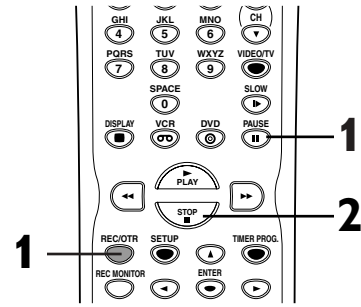

#### Nota

- Para ver un canal mientras graba en otro
  - 1) Mientras está grabando en la unidad, presione el botón VIDEO/TV.
  - 2) En la caja de cable o caja de satélite, seleccione el canal que desea ver. Si se conectó la unidad a una caja de cable o caja de satélite, consulte la sección de "Connection to a cable box or satellite box" en la página 15.

### Grabación con temporizador de un toque (OTR)

 


Esta función permite seleccionar la longitud de la grabación simplemente presionando el botón REC/OTR en el mando a distancia o en el panel frontal de la unidad.

Primero:


**1**  
**Durante la grabación normal, presione el botón REC/OTR para empezar la grabación con temporizador de un toque.**

Puede seleccionar un tiempo de grabación determinado presionando repetidamente el botón REC/OTR.

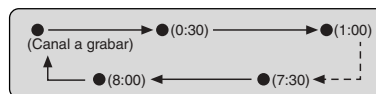

Cuando termina la grabación con temporizador de un toque, la unidad se desconectará automáticamente.

Para cancelar la grabación con temporizador de un toque dentro del tiempo especificado, presione el botón STOP **■**.

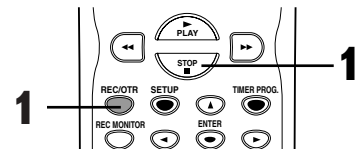

#### Nota

- El tiempo de grabación remanente aparecerá en la pantalla durante una grabación con temporizador de un toque. Presione el botón DISPLAY para que aparezca en la pantalla de TV.
- No puede hacer una pausa en una grabación con temporizador de un toque.
- Si se termina el OTR en la videograbadora durante el modo de reproducción o REC en DVD, la videograbadora estará en el modo STOP y la DVD se mantiene en el modo actual.
- A diferencia de una grabación con temporizador, durante una grabación con temporizador de un toque usted puede realizar las operaciones siguientes.
  - Desconectar la alimentación
  - Utilizar los botones REC o STOP **■**.

**Note**

**Note**

# CONSUMER LIMITED WARRANTY

(Valid for warranty service in the U.S. only)

SHARP ELECTRONICS CORPORATION warrants to the first consumer purchaser that this Sharp brand product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth below and provide proof of purchase to the servicer.

The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Sharp.

The warranties described herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Sharp be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized servicer. Nor shall Sharp be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

## Model Specific Section

**Your Product Model Number & Description:** DV-RW340U, DV-RW350U VCR/DVD Recorder Combination

(Be sure to have this information available when you need service for your Product.)

**Warranty Period for this Product:** One (1) year parts and ninety (90) days labor from date of purchase.

**Additional Item(s) Excluded from warranty Coverage (if any):** Non-rechargeable batteries.

**Where to Obtain Service:** Call Sharp Electronics corporation toll free at 1-800-BE-SHARP for instructions on how to obtain service on your VCR/DVD Recorder combination.

**What to do to Obtain Service:** Ship your product, prepaid, as per the instruction given by the Sharp representative at the toll free number (1-800-BE-SHARP). BE sure to have your proof of purchase available. Be sure to ship the product securely packaged and insured against shipping damage.

TO OBTAIN SUPPLY, ACCESSORY OR PRODUCT INFORMATION, GO TO OUR WEBSITE AT [www.sharppusa.com](http://www.sharppusa.com) OR CALL 1-800-BE-SHARP.

# SHARP®

**SHARP ELECTRONICS CORPORATION**

Sharp Plaza, Mahwah, New Jersey 07430-2135

**SHARP CORPORATION**

Osaka, Japan

9HS1VMN20224  
E9434UD/E9435UD★★★★★  
1VMN20224

Printed in China



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>