


SHARP®

DIGITAL MULTIFUNCTIONAL SYSTEM
MX-M365N/MX-M465N/MX-M565N

QUICK START GUIDE

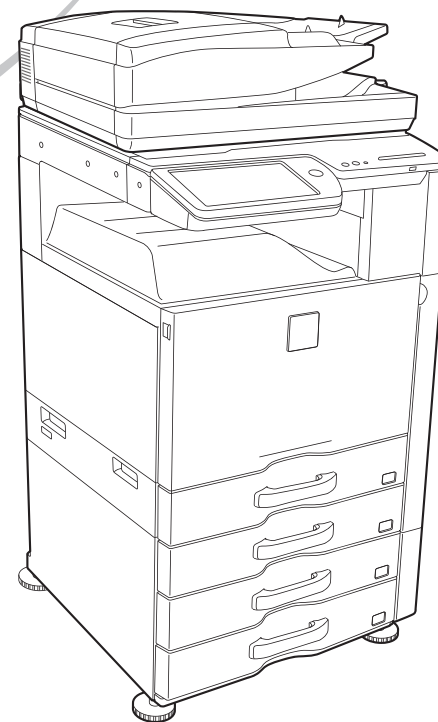

Keep this manual close at hand for reference whenever needed.

For the users of the fax function

■ Important safety instructions

- If any of your telephone equipment is not operating properly, you should immediately remove it from your telephone line, as it may cause harm to the telephone network.
- Never install telephone wiring during a lightning storm.
- Never install telephone sockets in wet locations unless the socket is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use a telephone to report a gas leak in the vicinity of the leak.
- Do not install or use the machine near water, or when you are wet. Take care not to spill any liquids on the machine.
- Save these instructions.

FAX interface cable and Line cable

These special accessories must be used with the device.

The Declaration of Conformity is included in optional Facsimile expansion kit (MX-FX11).

Caution!

For complete electrical disconnection, pull out the main plug.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

Shielded interface cables must be used with this equipment to maintain compliance with EMC regulations.

The equipment should be installed near an accessible socket outlet for easy disconnection.

Each instruction also covers the optional units used with these products.

Notice for Users in Europe





Hereby, SHARP ELECTRONICS declares that this Digital Multifunctional System MX-M365N/MX-M465N/MX-M565N is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The declaration of conformity may be consulted at:

["http://www.sharp.de/doc/MX-M365N_MX-M465N_MX-M565N.pdf"](http://www.sharp.de/doc/MX-M365N_MX-M465N_MX-M565N.pdf)

Notice for users in the UK

MAINS PLUG WIRING INSTRUCTIONS

The mains lead of this equipment is already fitted with a mains plug which is either a non-rewireable (moulded) or a rewireable type. Should the fuse need to be replaced, a BSI or ASTA approved fuse to BS1362 marked  or  and of the same rating as the one removed from the plug must be used.

Always refit the fuse cover after replacing the fuse on the moulded plug. Never use the plug without the fuse cover fitted.

In the unlikely event of the socket outlet in your home not being compatible with the plug supplied either cut-off the moulded plug (if this type is fitted) or remove by undoing the screws if a rewireable plug is fitted and fit an appropriate type observing the wiring code below.


DANGER: The fuse should be removed from the cut-off plug and the plug destroyed immediately and disposed of in a safe manner. Under no circumstances should the cut-off plug be inserted elsewhere into a 13A socket outlet as a serious electric shock may occur.

To fit an appropriate plug to the mains lead, follow the instructions below:

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

GREEN-AND-YELLOW:	Earth
BLUE:	Neutral
BROWN:	Live

As the colours of the wires in this mains lead may not correspond with coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured **GREEN-AND-YELLOW** must be connected to the terminal in the plug which is marked with the letter **E**, or by the safety earth symbol , or coloured green or greenand-yellow.

The wire which is coloured **BLUE** must be connected to the terminal which is marked with the letter **N** or coloured black.

The wire which is coloured **BROWN** must be connected to the terminal which is marked with the letter **L** or coloured red.

If you have any doubt, consult a qualified electrician.

WARNING: THIS APPARATUS MUST BE EARTHED.

EMC (this machine and peripheral devices)

Warning:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

This machine contains the software having modules developed by Independent JPEG Group.

This product includes Adobe® Flash® technology of Adobe Systems Incorporated.

Copyright© 1995-2007 Adobe Macromedia Software LLC. All rights reserved.

This product includes the Adobe® PostScript®3™ of Adobe Systems Incorporated.

This product uses "InstantBoot" provided by IT Access Co., Ltd., Japan.

Wireless LAN

The communication range of wireless LAN may shorten or communication may not be possible in some usage environments, due to shielding materials, the installation location, the effects of ambient radio noise, data transmission speed, and other factors.

SOFTWARE LICENCE

The SOFTWARE LICENCE will appear when you install the software from the CD-ROM. By using all or any portion of the software on the CD-ROM or in the machine, you are agreeing to be bound by the terms of the SOFTWARE LICENCE.

The explanations in this manual are based on American English and the North American version of the software.

Software for other countries and regions may vary slightly from the North American version.

- The explanations in this manual assume that you have a working knowledge of your Windows or Macintosh computer.
 - For information on your operating system, please refer to your operating system manual or the online Help function.
 - The explanations of screens and procedures in this manual are primarily for Windows 7® in Windows® environments. The screens may vary depending on the version of the operating system.
 - Considerable care has been taken in preparing this manual. If you have any comments or concerns about the manual, please contact your dealer or nearest authorised service representative.
 - This product has undergone strict quality control and inspection procedures. In the unlikely event that a defect or other problem is discovered, please contact your dealer or nearest authorised service representative.
 - Aside from instances provided for by law, SHARP is not responsible for failures occurring during the use of the product or its options, or failures due to incorrect operation of the product and its options, or other failures, or for any damage that occurs due to use of the product.
-



Products that have earned the ENERGY STAR® are designed to protect the environment through superior energy efficiency. The products that meet the ENERGY STAR® guidelines carry the ENERGY STAR® logo. The products without the logo may not meet the ENERGY STAR® guidelines.

■ Warranty

While every effort has been made to make this document as accurate and helpful as possible, SHARP Corporation makes no warranty of any kind with regard to its content. All information included herein is subject to change without notice. SHARP is not responsible for any loss or damages, direct or indirect, arising from or related to the use of this operation manual.

© Copyright SHARP Corporation 2013. All rights reserved. Reproduction, adaptation or translation without prior written permission is prohibited, except as allowed under copyright laws.

MATERIAL SAFETY DATA SHEET

The MSDS (Material Safety Data Sheet) can be viewed at the following URL address: <http://www.sharp-world.com/corporate/info/index.html>

Contents


OPERATION MANUALS AND HOW TO USE THEM	6	MAINTENANCE	17
USER'S MANUAL DOWNLOAD	7	SPECIFICATIONS	18
CAUTIONS	8	SUPPLIES	24
Symbols in this manual	8	OTHERS	25
Power notes	8	INFORMATION ON DISPOSAL	26
Installation notes	9	TO THE ADMINISTRATOR OF THE MACHINE	27
About consumables	10		
Handling precautions	10		
PART NAMES	12		
TURNING THE POWER ON AND OFF	13		
HOME SCREEN	14		
For operating the touch panel and functions the icon.			
OVERVIEW OF COPY OPERATION	15		
OVERVIEW OF OTHER OPERATIONS	16		
For functions other than copy.			

OPERATION MANUALS AND HOW TO USE THEM

Quick Start Guide (this document)


Features important safety notes, names of parts and components, information about the power-on procedure, operation overviews, information for people who manage the machine, and information about other aspects of this machine.

Read this section before using the machine for the first time.

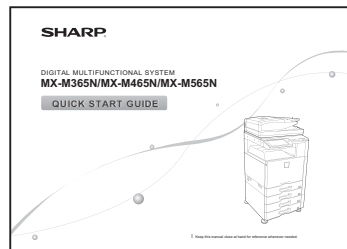

Software Setup Guide (CD-PDF)

Explains how to install the various drivers needed when using this machine as a printer, network scanner, or fax machine. Refer to this document when using this machine from a computer. The Software Setup Guide can be found on the "Software CD-ROM".

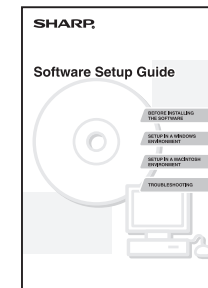


User's Manual

Can be downloaded from the machine to a computer and viewed. Refer to this document to learn more about printer mode and settings mode, and to learn about the details of each type of mode.



Operation Guide

Can be viewed by touching the operation guide icon on the machine's touch panel. When you are using this machine, use this document to see an overview of a particular mode or when you are having trouble operating the machine.

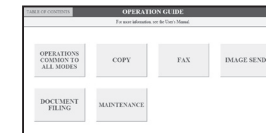


About the User's Manual

The "User's Manual" describes details of the functions available on this machine.

You can download the User's Manual from this machine to your computer and then view it using a web browser.

For information on how to download the User's Manual, see "USER'S MANUAL DOWNLOAD" on page 7.

Switch the tab and click the menu shown on the left to display the function you require.

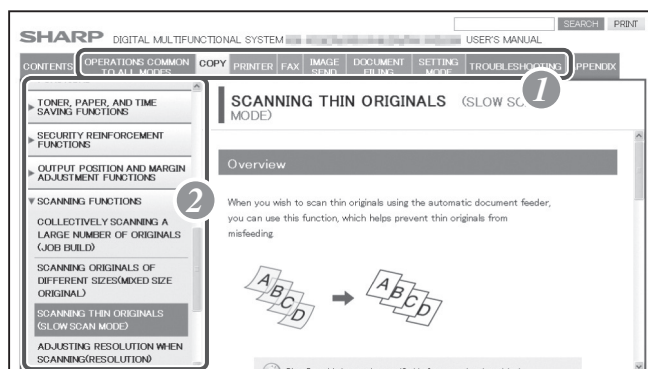

- 1 Click to switch the tab for the mode you want to view.
- 2 From the left-hand menu, click the item you want to view.

Tips

You can also look up the function you require using the Contents, Index, or search function. The above will help you locate the page containing the procedure describing what you want to do.

- OPERATIONS COMMON TO ALL MODES
- COPY
- PRINTER
- FAX
- IMAGE SEND
- DOCUMENT FILING
- SETTING MODE
- TROUBLESHOOTING
- APPENDIX

USER'S MANUAL DOWNLOAD

You can download the User's Manual by accessing the built-in web server of this machine. You can print the All Custom Setting List to check the machine's IP address.

Checking the IP address

To check the IP address, you can print the All Custom Setting List from the machine.

- 1 Press the [Home Screen] key.



- 2 Tap the [Settings] key.



- 3 Operate the touch panel.

- (1) Tap the [System Settings] key in the left menu.
- (2) Tap the [List Print: (User)] key in the left menu.
- (3) Tap the [Print] key in the [All Custom Setting List].


The All Custom Setting List is printed. You can check the IP address on the printed list.

Downloading the User's Manual

From the web page, download the "User's Manual" that provides more detailed information on this machine.


- 1 In the address bar of a web browser, type the machine's IP address to access the machine.

http://Machine's IP address/ Depending on the machine settings, user authentication may be required. For the account information required for authentication, contact the machine administrator.

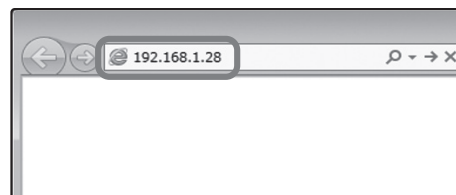

- 2 Download the "User's Manual".

On the page that is displayed, click [Operation Manual Download]. Then, select the language from the "Language" list, and click the [Download] button.

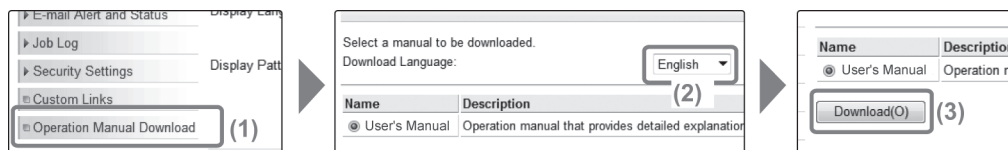


- 3 Expand the "User's Manual" you have downloaded.

If you are using Windows, right-click the downloaded file and select [Expand All] from the menu.*
If you are using a Macintosh, double-click the downloaded file.
Follow the instructions that appear in the Deployment Wizard.
When the expansion process is completed, the [User's Manual] folder is created.
* If [Expand All] does not appear in the menu, use any expansion (unzip) application.

- 4 View the "User's Manual" you have downloaded.

Open the [User's Manual] folder, and double-click "index.htm".

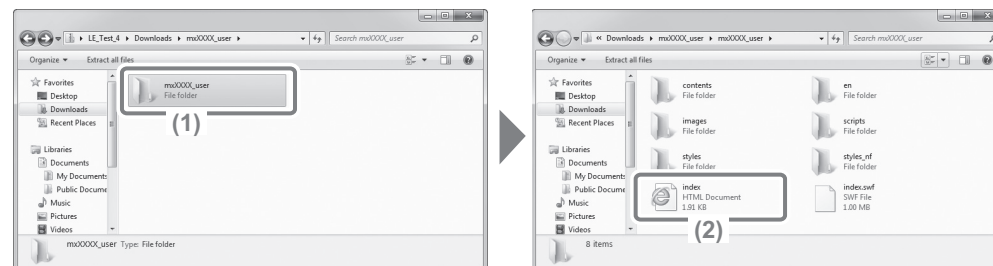

CAUTIONS

Symbols in this manual

To ensure safe use of the machine, this manual uses various safety symbols. The safety symbols are classified as explained below. Be sure you understand the meaning of the symbols when reading the manual.

 
 


Indicates a risk of death or serious injury.



Indicates a risk of human injury or property damage.

Meaning of the symbols



Power notes



 
Be sure to connect the power cord only to a power outlet that meets the specified voltage and current requirements. Also make certain the outlet is properly grounded. Do not use an extension cord or adapter to connect other devices to the power outlet used by the machine. Using an improper power supply may cause fire or electrical shock.

* For the power supply requirements, see the name plate in the lower left corner of the left side of the machine.



Do not damage or modify the power cord.

Placing heavy objects on the power cord, pulling it, or forcibly bending it will damage the cord, resulting in fire or electrical shock.



Do not insert or remove the power plug with wet hands.

This may cause electrical shock.



When removing the power plug from the outlet, do not pull on the cord.

Pulling on the cord may cause damage such as wire exposure and breakage, and may result in fire or electrical shock.



If you will not use the machine for a long time, be sure to remove the power plug from the outlet for safety.



When moving the machine, switch off the main power and remove the power plug from the outlet before moving.

The cord may be damaged, creating a risk of fire or electrical shock.

Installation notes

⚠ CAUTION

- ⊘ **Do not install the machine on an unstable or slanted surface. Install the machine on a surface that can withstand the weight of the machine.**

Risk of injury due to the machine falling or toppling.

If peripheral devices are to be installed, do not install on an uneven floor, slanted surface, or otherwise unstable surface. Danger of slippage, falling, and toppling. Install the product on a flat, stable surface that can withstand the weight of the product.

- ⊘ **Do not install in a location with moisture or dust.**

Risk of fire and electrical shock.

If dust enters the machine, dirty output and machine failure may result.




- ⊘ **Locations that are excessively hot, cold, humid, or dry (near heaters, humidifiers, air conditioners, etc.)**

The paper will become damp and condensation may form inside the machine, causing misfeeds and dirty output.

☞ SPECIFICATIONS (page 18)

If the location has an ultrasonic humidifier, use pure water for humidifiers in the humidifier. If tap water is used, minerals and other impurities will be emitted, causing impurities to collect on the inside of the machine and create dirty output.

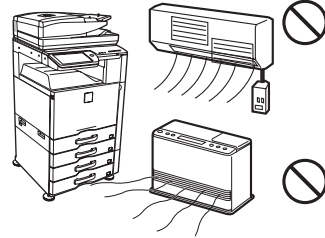


- ⚠ **When the machine is installed, the adjusters (4) must be lowered to the floor to secure the machine (prevent it from moving).**

Rotate the adjusters in the locking direction until they are in firm contact with the floor.


If you find it necessary to reposition the machine due to rearrangement of your office layout or other reason, retract the adjusters from the floor, turn off the power, and then move the machine.

 (After moving the machine, lower the adjusters again to secure the machine.)




- ⊘ **Locations exposed to direct sunlight**

Plastic parts may become deformed and dirty output may result.

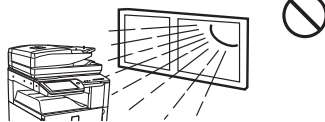

- ⊘ **Locations with ammonia gas**


Installing the machine next to a diazo copy machine may cause dirty output.

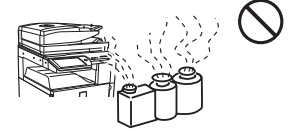

- ⊘ **Do not install the machine in a location with poor air circulation.**


A small amount of ozone is created inside the machine during printing. The amount of ozone created is not sufficient to be harmful; however, an unpleasant odor may be noticed during large copy runs, and thus the machine should be installed in a room with a ventilation fan or windows that provide sufficient air circulation. (The odor may occasionally cause headaches.)

* Install the machine so that people are not directly exposed to exhaust from the machine. If installed near a window, ensure that the machine is not exposed to direct sunlight.

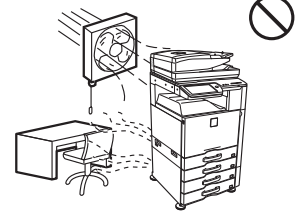


- ⊘ **Near a wall**

Be sure to allow the required space around the machine for servicing and proper ventilation. (The machine should be no closer than the distances indicated below from walls. The indicated distances are for the case when a saddle finisher and large capacity paper tray are not installed.)

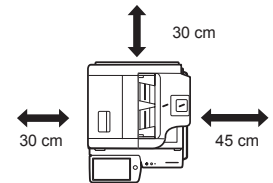

- ⊘ **Locations subject to vibration.**

Vibration may cause failure.

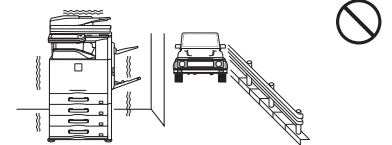

⚠ CAUTION

The machine includes a built-in hard drive. Do not subject the machine to shock or vibration. In particular, never move the machine while the power is on.

- The machine should be installed near an accessible power outlet for easy connection.
- Connect the machine to a power outlet which is not used for other electric appliances. If a lighting fixture is connected to the same outlet, the light may flicker.

About consumables

CAUTION



Do not throw a toner cartridge into a fire.

Toner may fly and cause burns.



Store a toner cartridge out of the reach of children.

Handling precautions

WARNING



Do not place a container of water or other liquid, or a metal object that might fall inside, on the machine.

If the liquid spills or the object falls into the machine, fire or electrical shock may result.



Do not remove the machine casing.

High-voltage parts inside the machine may cause electrical shock.



Do not make any modifications to this machine.

Doing so may result in personal injury or damage to the machine.



Do not use a flammable spray to clean the machine.

If gas from the spray comes in contact with hot electrical components or the fusing unit inside the machine, fire or electrical shock may result.



If you notice smoke, a strange odor, or other abnormality, do not use the machine.

If used in this condition, fire or electrical shock may result. Immediately switch off the main power and remove the power plug from the power outlet.

Contact your dealer or nearest authorised service representative.




If a thunder storm begins, switch off the main power and remove the power plug from the outlet to prevent electrical shock and fire due to lightning.




If a piece of metal or water enters the machine, switch off the main power and remove the power plug from the power outlet.


Contact your dealer or nearest authorised service representative. Using the machine in this condition may result in electrical shock or fire.


! CAUTION

 **Do not look directly at the light source.**
Doing so may damage your eyes.

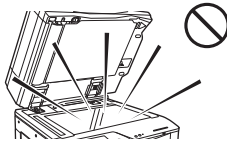

The fusing unit and paper exit area are hot. When removing a misfeed, do not touch the fusing unit and paper exit area. Take care not to burn yourself.

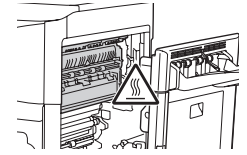


 **Do not block the ventilation ports on the machine. Do not install the machine in a location that will block the ventilation ports.**

Blocking the ventilation ports will cause heat to build up in the machine, creating a risk of fire.



 When loading paper, removing a misfeed, performing maintenance, closing the front and side covers, and inserting and removing trays, take care that your fingers are not pinched.



The machine includes the document filing function, which stores document image data on the machine's hard drive. Stored documents can be called up and printed or transmitted as needed. If a hard drive failure occurs, it will no longer be possible to call up the stored document data. To prevent the loss of important documents in the unlikely event of a hard drive failure, keep the originals of important documents or store the original data elsewhere. With the exception of instances provided for by law, Sharp Corporation bears no responsibility for any damages or loss due to the loss of stored document data.

Laser information


Wave length	MX-M365N 790 nm ± 10 nm MX-M465N/MX-M565N 792 nm + 8 nm / -12 nm
Pulse times	MX-M365N Normal paper mode / Heavy paper mode (P/S = 175 mm/s) = 4.49 μs ± 0.014 μs / 7 mm MX-M465N Normal paper mode (P/S = 225 mm/s) = 6.98 μs ± 0.022 μs / 7 mm MX-M565N Normal paper mode (P/S = 255 mm/s) = 6.16 μs ± 0.019 μs / 7 mm MX-M465N / MX-M565N Heavy paper mode (P/S = 175 mm/s) = 8.98 μs ± 0.028 μs / 7 mm
Output power	MX-M365N Max 1.0 mW (LD1+LD2) MX-M465N / MX-M565N Max 1.0 mW (LD1+LD2+LD3+LD4)

■ Caution

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This Digital Equipment is CLASS 1 LASER PRODUCT (IEC 60825-1 Edition 2-2007)

PART NAMES

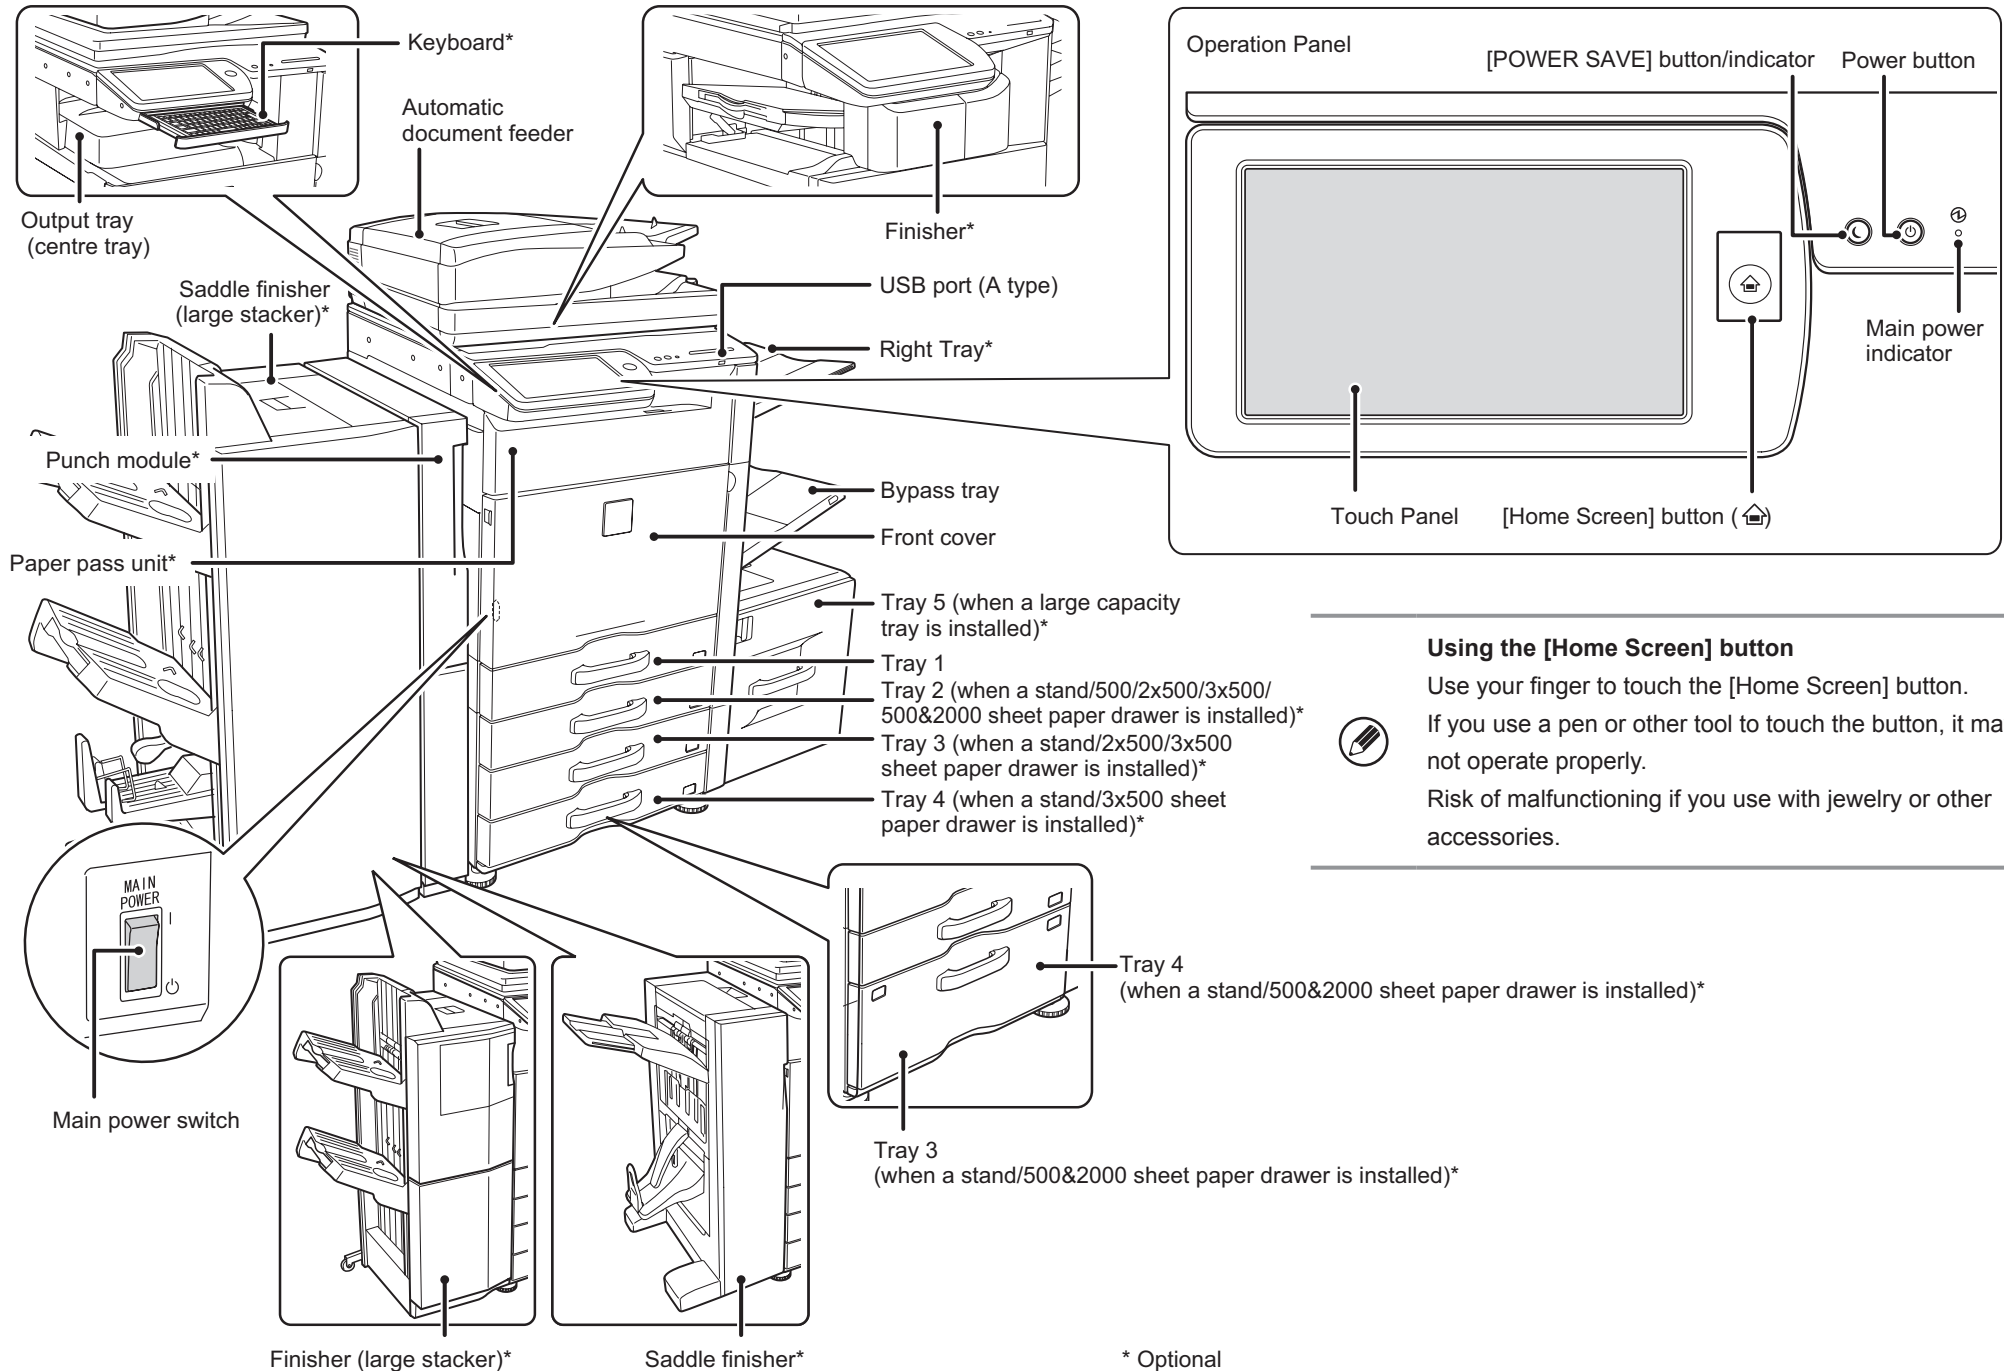

Using the [Home Screen] button

Use your finger to touch the [Home Screen] button.
 If you use a pen or other tool to touch the button, it may not operate properly.
 Risk of malfunctioning if you use with jewelry or other accessories.

* Optional

TURNING THE POWER ON AND OFF

This machine has a main power switch, found at the bottom left after the front cover is opened, and a power button (⏻), located on the operation panel.

Turning on the power

- Switch the main power switch to the “|” position.
- After the main power indicator lights in green, press the power button (⏻).

Turning off the power


- (1) Press the power button (⏻) to turn off the power.
- (2) Switch the main power switch to the “⏻” position.

Restarting the machine

In order for some settings to take effect, the machine must be restarted. If a message in the touch panel prompts you to restart the machine, press the power button (⏻) to turn off the power and then press the key again to turn the power back on.


CAUTION

- When turning off the power, make sure that the indicators on the operation panel turn off as well.
- If the machine suddenly turns off, such as in the event of a power failure, turn the machine on again, and then turn off the machine following the correct procedure for turning off the machine.
Switching off the main power switch or removing the power cord from the outlet while any of the indicators are lit or blinking may damage the hard drive and cause data to be lost.
- Switch off both the power button (⏻) and the main power switch and unplug the power cord if you suspect a machine failure, if there is a bad thunderstorm nearby, or when you are moving the machine.

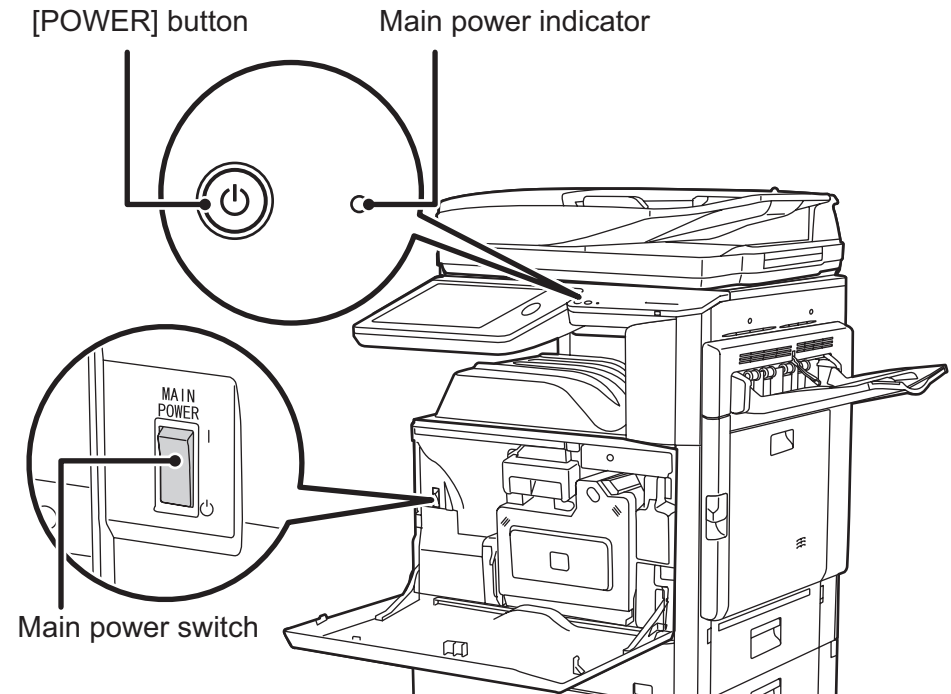


- When using the fax or Internet fax function, always keep the main power switch in the “|” position.
- In some states of the machine, pressing the power button (⏻) to restart will not make the settings take effect. In this case, use the main power switch to switch the power off and then on.

HOME SCREEN





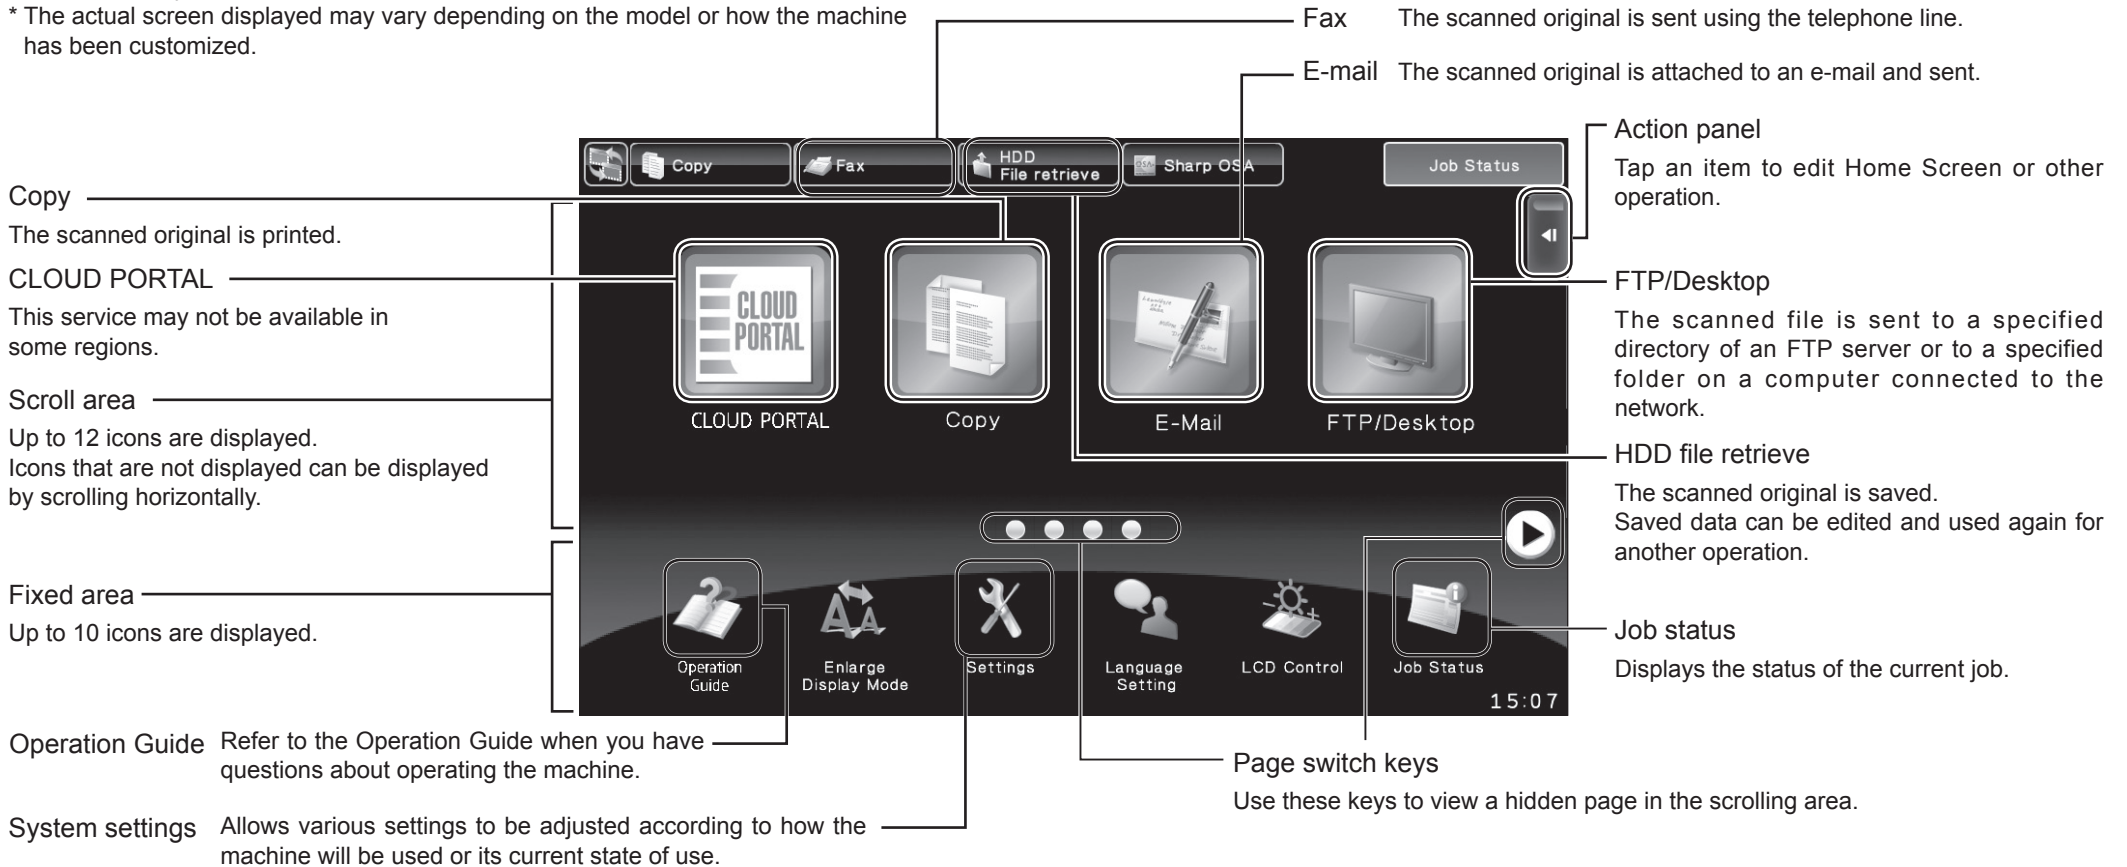



The home screen is the first screen to be displayed. Touch an icon to display the corresponding screen. When the  button is touched on the operation panel, this home screen is displayed.

* The actual screen displayed may vary depending on the model or how the machine has been customized.



OPERATING THE TOUCH PANEL

In addition to the conventional "single tap" operation, you can also operate the touch panel using presses, flicks, and slides.

Tap 	Touch and then quickly release the finger. Used to select keys, tabs, checkboxes, etc.	Double tap 	Touch the screen twice. Use this operation to enlarge or reduce the image in the preview.	Drag 	Drag (slide the finger in the desired direction) to rotate or delete original pages displayed as a preview.	Pinch 	Touch the screen with two fingers and move them toward each other. This is used to reduce the browser and preview display.
Press 	Touch a key and keep the finger on the key for a short time.	Flick 	Flick (quickly swipe with the finger) to scroll the preview image.	Slide 	Slide the finger on the scroll bar to move up or down through a long list.	Spread 	Touch the screen with two fingers and move them away from each other. This is used to enlarge the browser and preview display.

OVERVIEW OF COPY OPERATION

Step 1 Select a function

Step 2 Place the original

Step 3 Scan


Step 4 Confirming while viewing the preview

Step 5 Start

Select the [Copy] key or Copy icon.

Confirm the results of the scan and any edits or settings.

Enter the number of prints and start printing.

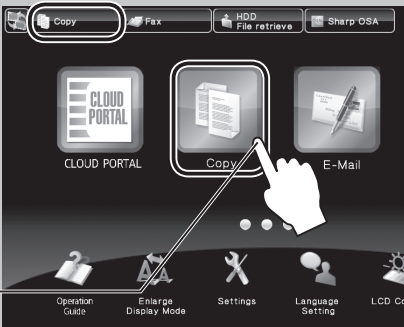


Tap

Place the original in the automatic document feeder


- Do not pass this line
- Insert all the way
- Align the edges
- Upward
- Adjust to original size

Place the original on the document glass

- Align to corner
- Downward
- Lift open

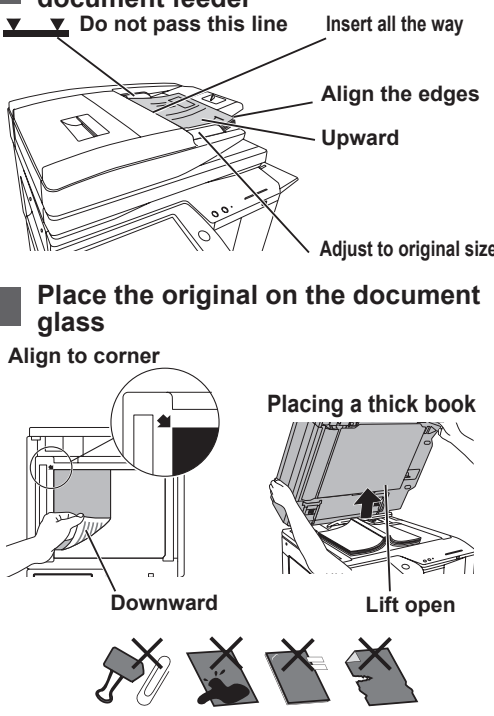


Scan the original




Tap

Scan another original

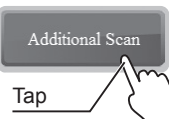


Tap

Print 1 set of copies




Tap

Confirmation
Face up/down, orientation, missing pages, folded pages





Editing Page editing, deleting, etc.

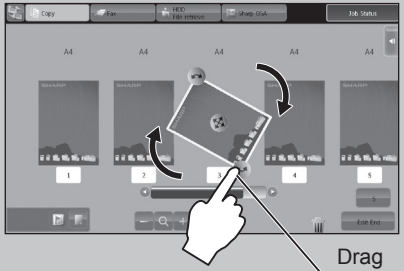

Drag

Output settings

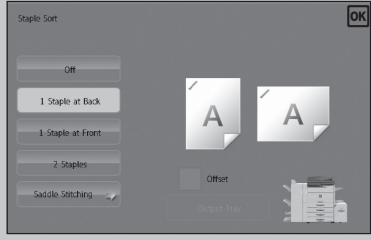Tap

Print

Document filing
The scanned original and the settings are saved on the hard disk and can be used again.

OVERVIEW OF OTHER OPERATIONS For functions other than copy.

Step 1 Select a function

Step 2 Place the original

Step 3 Select the address

Step 4 Confirmation

Step 5 Start

Fax

Tap

E-mail

Tap

HDD file retrieve

Tap

Place the original in the automatic document feeder

Do not pass this line

Insert all the way

Align the edges

Upward

Adjust to original size

Place the original on the document glass

Align to corner

Downward

Placing a thick book

Lift open

Select the address

Select the folder

Scan the original

Confirmation

Face up/down

Orientation

Missing pages

Folded pages

Transmission

Additional Scan CA

Start

Additional Scan CA

Start

Storing

Additional Scan CA

Start

Scan and store the file


Replacing a toner cartridge

When toner is running low, the message "Toner Low (Do not replace cartridge until requested)" appears.

When this message appears, prepare a toner cartridge for replacement.

When the amount of toner decreases further, the message "Ready to scan for copy. (Change the toner cartridge.)" appears. When this message appears, replace the toner cartridge.

When the toner runs out, printing is stopped and the message "Change the toner cartridge." appears.

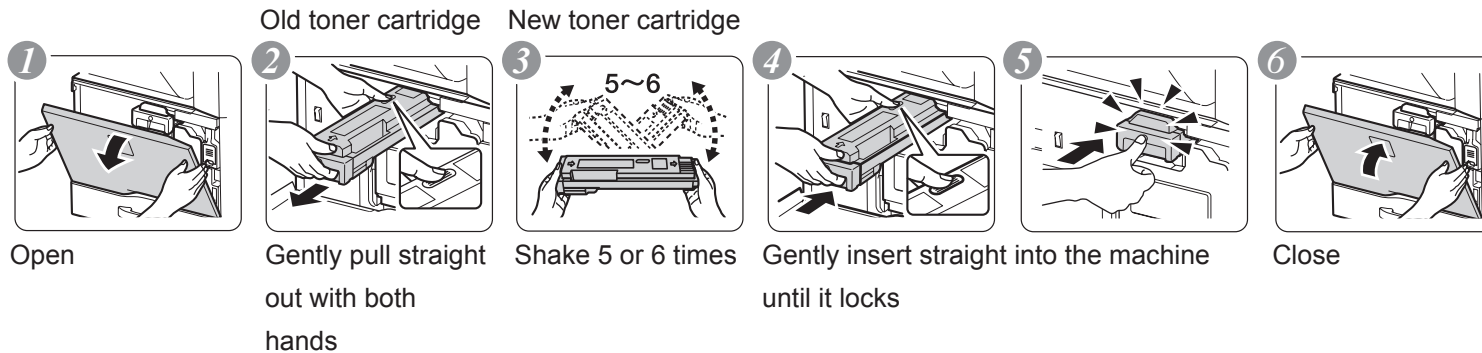

Caution

- Do not throw toner cartridges into a fire. Toner may fly and cause burns.
- Store toner cartridges out of the reach of small children.
- Store the toner in a location that is cooler than 40°C (104°F). Storage in a hot location may cause the toner in the cartridge to solidify.
- Always store toner cartridges on their sides. If toner cartridges are stored on end, the toner may harden and become unusable.
- Please use SHARP-recommended toner cartridges. If toner cartridges other than SHARP-recommended toner cartridges are used, the machine may not attain full quality and performance and there is a risk of damage to the machine.




- Do not dispose of used toner cartridges. Place them in a plastic bag and keep them. The technician will collect the used toner cartridges when performing maintenance.
- To view the approximate amount of toner remaining, continually touch the [Home Screen] key during printing or when the machine is idle. The percentage of toner remaining will appear in the display while the key is touched.
- Depending on your conditions of use, the image may become faint or the image blurred.

Removing misfeeds

When a paper misfeed occurs, the message "A misfeed has occurred." will appear in the touch panel and printing and scanning will stop.


In this event, touch the [Check how to remove misfeeds] key in the touch panel.

When the key is touched, instructions for removing the misfeed will appear. Follow the instructions. When the misfeed is cleared, the message will automatically clear.

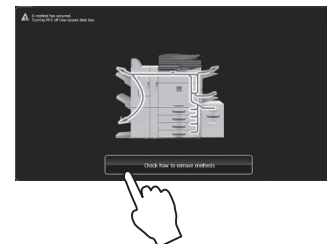

Caution

- The fusing unit and the output unit are hot.
- Take care not to touch the fusing unit when removing a misfeed.
- There is a risk of burning.

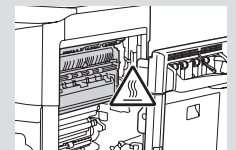

SPECIFICATIONS

Basic Specifications / Copier specifications

Name	MX-M365N/MX-M465N/MX-M565N				
Type	Desktop				
Colour	Monochrome				
Copier system	Laser electrostatic copier				
Scanning resolution	600 × 600 dpi, 600 × 400 dpi, 600 × 300 dpi Print: 600 × 600 dpi, equivalent to 9,600 dpi × 600 dpi, 1,200 × 1,200 dpi				
Gradation	Scan: equivalent to 256 levels / Print: equivalent to 256 levels				
Original paper sizes	Max. A3 (11" × 17") for sheets and bound documents				
Copy sizes	A3 wide (12" × 18") to A5R (5-1/2" × 8-1/2"R), Transparency film, Heavy paper, Envelopes Tray 1-4*: A3, B4, A4, A4R, B5, B5R, A5R, 11" × 17", 8-1/2" × 14", 8-1/2" × 13-1/2", 8-1/2" × 13-2/5", 8-1/2" × 13", 8-1/2" × 11", 8-1/2" × 11"R, 7-1/4 × 10-1/2"R, 5-1/2" × 8-1/2"R				
	Multi-bypass tray: A3 wide (12" × 18") to A5R (5-1/2" × 8-1/2"R), Transparency film, Heavy paper, Envelopes				
	Lost margin (leading edge): 4 mm (11/64") ± 1 mm (± 3/64") Lost margin (trailing edge): 2 mm (6/64") - 5 mm (- 13/64") Leading edge / trailing edge: total 8 mm (21/64") or less Near edge / far edge: total 4 mm (11/64") ± 2 mm (± 6/64") or less * When the Stand/500&2000 sheet paper drawer is installed, only A4 (8-1/2" × 11") can be used in trays 3 and 4.				
Warm-up time	12 seconds ● This may vary depending on the ambient conditions.				
First-copy time	MX-M365N	MX-M465N	MX-M565N		
	4.5 seconds	3.9 seconds	3.7 seconds		
Continuous copying speeds* (when shifter is not in operation)	● This may vary depending on the state of the machine. * Portrait feeding of A4 (8-1/2" × 11") sheets.				
		MX-M365N	MX-M465N	MX-M565N	
	A4, 8-1/2" × 11"	B5, 7-1/4" × 10-1/2"	36 copies/min.	46 copies/min.	56 copies/min.
	A4R, 8-1/2" × 11"R	B5R, 7-1/4" × 10-1/2"R	25 copies/min.	32 copies/min.	35 copies/min.
	B4, 8-1/2" × 14"		20 copies/min.	26 copies/min.	30 copies/min.
A3, 11" × 17"		17 copies/min.	22 copies/min.	26 copies/min.	
* Continuous speed for same original source. Output may be temporarily interrupted to stabilize image quality.					

Copy ratios	Same size: 1:1 ± 0.8 % Enlarge: 115 %, 122 %, 141 %, 200 %, 400 % Reduce: 25 %, 50 %, 70 %, 81 %, 86 %, 100 %	
	Zoom range: 25 to 400 % (25 - 200 % using DSPF) in 1 % increments, total 376 increments. Can calculate zoom rate when mm is specified.	
Paper feed / capacity	500 sheets in 1 tray plus 100-sheet multi-bypass tray ● Using 80 g/m ² (21 lbs. bond) weight paper	
Max. paper feed / max. capacity	6,600 sheets in 4 trays (500 × 2 + 1,150 + 850) plus 100-sheet multi-bypass tray plus 3,500 sheets in large capacity tray ● Using 80 g/m ² (21 lbs. bond) weight paper	
Continuous copy	Max. 999 copies	
Memory	Standard: 3 GB HDD: 320 GB	
	● 1 GB = One billion bytes when referring to hard drive capacity. Actual format capacity is less.	
Ambient environment	Operating environment	10 °C (54 °F) to 35 °C (91 °F) (20 % to 85 % RH) 590 - 1,013 hpa
	Standard environment	20 °C (68 °F) to 25 °C (77 °F) (65 ± 5 % RH)
Required power supply	Local voltage ± 10 % (For the power supply requirements, see the name plate in the lower corner of the left side of the machine.)	
	Power consumption Max. 1.84 kW (220-240 V) (including options)	
Dimensions	618 mm (W) × 713 mm (D) × 843 mm (H) (24-11/32" (W) × 28-5/64" (D) × 33-13/64" (H))	
Weight	MX-M365N	MX-M465N / MX-M565N
	Approx. 76 kg (168 lbs.)	Approx. 77 kg (170 lbs.)
Overall dimensions	With multi-bypass tray extended	925 mm (W) × 713 mm (D) (36-27/64" (W) × 28-5/64" (D))
	With right side exit tray extended	995 mm (W) × 713 mm (D) (39-3/16" (W) × 28-5/64" (D))

Automatic document feeder (Standard equipment)

Document feeder types	Duplex Single Pass Feeder (DSPF)
Original paper sizes	A3 (11" × 17") to A5 (5-1/2" × 8-1/2")
Original paper types	Paper weight Thin paper 35 g/m ² (9 lbs.) to 49 g/m ² (13 lbs.) Plain paper 50 g/m ² (13 lbs.) to 128 g/m ² (34 lbs.)
	Two-sided 50 g/m ² (13 lbs.) to 128 g/m ² (34 lbs.)
Paper storage capacity	150 sheets (80 g/m ² (21 lbs.)) (or maximum stack height of 19.5 mm (50/64"))
Scan speed (copy)	85 sheets/minute (600 × 300 dpi) ● When scanning one-sided, A4 (8-1/2" × 11") vertical documents

Stand/500&2000 sheet paper drawer (Tray 2 / 3 / 4)

Name	Stand/500&2000 sheet paper drawer (MX-DE20)
Paper sizes	Tray 2: A3 (11" × 17") to A5R (5-1/2" × 8-1/2"R) Tray 3/4: A4 (8-1/2" × 11")
Useable paper	Tray 2: 60 g/m ² (16 lbs. bond) to 220 g/m ² (80 lbs. cover) Tray 3/4: 60 g/m ² (16 lbs. bond) to 105 g/m ² (28 lbs. bond)
Paper capacity	Tray 2: 500 Tray 3: 1,150 Tray 4: 850
Dimensions	583 mm (W) × 577 mm (D) × 382 mm (H) (22-61/64" (W) × 22-23/32" (D) × 15-3/64" (H))
Weight	Approx. 30 kg (66.2 lbs.)

Tray 2 / 3 / 4 / 5

	Tray 2	Tray 2/3	Tray 2/3/4	Tray 5
Name	(MX-DE12)*1	(MX-DE13)*2	(MX-DE14)*3	(MX-LC11)*4
Paper sizes	A3 (11" × 17") to A5R (5-1/2" × 8-1/2"R)			A4 (8-1/2" × 11")
Useable paper	60 g/m ² (16 lbs. bond) to 220 g/m ² (80 lbs. cover)			60 g/m ² (16 lbs. bond) to 105 g/m ² (28 lbs. bond)
Paper capacity	500 sheets	1,000 (500 × 2)	1,500 (500 × 3)	3,500
Dimensions	583 mm (W) × 577 mm (D) × 382 mm (H) (22-61/64" (W) × 22-46/64" (D) × 15-3/64" (H))			376 mm (W) × 523 mm (D) × 575 mm (H) (14-53/64" (W) × 20-19/32" (D) × 22-41/64" (H))
Weight	Approx. 21 kg (46 lbs.)	Approx. 23 kg (51 lbs.)	Approx. 28 kg (62 lbs.)	Approx. 30 kg (66 lbs.)

*1: Stand/500 sheet paper drawer (MX-DE12)

*2: Stand/2x500 sheet paper drawer (MX-DE13)

*3: Stand/3x500 sheet paper drawer (MX-DE14)

*4: Large capacity tray (MX-LC11)

Finisher

Name	Finisher (MX-FN17)
Paper sizes	Depends on feeder specifications
Useable paper	Paper weight 55 g/m ² (13 lbs.) to 300 g/m ² (110 lbs. Cover)
No. of trays	1
Tray capacity (80g/m ² (21 lbs.))	Non-stapled A3 wide (12" × 18") / A3 (11" × 17") / B4 (8-1/2" × 14"): 250 sheets A4 (8-1/2" × 11") / A4R (8-1/2" × 11"R) / B5 / B5R (7-1/4" × 10-1/2"R) / A5R (5-1/2" × 8-1/2"R): 500 sheets
	Staple function A3 (11" × 17") / B4 (8-1/2" × 14"): 30 units or 250 sheets A4 (8-1/2" × 11") / A4R (8-1/2" × 11"R) / B5 / 30 units or 500 sheets ● Offset output is not available for A3 wide (12" × 18") / B5R (7-1/4" × 10-1/2"R) / A5R (5-1/2" × 8-1/2"R).
Max. no. of stapled sheets (90 g/m ² (24 lbs.))	Max. no. of 50 sheets (A4 (8-1/2" × 11"), A4R (8-1/2" × 11"R), B5) Max. no. of 30 sheets (A3 (11" × 17"), B4 (8-1/2" × 14"))
Staple position	1 bottom, 1 top, 2 middle
Required power supply	Supplied from this machine
Weight	Approx. 12 kg (26.5 lbs.)
Dimensions	When output paper tray is stored 428 mm (W) x 593 mm (D) x 198 mm (H) (16-55/64" (W) x 23-11/32" (D) x 7-51/64" (H))
	When output paper tray is extended 612 mm (W) x 593 mm (D) x 198 mm (H) (24-3/32" (W) x 23-11/32" (D) x 7-51/64" (H))

Saddle stitch finisher (large stacker)

Name	Saddle Stitch Finisher (large stacker) (MX-FN18)
Paper sizes	Depends on feeder specifications
Useable paper	Paper weight 55 g/m ² (13 lbs. bond) to 300 g/m ² (110 lbs. Cover)
No. of trays	2 (Upper tray / Lower tray) + Saddle stitch tray
Tray capacity (80 g/m ² (21 lbs.))	Upper tray Non-stapled A3 wide (12" × 18") / A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R) / B5R (7-1/4" × 10-1/2"R): 650 sheets A5R (5-1/2" × 8-1/2"R): A4 (8-1/2" × 11") / B5: 1,550 sheets Staple function A4 (8-1/2" × 11") / B5: 100 units or 1,550 sheets A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R): 50 units or 650 sheets
	Lower tray Non-stapled A3 wide (12" × 18") / A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R) / B5R (7-1/4" × 10-1/2"R): 650 sheets A4 (8-1/2" × 11") / B5: 2,450 sheets A5R (5-1/2" × 8-1/2"R): 1,700 sheets Staple function A4 (8-1/2" × 11") / B5: 100 units or 1,550 sheets A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R): 50 units or 650 sheets Saddle stitch tray 10 units (11 to 15 sheets), 15 units (6 to 10 sheets), 25 units (1 to 5 sheets) ● Offset output is not available for A3 wide (12" × 18") / B5R (7-1/4" × 10-1/2"R) / A5R (5-1/2" × 8-1/2"R).
Required power supply	Supplied from this machine
Weight	Approx. 73 kg (160.9 lbs.)
Dimensions	When output paper tray is stored 640 mm (W) × 641.5 mm (D) × 1100 mm (H) (24-39/64" (W) × 25-1/4" (D) × 43-19/64" (H))
	When output paper tray is extended 753 mm (W) × 641.5 mm (D) × 1100 mm (H) (29-1/32" (W) × 25-1/4" (D) × 43-19/64" (H))
Max. no. of stapled sheets (90 g/m ² (24 lbs.))	Max. no. of 50 sheets (A4 (8-1/2" × 11"), B5) Max. no. of 30 sheets (A3 (11" × 17"), B4 (8-1/2" × 14"), A4R (8-1/2" × 11"R))
Staple position	1 bottom, 1 top, 2 middle
Staple method (for saddle stitch)	Centred fold with stapling in 2 centre places
Saddle stitch fold position	Centred fold
Saddle usable sizes	A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R) / A3 wide (12" × 18") 60 g/m ² (16 lbs.) to 220 g/m ² (80 lbs. Cover)
Saddle usable paper weight	Paper weighting 106 g/m ² (28 lbs.) to 220 g/m ² (80 lbs. Cover) is only able to be used in cover mode and for single sheet fold. Max. no. of 15 sheets (80 g/m ² (21 lbs.)):
Max. no. of saddle-stitched sheets	14 sheets (80 g/m ² (21 lbs.)) + 1 sheet (220 g/m ² (80 lbs. Cover))
	Max. no. of 10 sheets (90 g/m ² (24 lbs.)): 9 sheets (90 g/m ² (24 lbs.)) + 1 sheet (220 g/m ² (80 lbs. Cover))

Saddle stitch finisher

Name	Saddle Stitch Finisher (MX-FN10)
Paper sizes	Depends on feeder specifications
Useable paper	Paper weight 55 g/m ² (13 lbs.) to 300 g/m ² (110 lbs. Cover)
No. of trays	2 (Upper tray / Lower tray)
Tray capacity (80 g/m ² (21 lbs.))	Upper tray
	Non-stapled A3 wide (12" × 18") / A3 (11" × 17") / B4 (8-1/2" × 14") / A5R (5-1/2" × 8-1/2"R): 500 sheets A4 (8-1/2" × 11") / A4R (8-1/2" × 11"R) / B5 / B5R (7-1/4" × 10-1/2"R): 1,000 sheets
	Staple function A3 (11" × 17") / B4 (8-1/2" × 14"): 50 units or 500 sheets A4 (8-1/2" × 11") / A4R (8-1/2" × 11"R) / B5 / B5R: 50 units or 1,000 sheets (For A4 (8-1/2" × 11"), B5, 50 sets only when stapled in a single location on the far side)
	Lower tray 10 units (11 to 15 sheets), 15 units (6 to 10 sheets), 20 units (1 to 5 sheets)
	● Offset output is not available for A3 wide (12" × 18") / A5R (5-1/2" × 8-1/2"R).
Required power supply	Supplied from this machine
Weight	Approx. 40 kg (88.2 lbs.)
Dimensions	When output paper tray is stored 497 mm (W) × 631 mm (D) × 988 mm (H) (19-9/16" (W) × 24-27/32" (D) × 38-57/64" (H))
	When output paper tray is extended 656 mm (W) × 631 mm (D) × 988 mm (H) (25-53/64" (W) × 24-27/32" (D) × 38-57/64" (H))
Max. no. of stapled sheets (90 g/m ² (24 lbs.))	Max. no. of 50 sheets (A4 (8-1/2" × 11"), A4R (8-1/2" × 11"R), B5, B5R) Max. no. of 25 sheets (A3 (11" × 17"), B4 (8-1/2" × 14"))
Staple position	1 bottom, 1 top, 2 middle
Staple method (for saddle stitch)	Centred fold with stapling in 2 centre places
Saddle stitch fold position	Centred fold
Saddle usable sizes	A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R)
Saddle usable paper weight	60 g/m ² (16 lbs.) to 220 g/m ² (80 lbs. Cover) Paper weighting 106 g/m ² (28 lbs.) to 220 g/m ² (80 lbs. Cover) is only able to be used in cover mode and for single sheet fold.
Max. no. of saddle-stitched sheets	Max. no. of 15 sheets (80 g/m ² (21 lbs.)):
	14 sheets (80 g/m ² (21 lbs.)) + 1 sheet (220 g/m ² (80 lbs. Cover)) Max. no. of 10 sheets (90 g/m ² (24 lbs.)): 9 sheets (90 g/m ² (24 lbs.)) + 1 sheet (220 g/m ² (80 lbs. Cover))

Finisher (large stacker)

Name	Finisher (MX-FN11)
Paper sizes	Depends on feeder specifications
Useable paper	Paper weight 55 g/m ² (13 lbs.) to 300 g/m ² (110 lbs. Cover)
No. of trays	2 (Upper tray / Lower tray)
Tray capacity (80g/m ² (21 lbs. bond))	Upper tray
	Non-stapled A3 wide (12" × 18") / A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R) / B5R (7-1/4" × 10-1/2"R): 650 sheets A5R (5-1/2" × 8-1/2"R): A4 (8-1/2" × 11") / B5: 1,550 sheets A4 (8-1/2" × 11") / B5: 100 units or 1,550 sheets
	Staple function A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R): 50 units or 650 sheets
	Lower tray
Tray capacity (80g/m ² (21 lbs. bond))	Non-stapled A3 wide (12" × 18") / A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R) / B5R (7-1/4" × 10-1/2"R): 650 sheets A4 (8-1/2" × 11") / B5: 2,450 sheets A5R (5-1/2" × 8-1/2"R): 1,700 sheets
	Staple function A4 (8-1/2" × 11") / B5: 100 units or 1,550 sheets A3 (11" × 17") / B4 (8-1/2" × 14") / A4R (8-1/2" × 11"R): 50 units or 650 sheets
	● Offset output is not available for A3 wide (12" × 18") / B5R (7-1/4" × 10-1/2"R) / A5R (5-1/2" × 8-1/2"R).
Required power supply	Supplied from this machine
Weight	Approx. 45 kg (99 lbs.)
Dimensions	When output paper tray is stored 515 mm (W) × 645 mm (D) × 1100 mm (H) (20-9/32" (W) × 25-25/64" (D) × 43-19/64" (H))
	When output paper tray is extended 645 mm (W) × 645 mm (D) × 1100 mm (H) (25-25/64" (W) × 25-25/64" (D) × 43-19/64" (H))
Max. no. of stapled sheets (90 g/m ² (24 lbs.))	Max. no. of 50 sheets (A4 (8-1/2" × 11"), B5) Max. no. of 30 sheets (A3 (11" × 17"), B4 (8-1/2" × 14"), A4R (8-1/2" × 11"R))
Staple position	1 bottom, 1 top, 2 middle

Punch module (for finisher)

Name	Punch module for MX-FN17 MX-PN11A, MX-PN11B, MX-PN11C, MX-PN11D	Punch module for MX-FN11 MX-PNX6A, MX-PNX6B, MX-PNX6C, MX-PNX6D
Paper size for punch module	A3 (11" × 17") to B5R (7-1/4" × 10-1/2"R)	
Holes	MX-PN11A 2 holes, MX-PN11B 3 holes MX-PN11C 4 holes, MX-PN11D 4 holes (wide)	MX-PNX6A 2 holes, MX-PNX6B 3 holes MX-PNX6C 4 holes, MX-PNX6D 4 holes (wide)
Required power supply	Supplied from Finisher	
Dimensions	98 mm (W) × 477 mm (D) × 137 mm (H) (3-55/64" (W) × 18-25/32" (D) × 5-13/32" (H))	115 mm (W) × 600 mm (D) × 995 mm (H) (4-39/64" (W) × 24 (D) × 39-13/16" (H))
Weight	Approx. 3 kg (6.6 lbs.)	Approx. 8 kg (17.6 lbs.)

Punch module (for saddle finisher)

Name	Punch module for MX-FN18 MX-PNX6A, MX-PNX6B, MX-PNX6C, MX-PNX6D	Punch module for MX-FN10 MX-PNX5A, MX-PNX5B, MX-PNX5C, MX-PNX5D
Paper size for punch module	A3 (11" × 17") to A4 (8-1/2" × 11")	
Holes	MX-PNX6A 2 holes, MX-PNX6B 3 holes MX-PNX6C 4 holes, MX-PNX6D 4 holes (wide)	MX-PNX5A 2 holes, MX-PNX5B 3 holes MX-PNX5C 4 holes, MX-PNX5D 4 holes (wide)
Required power supply	Supplied from saddle finisher	
Dimensions	115 mm (W) × 600 mm (D) × 995 mm (H) (4-17/32" (W) × 23-5/8" (D) × 39-11/64" (H))	122 mm (W) × 604 mm (D) × 248 mm (H) (4-13/16" (W) × 23-25/32" (D) × 9-49/64" (H))
Weight	Approx. 8 kg (17.6 lbs.)	Approx. 3.5 kg (7.7 lbs. or less)

Fax Specifications

Name	Facsimile expansion kit (MX-FX11)	
Useable lines	General phone lines (PSTN), private branch exchange (PBX)	
Connection speed	Super G3: 33.6 kbps, G3: 14.4 kbps	
Coding method	MH, MR, MMR, JBIG	
Connection mode	Super G3 / G3	
Original paper sizes for transmission	A3 (11" × 17") to A5 (5-1/2" × 8-1/2") (Paper with a max. length of 1,000 mm can be transmitted (one-sided only).)	
Registered paper size	A3 (11" × 17") to A5 (5-1/2" × 8-1/2")	
Transmission time	Approx. 2 seconds *1 (A4 (8-1/2" × 11") Sharp standard paper, normal characters, Super G3 (JBIG)) Approx. 6 seconds (G3 ECM)	
Memory	1 GB	
Notes	Touch dial memory	Max. of 2,000 entries (Including group dialling for fax, scanner, and Internet fax)
	Entries per group	Max. of 500 entries
	Mass transmissions	Max. of 500 recipients

*1 Complies with the 33.6 kbps transmission method for Super G3 facsimiles standardized by the International Telecommunications Union (ITU-T). This is the speed for when sending an A4 (8-1/2" × 11") size piece of paper of around 700 characters at standard image quality (8 × 3.85 chars/mm) in Hi-speed mode (33.6 kbps). This is the transmission speed for image information only and does not include time for transmission control. The actual time needed for a transmission depends on the content of the text, type of receiving fax machine, and telephone line conditions.

Network Printer Specifications

Type	Built-in type
Continuous print speed	Same as continuous copy speed
Resolution	Data processing: 600 × 600 dpi, 1,200 × 1,200 dpi Print: 600 × 600 dpi, equivalent to 9,600 dpi × 600 dpi, 1,200 × 1,200 dpi
Page description language	Standard: PCL6 emulation, Adobe® PostScript®3™, XPS*
Compatible protocols	TCP/IP (IPv4/IPv6), IPX/SPX, IPP, EtherTalk
Compatible OS	Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows 7, Windows 8, Windows Server 2012 Macintosh (Mac OS X 10.4, 10.5, 10.6, 10.7, 10.8)
Internal fonts	80 fonts for PCL, 136 fonts for Adobe® PostScript®3™
Memory	Machine system memory and hard disk
Interface	10BASE-T/100BASE-TX/1000BASE-T, USB 2.0 (high speed mode)

* XPS stands for XML Paper Specification. When equipped with the XPS expansion kit (MX-PUX1).

Network Scanner Specifications

Type	Colour scanner	
Scan resolution (main × vertical)	100 × 100 dpi, 150 × 150 dpi, 200 × 200 dpi, 300 × 300 dpi, 400 × 400 dpi, 600 × 600 dpi (push scan) 50 to 9,600 dpi *1 (pull scan)	
Scan speed (A4 (8-1/2" × 11"))	B/W:	Duplex Single Pass Feeder (DSPF) 85 sheets/minute (200 × 200 dpi) (one-sided)
	Colour:	85 sheets/minute (200 × 200 dpi) (one-sided) ● When in standard mode using Sharp standard paper (A4 (8-1/2" × 11") size with 6% coverage) and the auto colour detector is turned off. The speed varies depending on the data volume of the original.
Interface	10BASE-T/100BASE-TX/1000BASE-T, USB 2.0 (when an external memory device is used)	
Compatible protocols	TCP/IP (IPv4)	
Compatible OS *2	Pull scan (TWAIN)	Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows 7, Windows 8, Windows Server 2012
Output format	(B/W) TIFF, PDF, PDF/A, encrypted PDF, XPS*3 Compression method: decompression, G3 (MH), G4 (MMR) (Grey scale/colour) TIFF, JPEG, PDF, PDF/A, encrypted PDF, high compression PDF*4, XPS*3 Compression method: JPEG (high, mid, and low compression, Emphasis black letter)	
Driver	TWAIN compliant	

*1: You must decrease the scan size when increasing the resolution.

*2: There are cases when a connection cannot be established. Please contact your local dealer for more information.

*3: XPS stands for XML Paper Specification.

*4: Optional Enhanced Compression kit (MX-EB11) is required.

Wireless LAN Specifications

Type	Built-in type
Compliance standards	IEEE802.11n/g/b
Transmission method	OFDM (IEEE 802.11n/g), DS-SS (IEEE 802.11b)
Frequency band / channels	IEEE802.11n/g/b: 2.4 GHz (1 - 13 ch)
Transmission speed (value of standard) *1	IEEE802.11n max. 150 Mbps IEEE802.11g max. 54 Mbps IEEE802.11b max. 11 Mbps
Security	WEP, WPA Personal, WPA Enterprise*2, WPA2 Personal, WPA2 Enterprise*2

This function may not be available in some regions.


*1: The indicated values are maximum theoretical values for the Wireless LAN Standard. The values do not indicate actual data transmission speeds.

*2: Cannot be used in Access Point mode.

SUPPLIES

Standard supplies for this product that can be replaced by the user include paper, toner cartridges, and staple cartridges for the finisher.

Be sure to use only SHARP-specified products for the toner cartridges, finisher staple cartridge, and transparency film.

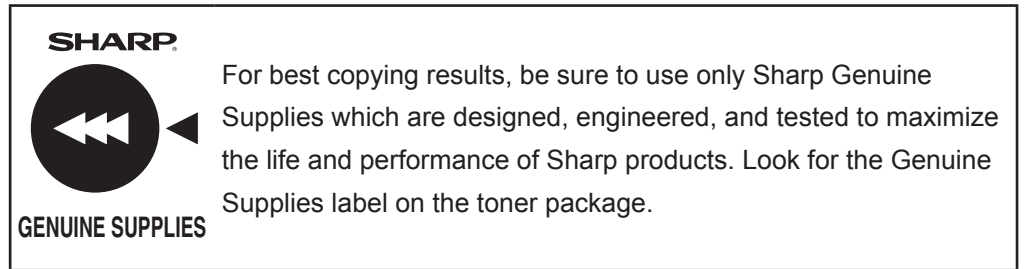

Storage of supplies

■ Proper storage

1. Store the supplies in a location that is:
 - clean and dry,
 - at a stable temperature,
 - not exposed to direct sunlight.
2. Store paper in the wrapper and lying flat.
3. Paper stored in packages standing up or out of the wrapper may curl or become damp, resulting in paper misfeeds.

■ Storing toner cartridges

Store a new toner cartridge box horizontally with the top side up. Do not store a toner cartridge standing on end. If stored standing on end, the toner may not distribute well even after shaking the cartridge vigorously, and will remain inside the cartridge without flowing out.

■ Staple cartridge

The finisher and saddle finisher require the following staple cartridge:

MX-SCX1 (for finisher and saddle finisher)

Approx. 5000 per cartridge x 3 cartridges

AR-SC2 (for finisher (large stacker) and saddle stitch finisher (large stacker))

Approx. 5000 per cartridge x 3 cartridges

AR-SC3 (for saddle stitch of saddle stitch finisher and saddle stitch finisher (large stacker))

Approx. 2000 per cartridge x 3 cartridges

Supply of spare parts and consumables

The supply of spare parts for repair of the machine is guaranteed for at least 7 years following the termination of production. Spare parts are those parts of the machine which may break down within the scope of the ordinary use of the product, whereas those parts which normally exceed the life of the product are not to be considered as spare parts. Consumables too, are available for 7 years following the termination of production.

Noise emission

Noise emission values

The following shows noise emission values as measured according to ISO7779.

Sound power level $L_{WA,d}$

	MX-M365N	MX-M465N	MX-M565N
Operating (continuous printing)	7.5 B	7.5 B	7.7 B
Standby (low power level mode)	-	-	-

Sound pressure level $L_{pA,m}$

		MX-M365N	MX-M465N	MX-M565N
Operating (continuous printing)	Bystander positions	57 dB	58 dB	59 dB
Standby (low power level mode)	Bystander positions	-	-	-



- Operating: With options MX-DE14, MX-RB22, MX-FN11.
- Standby: "-" = less than background noise.

INFORMATION ON DISPOSAL

Information on Disposal for Users (private households)

■ In the European Union

Attention: If you want to dispose of this equipment, please do not use the ordinary dust bin! Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment. Following the implementation by member states, private households within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge*. In some countries* your local retailer may also take back your old product free of charge if you purchase a similar new one.

*) Please contact your local authority for further details. If your used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements. By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

■ In other Countries outside the EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal. For Switzerland: Used electrical or electronic equipment can be returned free of charge to the dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of www.swico.ch or www.sens.ch.



Attention: Your product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products.

Information on Disposal for Business Users

■ In the European Union

If the product is used for business purposes and you want to discard it: Please contact your SHARP dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities. For Spain: Please contact the established collection system or your local authority for take-back of your used products.

■ In other Countries outside the EU

If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal.

TO THE ADMINISTRATOR OF THE MACHINE

Forwarding all transmitted and received data to the administrator (document administration function)

This function is used to forward all data transmitted and received by the machine to a specified destination (Scan to E-mail address, Scan to FTP destination, Scan to Network Folder destination, or Scan to Desktop destination).

This function can be used by the administrator of the machine to archive all transmitted and received data.

To configure the document administration settings, click [Application Settings] and then [Document Administration Function] in the [Settings mode] (Administrator-level access privileges are required.)

- The format, exposure, and resolution settings of transmitted and received data remain in effect when the data is forwarded.
- When forwarding is enabled for data sent in fax mode,
 - The [Direct TX] key does not appear in the touch panel.
 - Quick online transmission and dialling using the speaker cannot be used.



Settings mode password

The administrator password is required to change the machine's settings mode. Settings mode can be changed from either the operation panel or using a computer web browser. After setting up the machine, refer to [Settings mode] in the User's Manual to set a new password.


The same passwords are used for logging in from the operation panel and from a web browser. If the administrator changes a password, that password will be effective when logging in from both the operational panel and a web browser.



Password for logging in from a computer

There are three accounts that can log in from a web browser: "Administrator", "System Administrator" and "User". The factory default passwords for each account are shown on the below. Logging in as an "Administrator" or "System Administrator" will allow you to manage all the settings available via web browser.

(Cut along the dotted line and keep in a safe place.)



	Account	Password
User	users	users
Administrator	admin	admin
System Administrator	sysadmin	sysadmin



Please take care not to forget newly set administrator passwords.

SHARP[®]

SHARP CORPORATION

PRINTED IN FRANCE

TINSE5245GHZZ



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>