

SINGER

11-33

For Agency Orders

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 11-33

ALS:CB

List of Parts Complete
for
Machine No. 11-33

No.	Name
*122334	Arm
122335	" 122334 with 65D, 14578, 122328 and two 434C
19785	Arm Dowel Pin
50346 E	" Screw
43263	" " Washer
122470	" Shaft
11354	" " Bushing
437 C	" " " Set Screw
56536	" " Gear with two 445C
2117	" " " Pin
445 C 2	" " " Set Screw
144 D	" " Screw
9842	" " " Washer
14578	" Side Cover
65 D	" " " Hinge Screw
14579	" " Wheel with two 446AL
446 AL 2	" " " Set Screw
14607	" " " Shaft
122328	" " " " Bushing
434 C 2	" " " " " Set Screw
56537	" " " " Gear with 453AL

2117		Arm Side Wheel Shaft Gear Pin
453 AL	2	" " " " " Set Screw
144 D		Arm Side Wheel Shaft Screw
8708		" Spool Pin
56718		Crank Connecting Rod with two 145E
145 E	2	" " " Cap Screw
565 C		" " " Hinge Screw
1513 J		" " " " " Nut
*56717		Cylinder (5 in. diam.) with 436C, 20640 and 122391
11367		Feed Cam with two 445C
445 C	2	" " Set Screw
11368		" " Connecting Link
565 C		" " " " Hinge Screw
1513 J		" " " " " " Nut
122336		" Dog
176 D		" " Screw
56724		" Forked Connection
6132		" " " Universal Joint
212 D		" " " " " Cap Screw
23 C		" " " " " Hinge Screw
122411		Feed Forked Connection Universal Joint Stud
14583		" Regulator
568 E		" " Hinge Screw
254 D		" " Thumb Screw
14504		" Rock Shaft
122412		" " " Arm with 434C
122413		Feed Rock Shaft Arm complete, Nos. 7958, 122411 and 122412

7958	Feed Rock Shaft Arm Pin
434 C	" " " " Set Screw
304 C	" " " Screw Center
1513 J	" " " " " Nut
122337	" Rod
23 C	" " Hinge Screw
122338	" " Raising Block
704 C	" " " " Screw
14501	" " Spring
219 D	" " " Screw
11475	Lifting Presser Bar
11476	" " " Bell Crank
166 D	" " " " " Hinge Cap Screw
1851	" " " " " Lifting Roller with 610D
610 D	Lifting Presser Bar Bell Crank Lifting Roller Screw
1518 E	" " " " " " " "
	Nut
2718	Lifting Presser Bar Bell Crank Lifting Roller Screw Nut Washer
19910	Lifting Presser Bar Bracket with 145D and 647D
647 D	" " " " Clamping Screw (lower)
145 D	" " " " " " (upper)
11909	" " " Lifter with 8761 and 8763
8760	" " " " Friction Washer
16 D	Lifting Presser Bar Lifter Hinge Screw
8761	" " " " Stop Pin

122339		Lifting Presser Bar Lifting Link
65 D	" " " " "	Cap Screw
8763	" " " " "	Hinge Stud
7958	" " " " "	" " Pin
43267	" " " " "	" " Washer
11479	" " " " "	Rock Shaft
11480	" " " " "	Adjusting Arm with
		453AL
2117		Lifting Presser Bar Rock Shaft Adjusting Arm Pin
453 AL	" " " " "	" " Set Screw
11481	" " " " "	Bracket
2002	" " " " "	" Dowel Pin
		(lower)
4389		Lifting Presser Bar Rock Shaft Bracket Dowel Pin
		(upper)
123 E		Lifting Presser Bar Rock Shaft Bracket Screw
11484	" " " " "	Crank with 453AL and
		1850
2117		Lifting Presser Bar Rock Shaft Crank Pin
1850	" " " " "	" Roller and Stud
453 AL	" " " " "	" Set Screw
11486	" " " " "	" Eccentric Strap
		with two each 141F and 1528J
141 F 2		Lifting Presser Bar Rock Shaft Eccentric Strap
		Adjusting Screw
1528 J 2		Lifting Presser Bar Rock Shaft Eccentric Strap
		Adjusting Screw Nut
608 C		Lifting Presser Bar Rock Shaft Eccentric Strap Hinge
		Screw

1518 E	Lifting Presser Bar Rock Shaft Eccentric Strap Hinge Screw Nut
11487	Lifting Presser Bar Rock Shaft Eccentric Strap Hinge Screw Slide
11488	Lifting Presser Bar Rock Shaft Eccentric Strap Hinge Screw Slide Washer
258 E	Lifting Presser Bar Screw Bushing
11489	Lifting Presser Bar Sleeve (lower)
11490	" " " " (upper)
11491	" " " " " 11490 with 11492
11492	" " " " " Cap'
11493	" " " Spring (flat)
58252	" " " " Bracket
1177 D	" " " " " Screw
4389	" " " " Guide Pin
122341	" " Foot with 1149AL
1149 AL	" " " Clamping Screw
122301	Machine Pulley with two 354C
122302	" " 122301 with 11442, 122307, two 1402D and four 401E
25362 18	Machine Pulley Ball, size 3/16 in.
122303	" " " Ring
122304	" " " " 122303 with eighteen 25362
122306	" " " Washer (left)
122307	" " " " (right)
1402 D 2	" " " " " Screw

11442		Machine Pulley Friction Washer (paper)
401 E	4	" " " " Screw
354 C	2	" " Set Screw
11538		Needle Bar
11539		" " Connecting Link
566 C		" " " " Hinge Screw
1513 J		" " " " " " Nut
11383		" " " Stud with two 445F
445 F	2	" " " " Set Screw
258 E		" " Screw Bushing
19702		" Clamp with 680F and 11385
11385		" " Gib
680 F		" Bar Clamp Thumb Screw
58253		Oil Cup
11917		" " Cover
9084		" " " Hinge Pin
2205		" " " Latch Spring
207 F		" " " " " Screw
8953	2	" or Wax Stripper (left)
11918		" " " " Washer for 11917
8482		" " " " " " 11497
207 F	2	" " " " " Screw
58254		Oil Cup complete, Nos. 2205, 8482, 9084, 11917, 11918, 58253 two 8953 and three 207F
134 D		Oil Cup Screw
56534		Oscillating Rock Shaft

56535	Oscillating Rock Shaft complete, Nos. 622C, 11165, 11398, 56534 and two 1508E
11398	Oscillating Rock Shaft Hinge Pin
1508 E 2	" " " " " Nut
622 C	" " " " " Screw Bearing
1508 E	" " " " " " " Nut
11165	" " " Oil Pad
56729	" Shaft
20640	" " Back Bearing Oil Tube
122391	" " Bushing (front)
436	" " " " " Set Screw
122342	" " Crank with 445C
122343	Oscillating Shaft Crank complete, Nos. 1513J, 5968 and 122342
25104	Oscillating Shaft Crank Pin
9119	" " " Slide Block
5968	Oscillating Shaft Crank Slide Block complete, Nos. 190D, 1054C, 5968 and 9119
190 D	Oscillating Shaft Crank Slide Block Cap Screw
5968	" " " " " " " Washer
1054 C	" " " " " " " Screw Stud
1513 J	" " " " " " " Nut
445 C	" " " " " " " Set Screw
50723 D	Pressure Regulating Screw
1606 C	" " " " " " " Lock Nut
16901	Shuttle Bobbin

8897	Shuttle Cylinder
43248	" " 8897 with 1323F and 8900
8777	" " Hinge Pin
43235	Shuttle Cylinder Latch
43236	" " " Hinge Pin
19869	" " " Spring
19975	" Frame
58206	" " 19975 with 19869, 43235 and 43236
1323 F	" Tension Regulating Screw
8900	" " Spring
122344	Shuttle (cylinder) 4 in. diam., complete, Nos. 8777, 16901, 43248 and 58206
122345	Shuttle Driver with 445C
8873	" " Pin
445 C	" " Set Screw
122346	" Race
50173 D	" " Screw
122347	" " Ring
32885	" " " Cap
96 D	" " " " Screw
21788	" " " Spring
122348	Tension Bracket
122349	Tension Bracket complete, Nos. 122D, 6312, 11506, 11936, 11937, 12042, 122348 and two 190D
159 F	Tension Bracket Screw
122350	" " Plate

2049		Tension Bracket Plate Pin
5983	2	" Friction Washer (felt)
11423		" " (steel)
1560 C		" Regulating Thumb Nut
8905		" " " " Washer
607 E		" Screw Stud
122 D		" " " Clamping Screw
8791		Tension Spring
11044		" Wheel
12042		Tension (wheel) complete, Nos. 607E, 1560C, 8791, 8905, 11044, 11423 and two 5983
11424		Thread Eyelet for 12042
11425		" " " 11426
11495		" " (side of arm)
190 D	2	" " " " " Screw
2102	2	" Retaining Disc
1560 C		" " Regulating Thumb Nut
8905		" " " " " Washer
408 E		" " Screw Stud
2103		" " Spring
11426		Thread Retainer complete, Nos. 408E, 1560C, 2103, 8905 and two 2102
11505		Thread Take-up Cam with two 434C
8873		" " " Pin
434 C	2	" " " Set Screw
58332		" " Lever with 1995 and 9219

58333	Thread Take-up Lever 58332 with 50437D
50437 D	" " " Hinge Screw
1995	" " " Roller and Screw Stud with 1518E
1518 E	" " " " " " " Nut
9219	" " " Thread Eyelet Bushing
11506	" " " Spring
11936	" " " Regulator Plate
190 D	" " " " " Adjusting Screw
11937	" " " Staple
6312	" " " " Washer
122351	Throat Plate for 122336
56749	" " " Holder
164 F	" " " Screw
202 D	Throat Plate Screw (long)
228 D	" " " (short)
122352	Vibrating Presser Bar
122353	" " " Cap with 2301
134 D	" " " " Screw (large)
180 D	" " " " " (small)
122354	" " " Cushion (rawhide)
233 D	" " " " Screw
122355	" " " Hinge Bracket with 145D
145 D	" " " " " Adjusting Screw
923 D	" " " " Screw
11512	" " " Spring
122356	" " " " Bracket

219 D	Vibrating Presser Bar Spring Bracket Screw
2701	" " " " " Steady Pin
225 D	" " " " Screw
122357	" " Foot
690 D	" " " Screw
1654 C	" " " " Nut

Accessories

557 E	bolt with 1522E, to secure machine to power table
1522 E	" Nut
12620	" " Washer
120344	Roller (copper plated) with 120345
120345	" Spout, 4 1/2 in. long
11831	Screw Driver (large)
26026	Screw Driver (medium)
26485	" " (small)
23535	Wrench
8008	" for 1520 and 1654
8909	" " 1513, 1518, 50124 and 50323
9810	" " 1508
25200	" " 754

Bobbin Winder
(Swinging Automatic, Left Hand)
for 16901

- | | | |
|--------|----|--|
| 41894 | | Base with 449AL |
| 894 D | 3 | " Screw |
| 60213 | | Bobbin Position Pin |
| 41896 | | Frame |
| 41441 | | " Hinge Pin |
| 449 AL | | " " " Set Screw |
| 4784 | 2 | " Oil Pad |
| 41897 | | " Spring |
| 43270 | | Friction Pulley with 43271, two 448AL and ten 15405 |
| 43271 | | " " Ring (leather) |
| 15405 | 10 | " " " Rivet (brass) |
| 448 AL | 2 | " " Set Screw |
| 60214 | | Spindle |
| 454 C | | " Set Screw |
| 60215 | | " Shaft with 454C and 60213 |
| 60216 | | Stop Latch |
| 11107 | | " " Hinge Pin |
| 2269 | | " " Pin |
| 41899 | | Tripping Arm with 176D |
| 176 D | | " " Clamping Screw |
| 60217 | | Bobbin Winder, Nos. 2269, 11107, 41441, 41894, 41896,
41897, 41899, 43270, 60214, to 60216 and two 4784 |

60271		Bracket
50124 D		" Screw
9842		" " Washer

Thread Unwinder Parts

27555	2	Spool Pin
27583		" Rest
27556		" " 27583 with 138B and two 27555
138 B		" " Set Screw
2102	2	Tension Disc
1560 C		" Regulating Thumb Nut
828 C		" Screw Stud
2103		" Spring
5769		" Thread Eyelet
17547		" " Guide
60608		Thread Guard
60573		" " Rod
1513 J		" " " Nut
330 D		" " Set Screw
60609		Thread Guard complete, Nos. 330D, 828C, 1560C, 2103, 5769, 17547, 60608 and two 2102
126054		Thread Unwinder (top of arm) complete, Nos. 1513J, 27556, 60573, 60609
126055		Bobbin Winder (swinging automatic, left hand) complete Nos. 9842, 50124D, 60217, 60271, 126054 and three 894D

Column Stands

56710 Column Stand, 24 1/2 in. high, with three 838D and
four each 494E and 779E

14685 Column Stand, 39 1/2 in. high, with three 838D and
four each 494E and 779E

494 E 4 Column Stand Screw

779 E 4 Machine Screw

838 D 3 Treadle Hinge Screw

Driving Attachment

8984 Brake Block (wood)

58458 " " Stud

1036 C " " " Set Screw

11440 Friction Pulley, 7 in. diam., 1 1/2 in. face, with
448AL and 11441

11441 Friction Pulley Center Bearing

448 AL " " Set Screw

122428 Lever with 1036

122358 " Bracket

2117 Lever Bracket Dowel Pin

116 E 2 " " Screw

135 D " Screw

8991 " " Washer

8992 " Spring

122363 " " Hook

1520 E		Lever Spring Hook Nut
6055		" " " " Washer
166 D		" " Screw
122301		Machine Pulley with two 354C
122302		" " 122301 with 11442, 122307, 1402D and four 401E
25362	18	Machine Pulley Ball, size 3/16 in.
122303		" " " Ring
122304		" " " " 122303 with eighteen 25362
122306		" " " Washer (left)
122307		" " " " (right)
1402 D		" " " " " Screw
11442		" " Friction Washer (paper)
401 E	4	" " " " Screw
354 C	2	" " Set Screw
11864		Shaft Driving Pulley (sectional) 10 in. diam., 1 1/4 in. face, 1 3/16 in. bore, with two 597C
597 C	2	Shaft Driving Pulley Clamping Screw
14672		Treadle (wood)
14673		" Eyelet
342 E		" " Screw
9842		" " " Washer
14674		" Hinge
14706		Treadle complete, Nos. 342E, 9842, 14672 to 14674, 14708 and six wood screws 1 1/4 in. No. 10
27639		Treadle Pitman Rod (lower)
14707		" " " (upper)

9079 Treadle Pitman Rod Clamp with 354C
354 C " " " " Screw
14708 Treadle Pitman complete, Nos. 9079, 14707 and 27639
122434 Singer Driving Attachment complete, Nos. 135D, 166D,
1520E, 6055, 8984, 8991, 8992, 11440, 11364,
14706, 58458, 122302, 122304, 122306, 122358,
122363, 122428 and two 116E

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>