


# Operating Instructions . . .

# Models LED20AW and LGD20AW

**FABRIC SELECTOR**

DELICATE  
NO HEAT  
PERM PRESS  
REGULAR

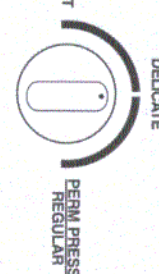

**Amana COMMERCIAL QUALITY DRYER**  
AUTOMATIC DRYNESS CONTROL - 6 CYCLES

---

**WARNING**

To reduce the risk of fire, electric shock, serious injury or death to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** in your Use and Care Guide before operating the dryer.

W128

---

**Automatic Regular/Delicate Cycle**

Use for sturdy items like play or work clothes and also for delicate items. The type of heat is determined by choosing the proper **Fabric Selector** option. There are two settings in the AUTOMATIC REGULAR/DELICATE cycle — **MORE DRY** and **LESS DRY**.

**Time Dry Cycle**

This cycle will operate dryer for up to 75 minutes. Cottons and heavyweight items dry best between 50 and 75 minutes, and lightweight items dry best between 20 and 40 minutes.

**Automatic Permanent Press/Knits Cycle**


Use for permanent press items and synthetics. The type of heat is determined by selecting the proper **Fabric Selector** option. There are two settings in the AUTOMATIC PERMANENT PRESS/KNITS cycle — **MORE DRY**, and **LESS DRY**.

---

**Automatic Permanent Press/Knits Cycle**

AUTOMATIC PERMANENT PRESS/KNITS

COOL TUMBLE  
LESS DRY  
MORE DRY  
COOL DOWN  
10 20 30 40 50 60 70  
LESS DRY  
TIME DRY  
PUSH KNOB TO START

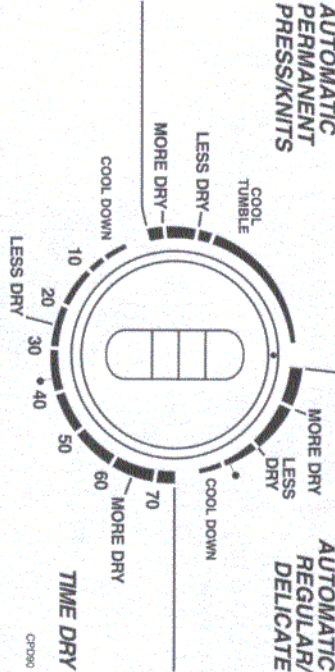

AUTOMATIC REGULAR/DELICATE  
• ENERGY SAVER  
CP990

## Available Drying Cycles

**NOTE:** Use the automatic cycles for drying items that can be dried with heat. These cycles automatically dry loads to the dryness level selected.

**MORE DRY** will dry very small loads and some heavy items, such as blue jeans, but will overdry lightweight items, such as sheets and shirts. Overdrying can cause wrinkling, shrinking, excessive lint conditions, and will use more energy than necessary.

**LESS DRY**, which uses the least energy, will dry large loads and lightweight items, such as sheets and shirts, but might leave other items, such as denim and heavy bath towels, more damp.

To increase energy savings and to make sure loads are dried without overdrying, set your loads on **LESS DRY**. If items are damp at the end of a cycle, the timer knob needs to be set closer to the **MORE DRY** setting the next time these loads are dried. If items are overdry at the end of a cycle, the timer knob should be set closer to **COOL DOWN** or **COOL TUMBLE** when these loads are dried again. Remember the settings that work best to get ideal drying results.

The **COOL DOWN** and **COOL TUMBLE** period at the end of each cycle provides items a chance to tumble with no heat and cool down to room temperature. This prevents wrinkles from setting if items cannot be cared for immediately.

The **ENERGY SAVER/DAMP DRY** settings, marked with a dot (•), show which settings will use the least energy and will leave items damp for easier ironing.

**NOTE:** The timer knob will not advance as quickly in the AUTOMATIC cycles as it does in the TIME DRY cycle. The time it takes for the timer to advance depends on the type and size of the load being dried.

**Automatic Regular/Delicate Cycle**

Use for sturdy items like play or work clothes and also for delicate items. The type of heat is determined by choosing the proper **Fabric Selector** option. There are two settings in the AUTOMATIC REGULAR/DELICATE cycle — **MORE DRY**, and **LESS DRY**.

**Time Dry Cycle**

This cycle will operate dryer for up to 75 minutes. Cottons and heavyweight items dry best between 50 and 75 minutes, and lightweight items dry best between 20 and 40 minutes.

**Automatic Permanent Press/Knits Cycle**

 
Use for permanent press items and synthetics. The type of heat is determined by selecting the proper **Fabric Selector** option. There are two settings in the AUTOMATIC PERMANENT PRESS/KNITS cycle — **MORE DRY**, and **LESS DRY**.

## To Dry Clothes

**IMPORTANT:** See the **INSTALLATION INSTRUCTIONS** before using dryer.


**IMPORTANT:** Before using dryer for the first time, use an all-purpose cleaner or a detergent and water solution and a damp cloth to remove shipping dust from inside dryer drum.

- Sort items into separate loads.

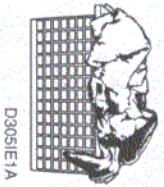


D3051E1A

 - Clean lint filter before each use.

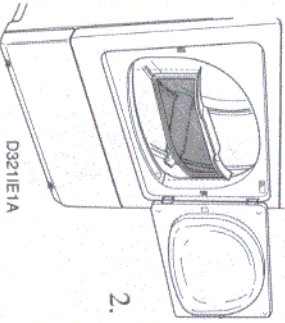


D3211E1A

 - Add clothes loosely into dryer drum. Add fabric softener sheet, if desired.

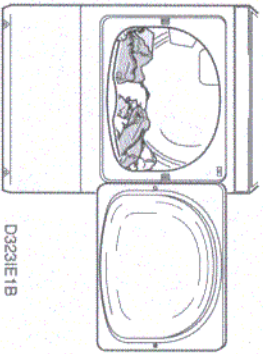

D33291E1B

 
- Close loading door. Dryer will not operate with the door open.

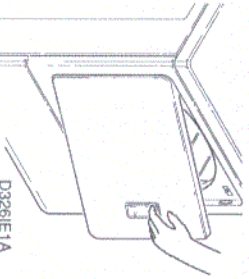

D3261E1A


- Select Fabric Selector.

 Follow garment manufacturer's care labels for recommended temperature settings.

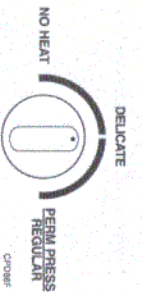

FABRIC SELECTOR

 - Select timer setting in cycle desired: AUTOMATIC REGULAR/DELICATE, TIME DRY, and AUTOMATIC PERMANENT PRESS/KNITS. These cycles control the drying time.

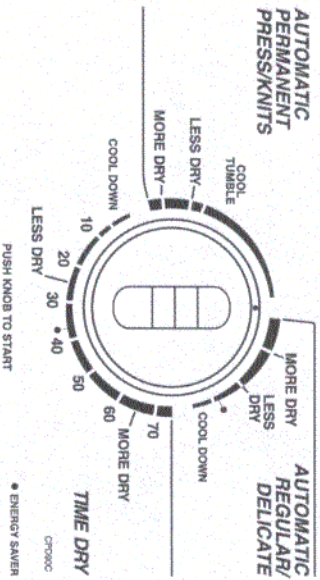

PUSH KNOB TO START

ENERGY SAVER


The **ENERGY SAVER/DAMP DRY** settings, marked with a dot (•), show which dryer settings will use the least energy and will leave items damp for easier ironing.

- Push timer knob in to start dryer.

**NOTE:** To stop dryer at any time, open the door or turn timer knob to an **OFF** position. To restart dryer, close door, reset timer if necessary, and push in the timer knob.

## Optional Equipment

 A drying rack, Part No. DR-3, is available as optional equipment at extra cost. The rack can be used for no-tumble drying of articles, such as tennis shoes, sweaters, stuffed toys or other delicate items.

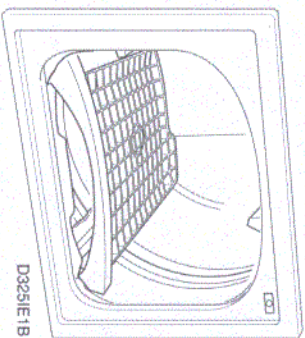

D3251E1B

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>