



Model 400 Paper Jogger

"An easy and effective way to straighten and organize your papers!"

WARNING: Paper joggers have moving parts that could pinch fingers or pull hair or loose clothing. Keep hands, hair, and clothing away from moving parts during maintenance and/or operation.

Setup, Operation and Maintenance

Setup

Carefully remove the model 400 paper jogger from its shipping container. Place the jogger on a solid, level surface. Then plug it in to any standard 115 V 60Hz receptacle.

Operation

Turn the power switch to the 'on' position. It should light up and the paper cradle should begin vibrating. Insert your papers. When you are finished, return the switch to the 'off' position.

Maintenance

Bearings should be given light oil every 6-8 months.

Machine and bearings should be kept free of dust and debris.

Always disconnect from power before servicing.

800-658-8788 - www.abcoffice.com - 800-658-8788 - www.abcoffice.com

"When you need more than staples..."

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>