



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX B3101-5-M. You'll find the answers to all your questions on the AEG-ELECTROLUX B3101-5-M in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX B3101-5-M
User guide AEG-ELECTROLUX B3101-5-M
Operating instructions AEG-ELECTROLUX B3101-5-M
Instructions for use AEG-ELECTROLUX B3101-5-M
Instruction manual AEG-ELECTROLUX B3101-5-M

B3101-5

User manual

Built-In Electric Oven



[Your user manual](#)
[AEG-ELECTROLUX B3101-5-M](#)

Manual abstract:

· After switching off the cooling fan, do not keep uncovered dishes in the oven. Moisture may condense in the oven interior or on the glass doors and may get into the units. 3 Note on enamel coating Changes in the colour of the oven's enamel coating as a result of use do not affect the appliance's suitability for normal and correct use. They therefore do not constitute a defect in the sense of the warranty law. Description of the Appliance General Overview Control panel Door handle Full glass door Description of the Appliance 5 Control Panel Oven Power Indicator Temperature Pilot Light Time display Clock function buttons Oven Functions Temperature selector Oven Features Top heat and heating elements Shelf positions Oven lighting Fan Bottom Heat Oven shelf runners, removable 6 Before Using for the first time Inside of door You will find the shelf position number on the inside of the oven door. Oven accessories Oven shelf For cookware, cake tins, roasts and grilled foods. Baking tray For cakes and biscuits. Before Using for the first time Setting and changing the time 3 The oven only operates when the time has been set. When the appliance has been connected to the electrical supply or when there has been a power cut, the function indicator Time of day flashes automatically. 1.

To change a time that has already been set, press the Selection button repeatedly until the function indicator Time of day flashes. Before Using for the first time 7 2. Using the or button, set the current time. After approx. 5 seconds, the flashing stops and the clock displays the time set. The appliance is now ready to use. 3 The time can only be changed if no automatic function (Duration or End) has been set. Initial Cleaning Before using the oven for the first time you should clean it thoroughly. 1 3 Caution: Do not use any caustic, abrasive cleaners! The surface could be damaged. To clean metal fronts use commercially available cleaning agents.

1. Turn the oven function switch to oven lighting . 2. Remove all accessories and the shelf support rails and wash them with warm water and washing up liquid. 3. Then wash out the oven with warm water and washing-up liquid, and dry. 4. Wipe the front of the appliance with a damp cloth. 8 Using the Oven Using the Oven 3 The oven is equipped with retractable buttons for "Oven functions" and "Temperature selection". To use, press the relevant button.

The button then sticks out. Switching the Oven On and Off Oven Power Indicator Temperature Pilot Light Oven Functions Temperature selector 1. Turn the oven functions dial to the desired function. 2. Turn the temperature selector to the desired temperature. The power indicator is lit as long as the oven is in operation. The temperature pilot light is lit as long as the oven is heating up. 3. To turn the oven off, turn the oven functions dial and the temperature selector to the Off position. 3 Cooling fan The fan switches on automatically in order to keep the appliance's surfaces cool.

When the oven is switched off, the fan continues to run to cool the appliance down, then switches itself off automatically. Using the Oven 9 Oven Functions The oven has the following functions: Oven function Light Fan-assisted circulation Conventional Base heat Defrost Single grill Dual grill Rothitherm Application Using this function you can light up the oven interior, e.g. for cleaning. For baking on up to two oven levels.

Set the oven temperatures 20-40 °C lower than when using Conventional. For baking and roasting on one oven level. For baking cakes with crispy or crusty bases. For defrosting e. g.

flans and gateaux, butter, bread, fruit or other frozen foods. For grilling flat food items placed in the middle of the grill and for toasting. For grilling flat food items in large quantities and for toasting. For roasting larger joints of meat or poultry on one level. The function is also suitable for gratinating and browning 10 Using the Oven Inserting the Oven Shelf and the Baking Tray 3 Shelf runner safety and anti-tip device As a shelf runner safety device, all insertable components have a small curved indentation at the bottom on the right and left-hand edge..



[Your user manual](#)

[AEG-ELECTROLUX B3101-5-M](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>