



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH INTEGRA SHX99A15UC. You'll find the answers to all your questions on the BOSCH INTEGRA SHX99A15UC in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH INTEGRA SHX99A15UC
User guide BOSCH INTEGRA SHX99A15UC
Operating instructions BOSCH INTEGRA SHX99A15UC
Instructions for use BOSCH INTEGRA SHX99A15UC
Instruction manual BOSCH INTEGRA SHX99A15UC

BOSCH

YOUR LIFE. OUR INSPIRATION.

DISHWASHER USE AND CARE MANUAL

For MODELS : SHV99A13UC and SHX99A15UC



P/N 9000039259 (8408)



[Your user manual](#)
[BOSCH INTEGRA SHX99A15UC](#)

Manual abstract:

... SAVE THESE INSTRUCTIONS! 2 Dishwasher Components Vent Door Gasket Top Rack Top Rack Spray Arm Bottom Rack Spray Arm Filter System (in dishwasher floor) Bottom Rack Detergent/ Rinse Agent Dispenser Silverware Basket Model/Serial Number Label Dishwasher Features AVSTM Noise Reduction System: A two-pump motor system, the Suspension Motor™, and triple insulation make Dishwashers the quietest in North America. Condensation Drying: A high temperature final rinse, a low temperature stainless steel tub, and the sheeting action of a rinse agent result in drying that is hygienic, energy efficient, and economical. Digital Countdown Display: A digital readout that counts down the time remaining in the cycle, and is also used in setting other options. Exact Wash™: Reduces water, energy consumption and noise by alternately distributing water to either the upper, lower, or both spray arms. Exceptionally Low Water Usage: As little as 3.1 gallons in the Auto Delicate cycle. Filter System: Four filters ensure distribution of clean water and protect the main pump and the drain pump from foreign material. Flow-Through Heater™: Heats water to a temperature of up to 161°F. Nylon Racks: Eliminate cuts and nicks, and have a five-year warranty. Refill Rinse Agent Indicator: The control display reads "Refill Rinse Agent" when the rinse agent dispenser needs refilling.

Sanitized Indicator: The control display reads "Sanitized" to indicate that your dishes are sanitized to the standards of the National Sanitation Foundation. SENSOTRONIC™: Checks water condition and decides whether a second fresh water fill is necessary. Stainless Steel TALLTUB™: A rust-free, hygienic interior surface with a lifetime warranty. Water Shut-Off: A safety feature that stops the flow of incoming water if water is detected in the base of the dishwasher. Additional Drying Heat: Raises the rinse water temperature, which results in better drying.

Cup Shelves: Fold-down shelves that hold cups or large kitchen utensils. 3 Dishwasher Features (continued) Cycle Completion Signal: A tone that sounds when your dishwasher finishes washing and drying your dishes. Delay Start: Allows you to delay the start of the wash cycle for up to 24 hours. Knife Rack: Designed to securely hold fine cutlery and silverware. RACKMATIC™ Height-Adjustable Top Rack: Lower the top rack to accommodate large items in the top rack, or raise the top rack to make room for larger items in the bottom rack.

Top Rack and Bottom Rack Flip Tines: Tines that fold down allow loading versatility. POWERBOOST™: Reduces the time to complete the wash cycle by preheating. INFOLIGHT™: Red LED illuminates floor to indicate unit is running. OPTIDRY™: Senses when the unit is low on rinse agent and automatically adjusts the drying performance. CLEARTOUCH™ Controls: Provide easy cleaning while preventing accidental activation. Rack Attachment: Adds additional fold down shelves on the lower rack. Dishware Materials NOTE: Before using your dishwasher for the first time, check the information in this section. Some items are not dishwasher safe and should be hand-washed; others require special loading. Contact the item's manufacturer if you are unsure about the item's dishwasher suitability. Recommended Aluminum: Colored anodized aluminum may fade over time.

Minerals in your water may cause the aluminum to darken or spot. This can usually be removed by using a soap-filled steel wool pad. China, Crystal, Stoneware: Some hand-painted pieces may discolor, fade, or spot. Hand-wash these pieces. Position fragile glassware so that it will not topple over or contact other pieces during the wash cycle. Glass: Milk glass may yellow. Non-Stick Coatings: Apply a light coating of vegetable oil to non-stick surfaces after drying. Plastics: Make sure the piece is dishwasher safe. Stainless Steel, Sterling Silver, and Silver Plate: Place these pieces so that they do not contact dissimilar metals. Not Recommended Acrylic: Cracking (small cracks throughout the acrylic) may occur.

Adhesive-Joined Pieces: Adhesives that join materials such as plastic, wood, bone, steel copper, tin, etc. may loosen..



[Your user manual](#)
[BOSCH INTEGRA SHX99A15UC](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>