



DVD8400



Lecteur DVD portable
Portable DVD Player

Mode d'emploi
Instruction Manual



 
Safety Precautions



The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

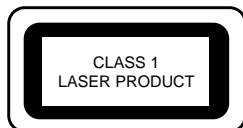

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

WARNING: DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE, DUE TO THE HIGH RISK OF FIRE OR ELECTRIC SHOCK, DO NOT OPEN THE CABINET, DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. ONLY QUALIFIED SERVICE PERSONNEL SHOULD ATTEMPT THIS.

CAUTION: DURING PLAYBACK, THE DISC SPINS AT HIGH SPEED, SO DO NOT LIFT OR MOVE THE PLAYER, DOING SO MAY DAMAGE THE DISC.

CAUTION: This Digital Video Disc Player employs a Laser System. Make sure the device is shut down prior to opening player lid. Visible laser radiation when open and interlocks defeated. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Safety Precautions

DO NOT STARE INTO BEAM.

To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location, or contact us. Only qualified service personnel should remove the cover.

FCC NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device. Pursuant with the FCC Rules, Part 15. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, (example-use only shielded interface cables when connecting to computer or peripheral devices). Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

BATTERY WARNING: The DVD player contains a Li-P battery pack. There is a risk of fire and burns if the battery pack is handled improperly. Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water. Do not attempt to open or service the battery pack. Replace only with the battery pack designated for this product. Discard used batteries according to the manufacturer's instructions.

Safety Information

CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Please carefully study this manual and always keep it available. There are, however, some installation and operation precautions which you should be aware of.

1. Read Instructions - All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Cleaning - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water and Moisture - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
8. Accessories - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

Safety Information

10. Ventilation - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

11. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

12. Grounding or Polarization - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. Alternate Warnings - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

13. Power-Cord Protection - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

Safety Information

14. Outdoor Antenna Grounding - If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size or grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

15. Lightning - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

16. Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17. Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

18. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

19. Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Safety Information

20. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. When the power-supply cord or plug is damaged.
- b. If liquid has been spilled, or objects have fallen into the product.
- c. If the product has been exposed to rain or water.
- d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e. If the product has been dropped or damaged in any way, and
- f. When the product exhibits a distinct change in performance - this indicates a need for service.

21. Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

22. Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

23. Wall or Ceiling Mounting - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24. Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

25. Rechargeable battery - Charge voltage is DC 9V.

Introduction

Your new portable DVD player is designed for you to enjoy all forms of disc media. Its slim shape allows you to easily carry it with you and enjoy movies and music anywhere. Your player incorporates the latest digital audio/video (AV) technologies to give you the ultimate in listening and viewing pleasure.



Your new player also supports CD, and JPEG. Your player also has several unique features, including an S-video output (for greater picture clarity), large active LCD screen, multi-angle and multi-language, Parental Control (to prevent children from viewing inappropriate content), and Kodak Picture CD compatibility (so you can show photos on your TV). This is a truly multimedia machine designed for the multimedia world to enjoy.

Introduction

UNPACKING

First inventory the contents of your Portable DVD player package:

Portable DVD Player	1
Audio Cable	1 pair
Video & Coaxial Cable	1 pair
Lithium Battery Pack	1
Remote Control	1
External Power Adapter	1
Cigarette Lighter Adapter	1
Operating Manual	1
Stereo Earphones	1
Y Adapter (for 2 headphones)	1
Car Bag	1

If any item should be damaged or missing, please contact your dealer without delay.

Keep the packaging materials, you may need them to transport your player in the future.

WARNING: Changes or modifications made to this equipment, not expressly approved by us or parties authorized by us will void all manufacture warranties.


Table of Contents

Safety Precautions	1-6
Introduction	7-8
Table of Contents	9
Quick Starting Guide	10-11
Connecting to a TV	12-13
Connecting to Optional Equipment	14-17
Playing Back a Disc	18-21
Playing Back a KODAK Picture CD/JPEG	22
Locating a Specific Title, Chapter or Track	23
Playing Repeatedly	24-25
Playing in Favorite Order	26-27
Zooming a Picture	28
Selecting Subtitles	29
Using the On-Screen Display	30
Selecting the Camera Angle	31
Setting the Parental Lock	32-33
Rechargeable Battery Installation & Use	34-35
Customizing the Function Settings	36-37
Trouble Shooting Guide	38
Carrying Bag Installation	39

Quick Starting Guide

POWER YOUR PLAYER

 
Power the player in 2 optional ways:
a. with mains adapter which is provided.

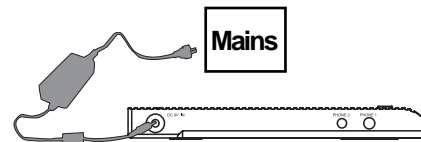

b. with your battery pack.

1) Locate the 2 alignment lugs in the slots on the base of the player.

 2) Then pull the pack forward until it clicks into place.

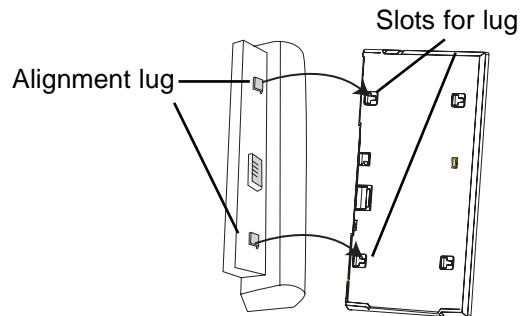

To remove the pack, slide the Release batch as the arrowhead which is on the back of the battery whilst taking apart the battery.

Quick Starting Guide

GETTING STARTED

1. Open the player by raising the screen.

2. Remove the protective plastic tab from the disc compartment.

Recommend to load it again to cover the laser mechanism when not use for long time.

3. Press OPEN/CLOSE on the left to open the compartment door.

4. Place a DVD disc (label side facing up).

Align the center of the DVD disc with the center of the disc guide. Press gently down on the DVD to snap the disc into place, then close the door.

5. To switch on the unit, press the POWER button.

6. Press ► to start playback.

 
 
In general, the DVD already inserted into the player will start reading automatically when power is turned on.

In general, the player will immediately start rendering the DVD program.

7. If it pops up a playback menu, press ▲▼◀▶ to select a title and then press ENTER to confirm.

When you want to stop, press ■, it will return to the power-on logo. To power off the unit, press POWER.

The DVD player will automatically power off in three minutes after entering screen saver mode. To reset the unit, press POWER again.

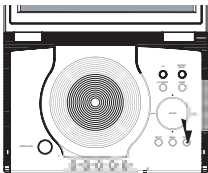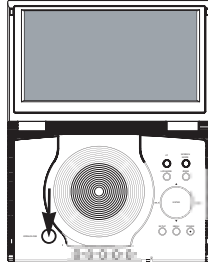

Connecting to a TV

 
SETTING UP YOUR PLAYER

Step 1: connect the audio cables to AUDIO OUT of the DVD player.

Step 2: connect the yellow cable to the VIDEO on the side of your player.

(For TVs that support S-Video Output please follow the diagram "BETTER" bellow.)


GOOD

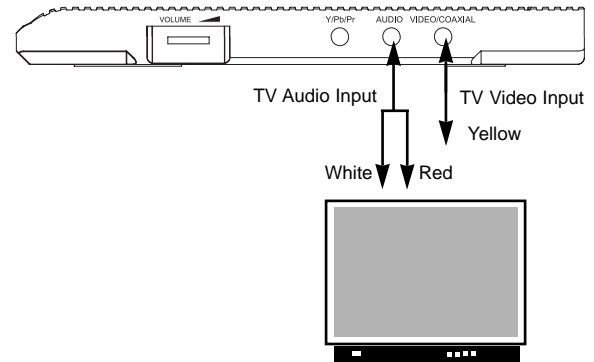

• When connected to a TV, you can use the P/N button on the remote to switch TV mode PAL/NTSC according to that of your connected TV.

Connecting to a TV

 BETTER

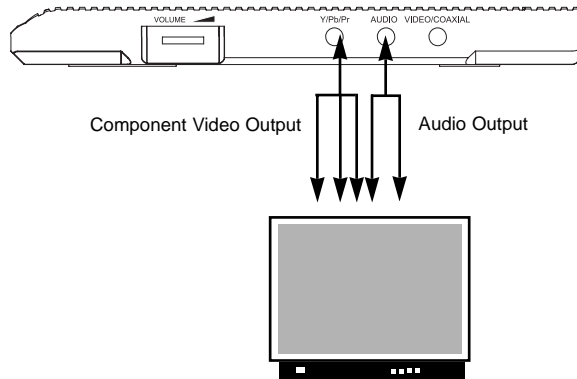

Connect your player with Y Video, Pr Video and Pb Video, if TV has Progressive Scan with Component Video Input.
To switch between Progressive Scan or Interlace Scan, press I/P on the remote, or press SETUP, then cursor to the Video Setup Page, then to TV Mode to make the switch.



 
- Turn off the power and unplug both units before setting up any connections.

Connecting to Optional Equipment

CONNECTING HEADPHONES

Your player allows two people enjoy music at the same time with Y-adapter for headphone.

1. Connect the Y-adapter with the headphone jack of the player and then the headphones with the jacks on the opposite site of the adapter.
2. Adjust the volume by turning the volume control wheel.

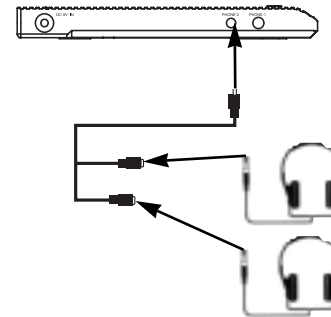

There are two phone jacks PHONE 1 & PHONE 2 available on the side.



 
- Avoid listening to sound at high levels which may be harmful to your ears.

Connecting to Optional Equipment

Enjoying Dolby Pro Logic Surround Sound (GOOD) Dolby Pro Logic Surround

Enjoy the dynamic realistic sound of Dolby Pro Logic Surround by connecting an amplifier and speaker system (right and left front speakers, a center speaker, and one or two rear speakers, sub-woofer).

Connection
Example

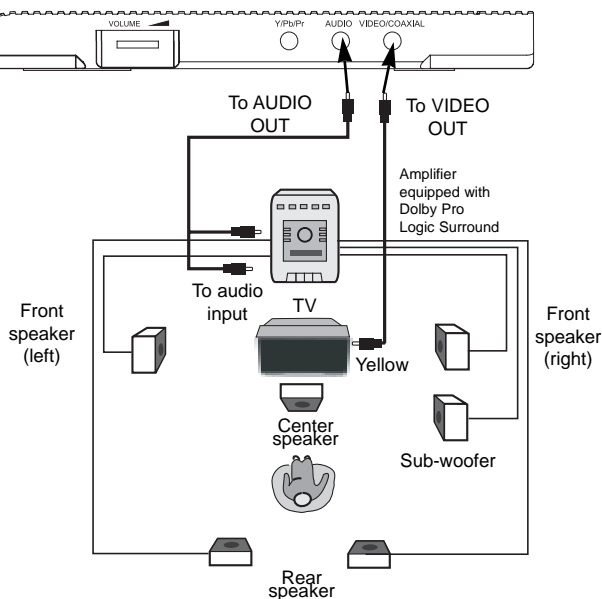

15

Connecting to Optional Equipment

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

It is forbidden by law to copy, broadcast, show, play in public, and rent copyrighted material without permission.

DVD video discs are copy protected, and any recordings made from these discs will be distorted.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished works.
©1992-1997 Dolby Laboratories, Inc. All rights reserved.



- Adjust the volume of your player to a comfortable listening level to avoid any speaker damage.
- When connecting and disconnecting the DVD video player, turn off the amplifier to avoid any speaker damage.

 
16

Connecting to Optional Equipment

Enjoy Dolby Digital (BETTER) Dolby Digital

Dolby Digital can deliver surround sound with five discrete full range channels plus a sixth channel for a subwoofer. You can enjoy your DVD with a Dolby Digital System. All you need is to connect your DVD player to a Dolby Digital receiver or a Dolby Digital Ready receiver with an external decoder.


DVD SIDE

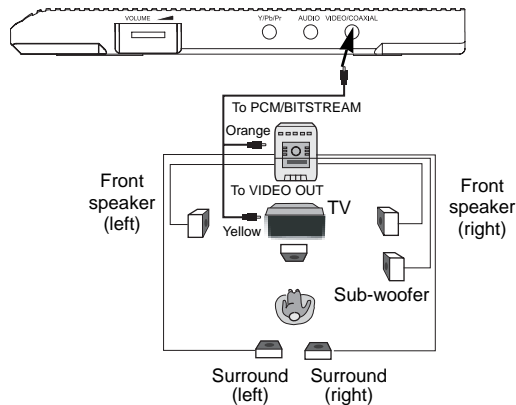


Set "SPDIF Output" to "SPDIF/PCM" in "General Setup" from the Setup Menu.

Playing Back a Disc

 CONTROLS FOR BASIC PLAYBACK

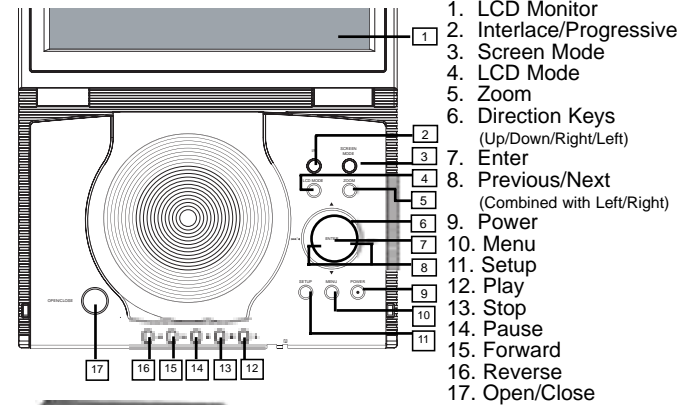

 1. LCD Monitor
2. Interlace/Progressive
3. Screen Mode
4. LCD Mode
5. Zoom
6. Direction Keys (Up/Down/Right/Left)
7. Enter
8. Previous/Next (Combined with Left/Right)
9. Power
10. Menu
11. Setup
12. Play
13. Stop
14. Pause
15. Forward
16. Reverse
17. Open/Close

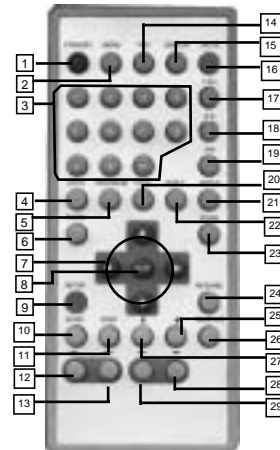

1. STANDBY
2. MENU
3. NUMBERS
4. GOTO
5. PROGRAM
6. AUDIO
7. CURSOR (UP/DOWN/RIGHT/LEFT)
8. PLAY
9. SETUP
10. SLOW
11. STEP
12. PREVIOUS
13. NEXT
14. PBC (Playback Control)
15. DISPLAY
16. MUTE
17. 1-ALL
18. A-B
19. P/N (PAL/NTSC)
20. TITLE
21. ANGLE
22. SUBTITLE
23. ZOOM
24. RESUME
25. STOP
26. SHUFFLE
27. PAUSE
28. FORWARD
29. REVERSE

Playing Back a Disc

HOW TO START PLAYBACK FROM THE MENU SCREEN

1. Press **TITLE/MENU** to access the menu screen.

 
2. Press **▲▼◀▶** or the **number buttons** to select the title.

3. Press the **ENTER** or **PLAY** button.

The DVD video player will start playback from the title selected.

Note:

You also can input the assigned number of the title to select it directly.

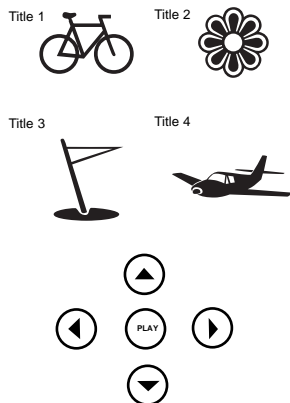


HOW TO PAUSE PLAYBACK (STILL PLAYBACK)

Press the **PAUSE** once during playback.

Press **STEP** repeatedly during playback, the picture will advance one frame each time, then press **PLAY** to resume normal playback.

 During the still playback the sound is muted.

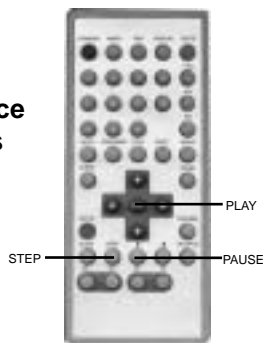


Playing Back a Disc

HOW TO STOP PLAYBACK


Press the **STOP** button.

 The player is stopped.

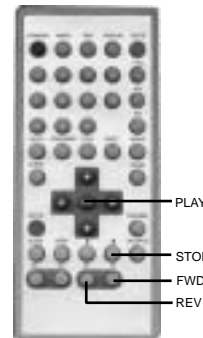

FAST FORWARD & REWIND

 You can playback a disc at 2x, 4x, 8x or 16x the normal speed for fast forward or rewind.



Press the **REV** or **FWD** button during playback.

The playback speed becomes double the normal speed. The playback speed changes, each time you press the REV or FWD button.

TO RESUME NORMAL PLAYBACK.
Press **PLAY**.



Note:

 
The function is invalid on some DVD discs.

Playing Back a Disc


PLAYING IN SLOW-MOTION

A disc can also be played back in slow-motion.

Press the **SLOW** button during playback

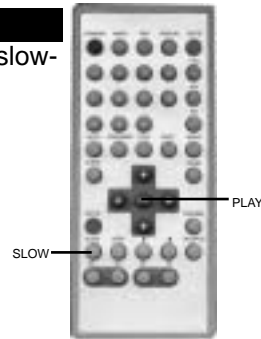

TV SCREEN

 

The playback speed becomes 1/2, 1/4, 1/8, or 1/16 of the normal speed each time you press the SLOW button.

**TO RESUME NORMAL PLAYBACK.
Press PLAY.**



- During REV, FWD and slow-motion playback, the sound is muted.
- The function is invalid on some DVD discs.

 
Playing Back a KODAK Picture CD/JPEG

1. Load your KODAK Picture CD or JPEG disc.

When a KODAK Picture CD is loaded, it will start playback automatically.

2. Select a folder or a picture/song contained on the JPEG or other data disc, a menu will appear on the screen.

Press UP or DOWN to select a folder, and press ENTER or PLAY to view folder contents.

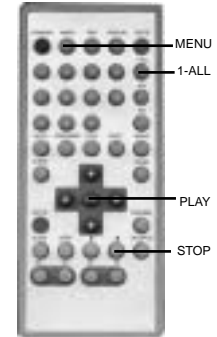

3. Select one play mode.

You can use the button 1-ALL to select one playback mode, repeat one or all.

Press UP or DOWN to choose the picture or song the you want to enjoy.

4. Start playback

Press ENTER or PLAY to enjoy the pictures or songs.

5. Use the STOP or MENU button to view the contents

 
When JPEG CD is played, the STOP or MENU is used to display JPEG folders and the corresponding files.

Creating your own Picture CDs

Using your computer save pictures as JPEG format and burn them on a CD-R disc, then you can watch on your TV.

Locating a Specific Title, Chapter or Track

DVD DISCS ARE NORMALLY DIVIDED INTO TITLES WHICH ARE SUB-DIVIDED INTO CHAPTERS. MOREOVER, CDS ARE DIVIDED INTO TRACKS.

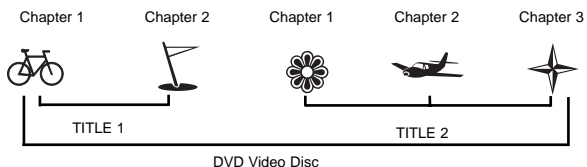

LOCATING A TITLE USING THE TITLE MENU

You can locate a specific title using the title menu function, if a DVD video disc contains a title menu.

1. Press the TITLE button

On the LCD or TV screen, the title menu will appear.

2. Press the ▲▼◀▶ button to select the title you want.

 
You can also directly locate a specific title by pressing its assigned number with the number buttons.

3. Press the PLAY button

This will cause the DVD video player to start playback from chapter 1 of the title selected.

You also can use skip buttons to select a title or track desired:

Press ◀◀ or ▶▶ button repeatedly till the one displays.

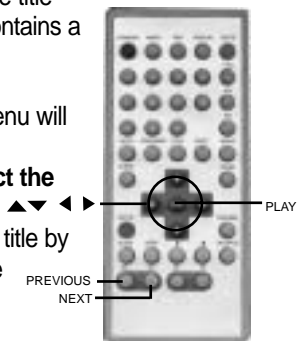



Playing Repeatedly

THIS DVD VIDEO PLAYER ALLOWS YOU TO PLAYBACK A SPECIFIC TITLE, CHAPTER, TRACK, OR SEGMENT REPEATEDLY. (TITLE REPEAT, CHAPTER/TRACK REPEAT, A-B REPEAT)

HOW TO REPEAT A TITLE, CHAPTER, OR DISC

During normal playback, press the 1-ALL button.

 
 
The repeat mode changes, each time you press the 1-ALL button.

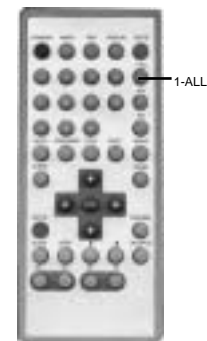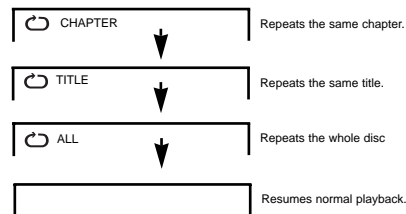

Playing Repeatedly

HOW TO REPEAT A SPECIFIC SEGMENT

  
1. Press the A-B button at the beginning of the segment in which you want to repeat playback (point A).
2. Press the A-B button again at the end of the segment (point B)
The DVD video player will automatically return to point A and start to repeat playback of the selected segment (A-B).
3. Press the A-B button to cancel the A-B repeat function
The DVD video player will resume to normal playback.

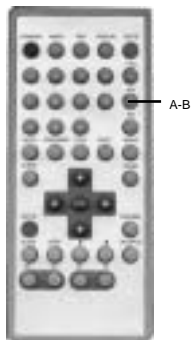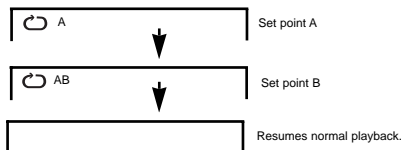


Playing in Favorite Order

HOW TO SET TITLES, CHAPTERS, OR TRACKS IN A FAVORITE ORDER

 1. Press the PROGRAM button.
PROGRAM MENU displays on the screen.

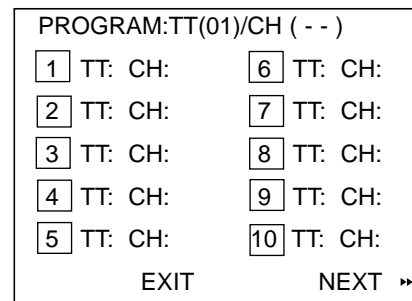

 2. Using the numbered button, select the items you want in the order you want them programmed in.
The number of the item selected will be input into the PROGRAM volume.

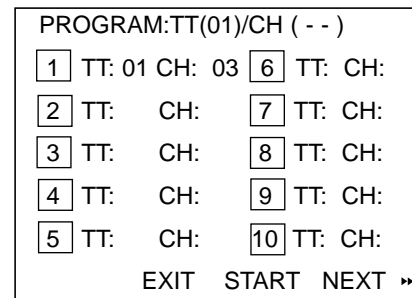

Playing in Favorite Order

3. Highlight **START** and press **ENTER** to start program playback.

 
4. To clear the programmed, move the cursor to **STOP** and then press **ENTER** to confirm it.

```
PROGRAM:TT(01)/CH ( - - )
[1] TT: 01 CH: 03 [6] TT: CH:
[2] TT:   CH:   [7] TT: CH:
[3] TT:   CH:   [8] TT: CH:
[4] TT:   CH:   [9] TT: CH:
[5] TT:   CH:  [10] TT: CH:
EXIT  STOP  NEXT  ►►
```

Zooming a Picture

ZOOMING A PICTURE



This DVD video player allows you to zoom into a picture as well as the zoom point.

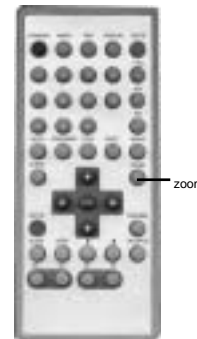

Press **ZOOM** during normal playback or slow - motion.

The player magnifies in the center of the picture.

  If you press **▲▼◀▶** during zoom playback, the zoom point shifts.

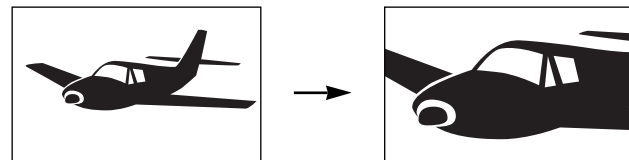

To cancel the zoom function, press **ZOOM** again.

Selecting Subtitles

HOW TO DISPLAY SUBTITLES

You have the option to select a preferred subtitle from those included on the DVD video disc.

 
Press the **SUBTITLE** button during playback.

SUBTITLE 1 ↓ 1/03

SUBTITLE 2 ↓ 2/03

SUBTITLE 3 ↓ 3/03

SUBTITLE OFF

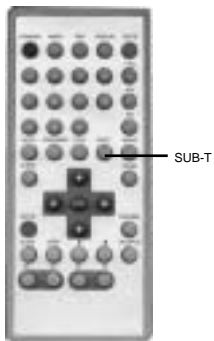

To **TURN OFF** the subtitles.

Press the **SUBTITLE** during playback until the subtitles disappears.

 
SUBTITLE OFF ↓

Using the On-Screen Display

THIS UNIT ALLOWS YOU TO VIEW THE OPERATIONAL STATUS AND DISC INFORMATION ON YOUR TV SCREEN.


CHECKING THE OPERATIONAL STATUS

With this function you can view on your TV the following:
-Current title -Track number -Total playing time

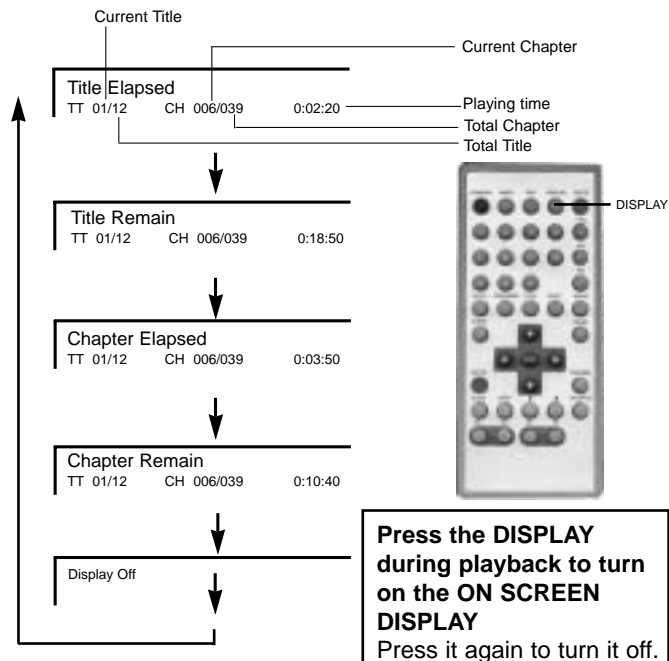

Selecting the Camera Angle

 
THIS DVD VIDEO PLAYER ALLOWS YOU TO SELECT FROM SEVERAL DIFFERENT ANGLES.

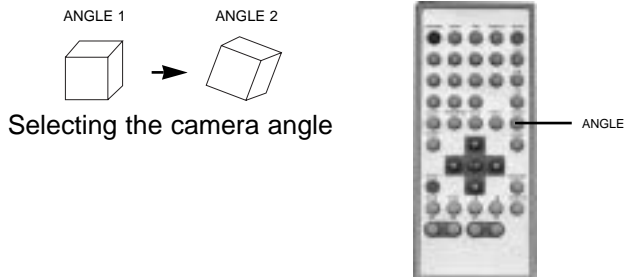


HOW TO CHANGE THE CAMERA ANGLE

If the DVD video disc was recorded with multiple angles, you have the option to change the camera angle of the scene you are watching.

Press the ANGLE button while playing back a scene recorded with multiple angles.

 - You may only press the ANGLE button when the angle icon  is flashing on the DVD display.
- Each time you press the ANGLE button, the angle will change.

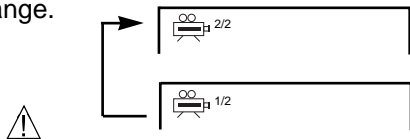

- The angle function will not work on DVD video discs that does not contains recorded with multiple angles.

Setting the Parental Lock

YOU CAN USE THE PARENTAL LOCK FUNCTION ONLY WITH DVD VIDEO DISCS EQUIPPED WITH THE PARENTAL LOCK FEATURE.

SETTING THE PARENTAL LOCK

 
 
DVD video discs equipped with the parental lock function are rated according to their content. The contents allowed by a parental lock level and the way a DVD video disc can be controlled may vary from disc to disc. For example, if the disc allowed, you could edit out violent scenes unsuitable for children and replace them with more suitable scenes, or lock out playback of the disc all together.

1. Press STOP twice during playback

2. Press SETUP

The SETUP MENU appears on the screen.

3. Select Preference Page, press ENTER or PLAY.

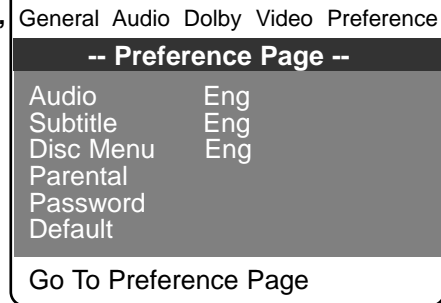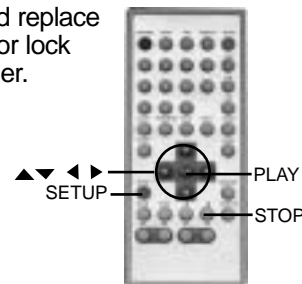


Setting the Parental Lock

4. Select Parental, press ENTER or PLAY.

5. Select ratings, press PLAY

1	Kid safe
2	G
3	Pg
4	Pg 13
5	Pgr
6	R
7	Nc 17
8	Adult

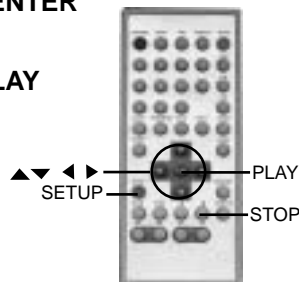 

6. Enter your password then press PLAY.

The pre-set password is **3308**

Password	<input type="text"/>
<input type="button" value="OK"/>	

7. Press SETUP to exit setup, press PLAY to start.

TO CHANGE YOUR PASSWORD:

1. Follow step 4 to select password change.
2. Enter old password.
3. Enter new password.
4. Re-enter to confirm your new password.
5. Press ENTER or PLAY.
6. Press SETUP to exit.

Rechargeable Battery Installation & Use

This DVD player is supplied with a high-effective rechargeable Lithium battery. Such battery pack has a high storage capacity and low level of degradation. The latter means that the battery can also be recharged when only partly spent.

The provided battery can be recharged for about 300 times. It takes about 4-5 hours to recharge the battery till the red indicator turns green. A fully charged battery can power the unit for about 2.5 hours. Power consumption depends on the operations of the player such as brightness of the screen, volume level, etc.

Recharge the battery timely when fully spent in order to maximize its life.

Never recharge the battery which is already fully charged.

Under no circumstance should you short out the battery, store it in a metal container, or leave it in a humid or damp environment. Store the battery in an airtight container if possible. Recharge effectiveness will degrade when environmental temperatures drop below 10 °C or exceed 30 °C.

 
The battery can be charged either separately or whilst attached to the DVD Player, using the AC adapter. When the battery is attached to the Player, the charger can be connected to either the battery or the Player input and will charge the battery at the same time as powering the Player.



- When loading/releasing the battery pack, make sure the unit is unplugged.

Customizing the Function Settings

THIS UNIT ALLOWS YOU TO CUSTOMIZE THE PERFORMANCE TO YOUR PERSONAL PREFERENCE.

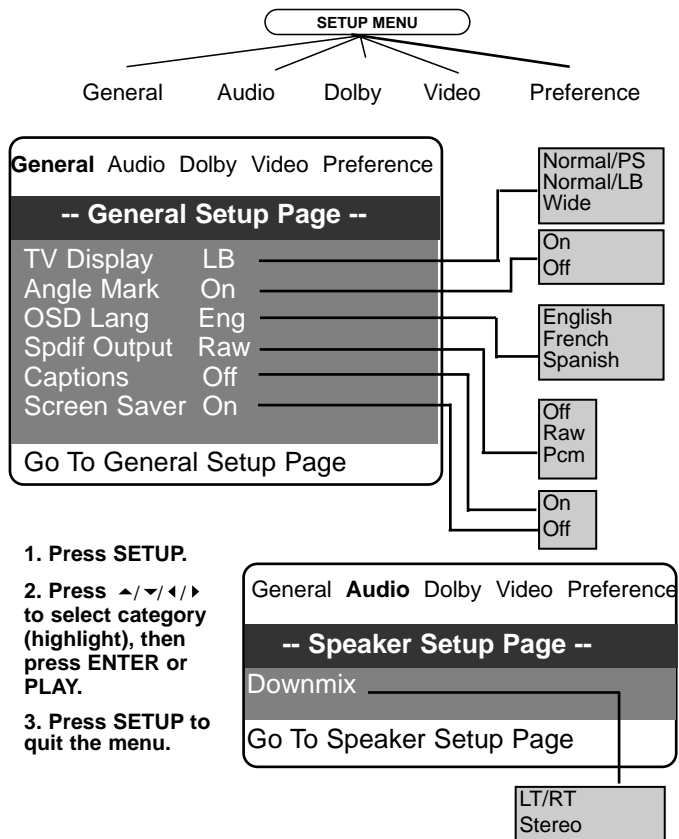


1. Press **SETUP**.

2. Press **▲/▼/◀/▶** to select category (highlight), then press **ENTER** or **PLAY**.

3. Press **SETUP** to quit the menu.

 Customizing the Function Settings

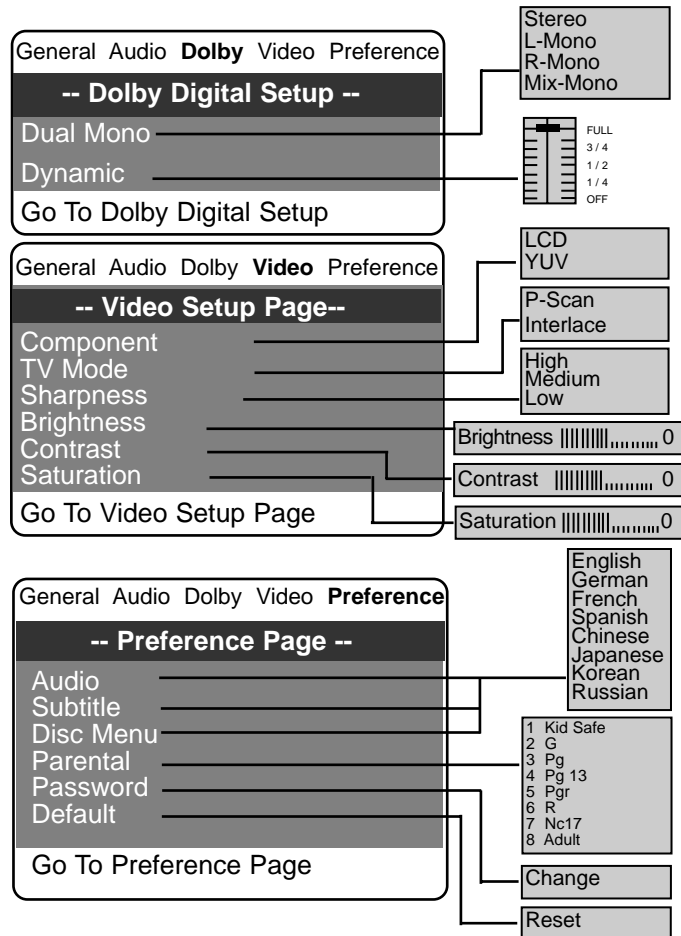

Trouble Shooting Guide

Symptom	Correction
No power	<ul style="list-style-type: none"> • Check if the AC adapter of power plug is connected securely. • If powered with the battery, check if it is exhausted.
No picture/sound	<ul style="list-style-type: none"> • Make sure the connection is in good condition; volume is not too low; audio receiver or TV work normally; audio setting is proper. • Check if TV Type is correct PAL or NTSC by the button P/N on the remote.
Interference or scrolling	<ul style="list-style-type: none"> • Due to the effect of copy protection. Avoid connecting to a VCR or TV/VCR combination.
Black & White picture	<ul style="list-style-type: none"> • Adjust the vertical hold on your TV.
The player does not start playback	<ul style="list-style-type: none"> • The DVD+-RW you played should be finalized, and not be an empty disc. • Place the disc with the graphics side up and make sure it's inside the guide. • Make sure the disc is free from scratches & fingerprints. • Insert a playable disc. (Check the disc type and color system). • Do not playback a disc which region code is different from that of your player. • Clean the disc. • Cancel the parental lock function or change the parental lock level. (<i>The Pre-set password is 3308.</i>) • Reset the player.

Carrying Bag Installation

SAFETY WARNING!

On no account should this unit be used by the driver of a moving motor vehicle, or left unsecured in the vehicle whilst driving.

If this unit is being used by a passenger in your vehicle, be sure that it is secured or held safely, and does not obstruct any safety device (i.e. airbag, seat belt etc.) that is fitted."

1. Insert the unit into bag as shown.



2. Insert the straps on carrying bag as shown.



3. Take straps and hook up the neck headrest of the driver's seat as shown.



4. Adjust the straps tightly so that the unit is secured.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>