



# USER'S GUIDE

V:1608-0331-09

HT219B

5.1 Channel Home Theater System

## CONTENTS

<b>WARNINGS AND PRECATIONS</b>	<b>2</b>
<b>CONNECTING TO A TELEVISION</b>	<b>4</b>
ADVANCED TELEVISION INPUTS & OUTPUTS .....	4
HT219 OUTPUTS & INPUTS .....	4
<b>CONNECTING TO A TELEVISION</b>	<b>5</b>
USING THE S-VIDEO OUTPUT .....	5
USING THE COMPOSITE VIDEO OUTPUT .....	5
USING THE COMPONENT VIDEO OUTPUT .....	5
<b>DVD OPERATIONS</b>	<b>6</b>
PLAYING A DVD .....	6
<b>DVD OPERATIONS</b>	<b>7</b>
PROGRAMMING A DVD .....	7
REPEAT AND REPEAT A-B .....	7
SEARCHING A LOADED DVD .....	7
<b>OPERATIONS</b>	<b>8</b>
PLAYING A CD .....	8
USING THE AUXILIARY INPUTS .....	8
<b>RADIO OPERATIONS</b>	<b>9</b>
TUNING THE AM OR FM RADIO .....	9
SAVING AN AM OR FM RADIO STATION TO THE UNIT'S MEMORY .....	9
<b>THE SETUP MENU</b>	<b>10-11</b>
<b>CONTROLS &amp; CONTROL GLOSSARY</b>	<b>12-19</b>
<b>COMPANY INFORMATION</b>	<b>20</b>
GREEN INITIATIVE .....	20
INTERNATIONAL SUPPORT .....	20
SERVICE INFORMATION .....	20

## WARNINGS AND PRECATIONS


- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To prevent fire or shock hazards, do not expose this unit to rain or moisture.
- **WARNING:** The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste
- **WARNING:** Lithium ion batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

Do not mix old and new batteries.


Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

*No mezcle baterías viejas y nuevas.*

*No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).*




**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN




**WARNING:** TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) OF THE UNIT. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.


CLASS 1 LASER PRODUCT  
PRODUCTO LÁSER CLASE 1  
PRODUIT LASER DE CLASSE 1  
LASER-PRODUKT DER KLASSE 1

**Class II equipment symbol**  
This symbol indicates that the unit has a double insulation system.

 




The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Grounding or Polarization - This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
16. Ventilation - Slots and opening in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed sofa, rug, or other similar surfaces. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
17. CAUTION: Use of any controls, adjustments or procedures other than those specified herein may result in hazardous radiation exposure.
18. CAUTION: Invisible laser radiation when open and inter locks defeated. Avoid exposure to beam.
19. Do not place the subwoofer near a cathode-ray television (CRT) or other devices that are sensitive to magnetic fields.
20. Do not use headphones/earphones at high volume
21. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
22. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

## Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.  
*L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.*
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.  
*La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.*
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.  
*Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.*
- Caution marking is located at the rear of apparatus.  
*Les précautions d'emploi sont inscrites en bas de l'appareil.*
- The marking information is located at the rear of apparatus.  
*Les marquages sont inscrits en bas de l'appareil.*

## FCC Warnings

 
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# CONNECTING TO A TELEVISION


## ADVANCED TELEVISION INPUTS & OUTPUTS

The Advanced Television Inputs and Outputs shown here are meant to serve as an example of how your television's inputs and outputs might be organized. All televisions are made differently, so please use this illustration as a reference only.

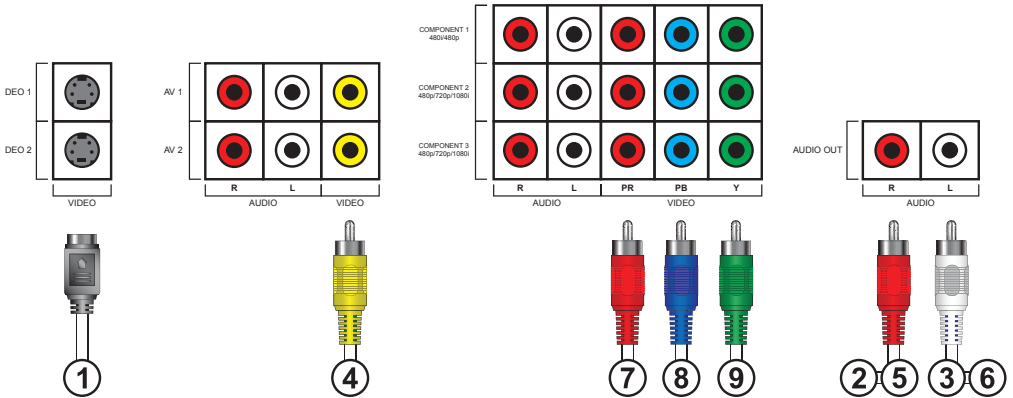

You may notice that several of the audio outputs in this diagram are going unused; this is because the HT219 is a 5.1 channel surround sound system, and will likely provide a higher quality sound than the speakers that are built into your television.

## HT219 OUTPUTS & INPUTS

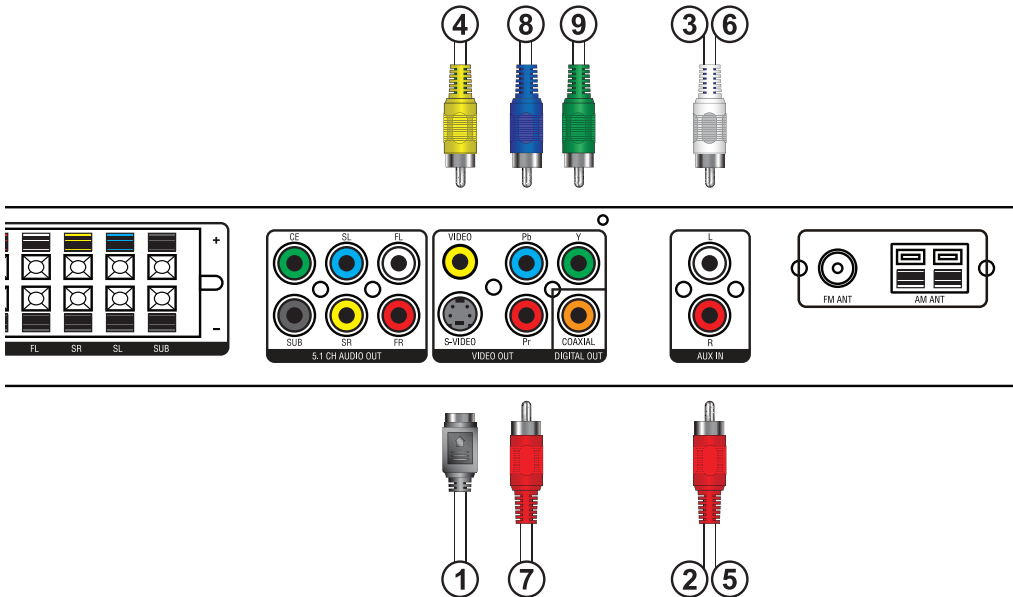 

**USING THE S-VIDEO OUTPUT**

*Requires an S-Video Cable, not included.*

The S-Video Cable is labelled with the number 1 in the diagram on the previous page.

1. Plug an S-Video Cable into the S-Video output on the unit.
2. Plug the other end of the S-Video Cable into the S-Video Input on a television.
3. Adjust the connected television's input setting to *S-Video*.

*This is typically done by pressing a TV/Video, or Source Button either on the television or on the television's remote.*

4. Check the speaker connections on the unit to ensure audio playback.

**USING THE COMPOSITE VIDEO OUTPUT**

*Requires an RCA Video Cable, included.*

The RCA Cable is labelled with the number 4 in the diagram on the previous page.

1. Plug the yellow connector from the RCA Video Cable into the Video Output on the unit.
2. Plug the yellow connector on the other end of the RCA Video Cable into the Video Input on a television.
3. Adjust the connected television's input setting to *Video* or *Composite Video*.

*This is typically done by pressing a TV/Video, or Source Button either on the television or on the television's remote.*

4. Check the speaker connections on the unit to ensure audio playback.

**USING THE COMPONENT VIDEO OUTPUT**

*Requires a Component Video Cable, not included.*

The Component Video Cable is labelled with the numbers 7, 8, and 9 in the diagram on the previous page.

1. Plug an Component Video Cable into the Component Video Output on the unit.
2. Plug the other end of the Component Video Cable into the Component Video Input on a television.
3. Adjust the connected television's input setting to *Component*.

*This is typically done by pressing a TV/Video, or Source Button either on the television or on the television's remote.*

4. Check the speaker connections on the unit to ensure audio playback.

### PLAYING A DVD

1. Press the **Open/Close Button** to open the disc drawer.
2. Load a DVD into the unit.
3. The DVD will start playing automatically.

*If the DVD does not start playing automatically, press the **Play/Pause Button** to begin playing the loaded DVD.*

- Press the **Play/Pause Button** to pause a DVD during play.
- Press the **Stop Button** to stop a DVD during play.
- Press the **Prev/Tun-** and **Next/Tun+** Buttons to skip between chapters on a loaded DVD.

Press the **Rewind & Fast Forward Buttons** on the remote to rewind and fast forward through a loaded DVD or CD.

- Press the **Display Button** to activate the on-screen display.

- **On-Screen Display Views:**

- Playing Content
- Time
- Title
- Chapter
- Audio
- Subtitle
- Angle
- Bitrate

- Press the **Mute Button** to mute the unit's volume.

- Press the **Subtitle Button** to switch between the DVD's different subtitle options.

*Please note, not all DVDs support the Subtitle Function.*

- Press the **Angle Button** to switch between the DVD's different angle options.

*Please note, not all DVDs support the Angle Function.*

- Press the **Zoom Button** to zoom in, up to 3 times the original size of the DVD.

- Press the **Audio Button** to switch between the DVD's different audio options.

*Please note, not all DVDs support the Audio Function.*

- Press the **Slow Button** to view the currently playing DVD in slow motion. (Slow Settings: 1/2, 1/4, 1/6, 1/8)
- Press the **Step Button** to skip through the current DVD one frame at a time.
- Press the **Shuffle Button** to play chapters in a random order.

### PROGRAMMING A DVD

1. While a DVD is playing, press the **Prog/Mem Button** on the remote control.
2. Use the **Number Keypad** to type the title number into the first blank, and the chapter number into the second blank.
3. Repeat step 2 until the desired chapters are programmed, then press the **Play Button**.
4. To cancel the program, press the **Program Button**, highlight "Clear Program" and press the **Enter Button** on the remote.

### REPEAT AND REPEAT A-B

- Press the **Repeat Button** once to repeat the current chapter, twice to repeat the current title, and three times to turn the repeat function off.
- Press the **A-B Button** to repeat a specified section of a DVD. Press once to create a starting point (A), and press a second time to create an ending point (B). Press the **A-B Button** a third time to turn the AB Repeat Function off.

### SEARCHING A LOADED DVD

1. While a DVD is playing, press the **Search Button** on the remote.
2. Press the **Up and Down Buttons** on the remote to switch between searching for a Title, Chapter, or specific Time.
3. Use the **Number Keypad** on the remote to type in a Title, Chapter, or Specific Time.
4. Press the **Enter Button** on the remote to go directly to the entered Title, Chapter, or Specific Time.
5. Press the **Search Button** at anytime to exit the Search Mode.

### PLAYING A CD

1. Press the **Open/Close Button** to open the disc drawer.
2. Load a CD or CD-R/RW into the unit.
3. The CD will start playing automatically.

*If the CD does not start playing automatically, press the **Play/Pause Button** to begin playing the loaded CD.*

- Press the **Play/Pause Button** to pause a CD during play.
- Press the **Stop Button** to stop a CD during play.
- Press the **Prev/Tun-** and **Next/Tun+** **Buttons** to skip between tracks on a loaded CD.

Press the **Rewind & Fast Forward Buttons** to rewind and fast forward through a loaded DVD or CD.

- Press the **Repeat Button** once to repeat the current track, and twice to repeat the entire album. Press the **Repeat Button** a third time to turn the repeat function off.

### USING THE AUXILIARY INPUTS

1. Connect an MP3 Player or other audio source to the **Auxiliary Input**.
2. Press the **Power Button** to turn the unit on.
3. Press the **Source Button** to switch the unit to *Aux Mode*.

Use the connected device's controls to control the audio playing through the unit.



**TUNING THE AM OR FM RADIO**

1. Press the **Power Button** to turn the unit on.

---

2. Press the **Source Button** to switch to *Radio Mode*.

---

3. Press the **AM/FM Button** to switch between AM and FM Radio Modes.

---

4. Press the **Prev/Tun-** and **Next/Tun+ Buttons** to tune the FM or AM radio.

*Press the ST/Mono Button on the remote to switch between stereo and mono mode.*

**SAVING AN AM OR FM RADIO STATION TO THE UNIT'S MEMORY**

1. Follow the instructions for Tuning the AM or FM Radio.

---

2. Press the **Rew/M- & FFWD/M+ Buttons** to select a memory slot.

---

3. Press the **Prev/Tun-** and **Next/Tun+ Buttons** to tune the FM or AM radio.

---

4. Press the **Prog/Mem Button** to save the current radio station to the currently selected memory slot.

 
*Up to 20 AM and 20 FM stations can be saved at one time.*

## THE SETUP MENU

Press the Setup Button on the remote to access the unit's setup menu. You can only access the setup menu from *DVD/CD Mode*.





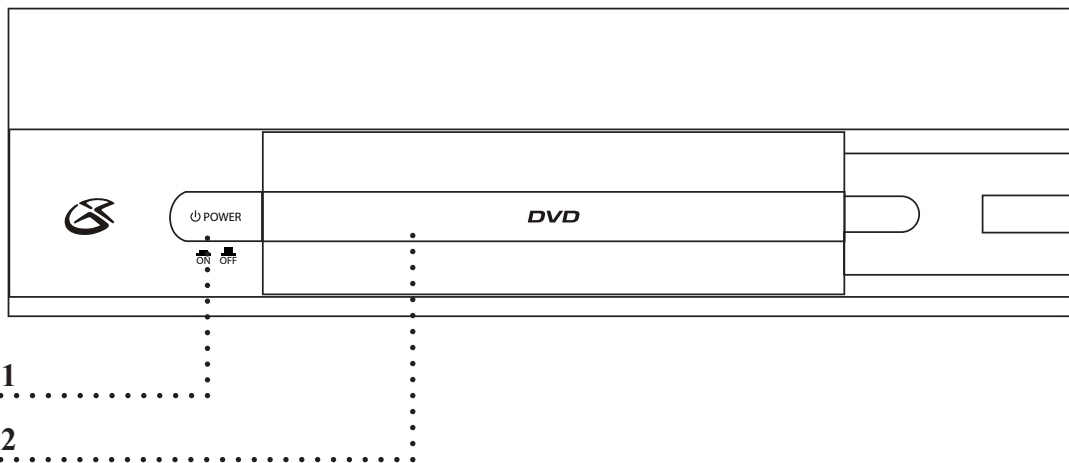

## CONTROL GLOSSARY

### 01. Power Button

Press the Power Button to turn the unit off and on.

### 02. Disc Drawer

Press the Open/Close Button to open and close the motorized Disc Drawer.

#### Disc Compatibility:

##### AUDIO

 
- CD
- CD - R/RW

##### VIDEO

- DVD
- DVD  $\pm$  R/RW

##### DATA

- JPEG Disc

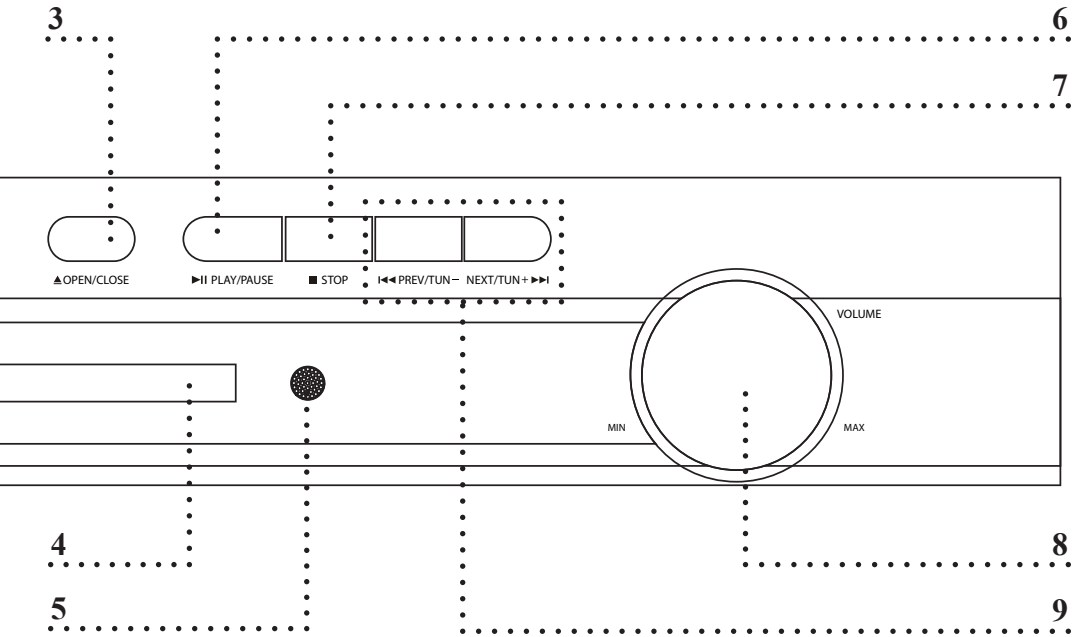

## CONTROL GLOSSARY

**03. Open/Close Button**

Press the Open/Close Button to open and close the Disc Drawer.

**04. LED Display****05. Infrared Receiver**

The Infrared Receiver receives signals from the unit's remote control.

*If the unit is not responding to the remote, check to make sure that the infrared receiver is not hidden or obstructed.*

**06. Play/Pause Button**

Press the Play/Pause Button to play or pause a loaded disc.

**07. Stop Button**

Press the Stop Button to stop a loaded disc while playing.

 
**08. Volume Dial**

Turn the Volume dial to adjust the volume of the unit.

**09. Prev/Tun- & Next/Tun+ Buttons**

Press the Prev/Tun- & Next/Tun+ Buttons to skip between chapters, tracks, or photos on a loaded disc.

Press the Prev/Tun- & Next/Tun+ Buttons to tune the AM and FM radio.

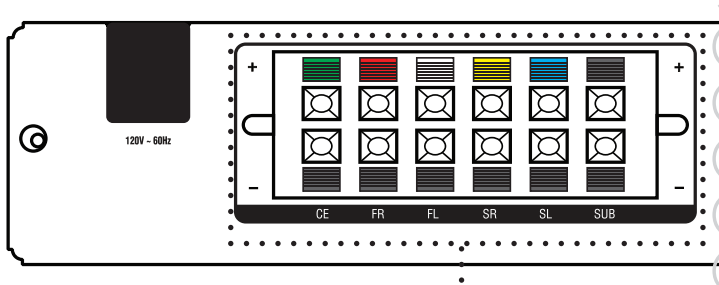

10

## CONTROL GLOSSARY

### 10. Speaker & Subwoofer Connections

Use the Speaker & Subwoofer Connections to connect the included speakers and subwoofer to the unit.

**CE** - Center Channel Speaker

**FR** - Front Right Channel Speaker

 
**FL** - Front Left Channel Speaker

**SR** - Surround Right Speaker


**SL** - Surround Left Speaker

**SUB** - Subwoofer

### SUGGESTED SPEAKER LAYOUT

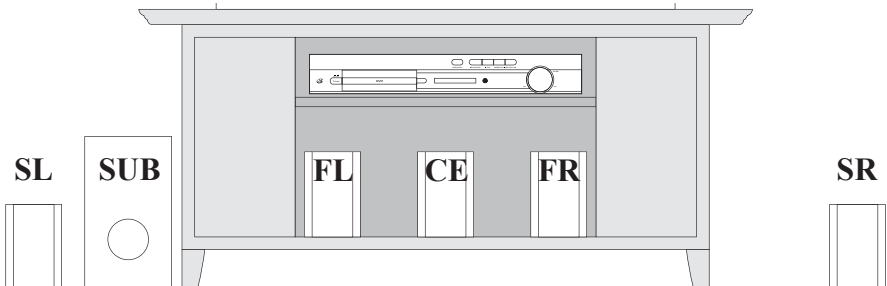

14

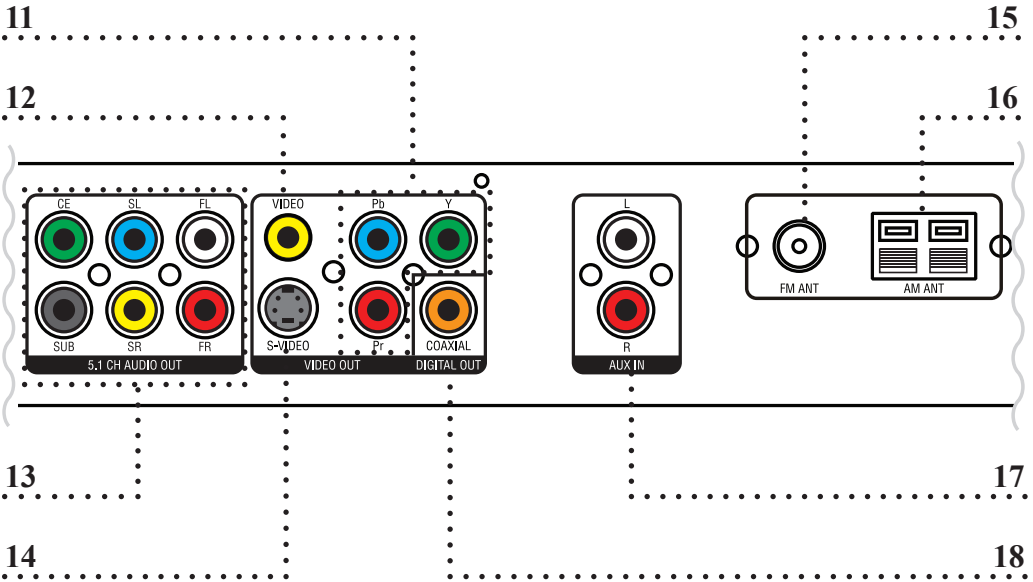 

## CONTROL GLOSSARY

**11. Component Video Output**

*Requires a RCA Component Cable, not included.*

Connect the Component Video Output to a television to output high quality video from the unit.

**12. Composite Video Output**

*Requires an RCA Composite Video Cable, included.*

Connect the Composite Video Output to a television to output standard quality video from the unit.

**13. 5.1 Channel Audio Output**

Use the 5.1 Channel Audio Outputs to connect the unit to a home stereo system.

**14. S-Video Output**

*Requires an S-Video Cable.*

Connect the S-Video Output to a television to output high quality video from the unit.

**15. FM Antenna Connection**

Use the FM Antenna Connection to connect the included FM antenna to the unit.

**16. AM Antenna Connection**

Use the AM Antenna Connection to connect the included AM antenna to the unit.

**17. Auxiliary Input**

 
Use the Auxiliary Input to connect an audio source to the unit. (*MP3 Player; Home Music System, VCR*)

**18. Coaxial Audio Output**

*Requires an RCA Digital Audio Cable, not included.*

Use the Coaxial Audio Output to connect the unit to an audio receiver or home music system to output high quality audio.

# CONTROLS

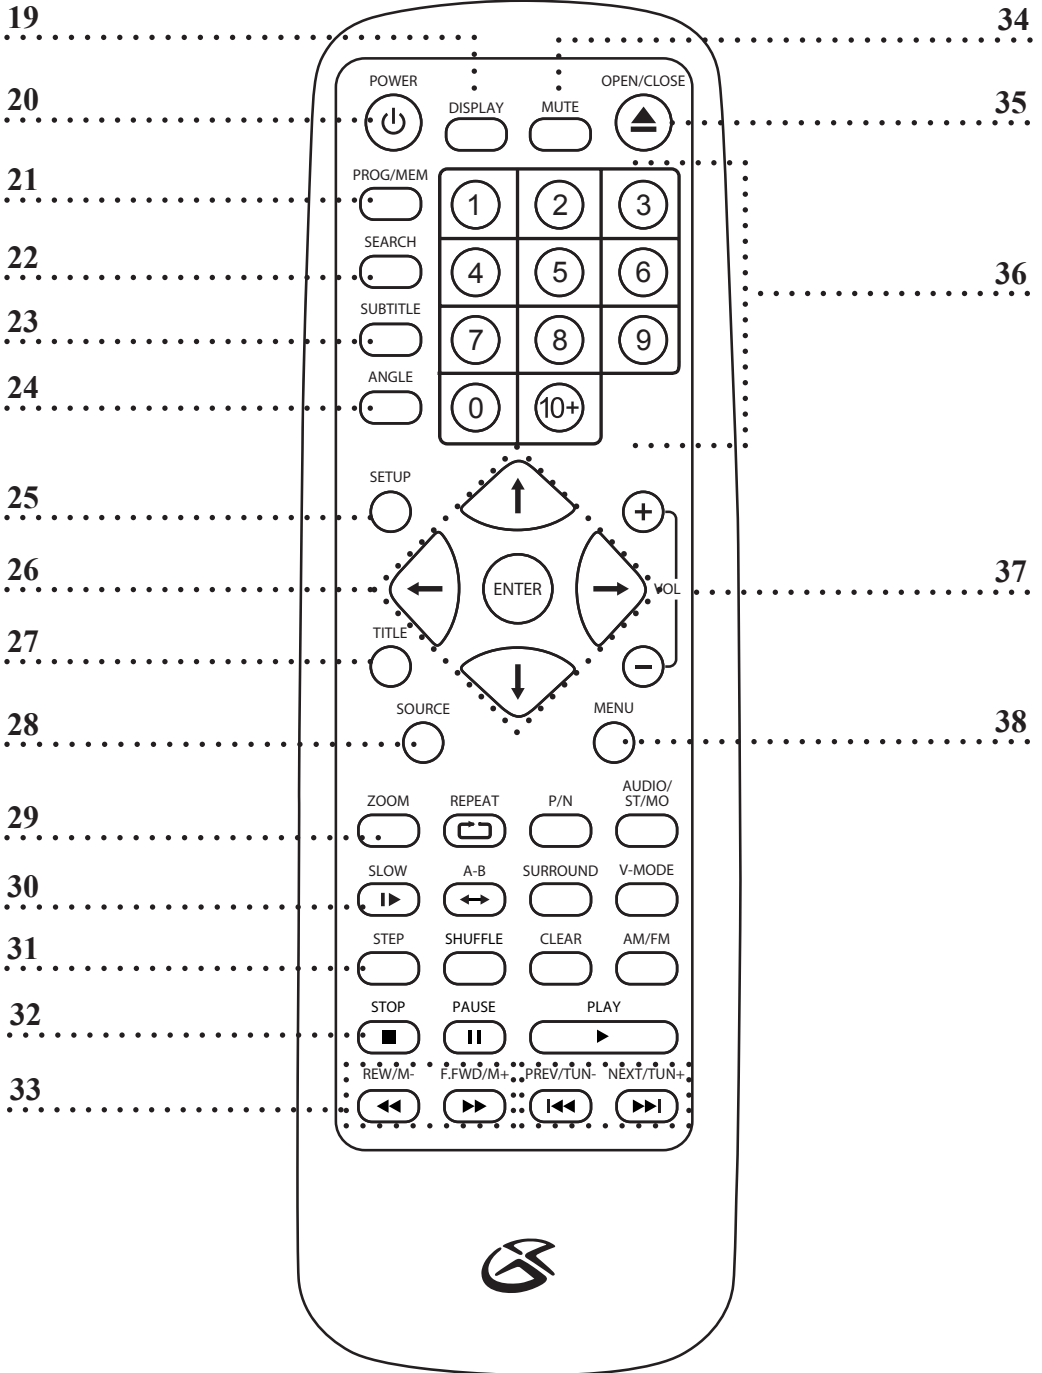



**19. Display Button**

Press the Display Button to activate the on-screen display. (*Playing Content, Time, Title, Chapter, Audio, Subtitle, Angle, and Bitrate*)

**20. Power Button**

Press the Power Button to turn the unit off and on.

**21. Prog/Mem Button**

Press the Program Button to program a DVD to play chapters in a specified order.

Press the Memory Button to save the current radio station to the unit's memory.

**22. Search Button**

Press the Search Button to go to a specific Title, Chapter, or Time.

**23. Subtitle Button**

Press the Subtitle Button to switch between the DVD's different subtitle options.

**24. Angle Button**

Press the Angle Button to switch between the DVD's different angle options.

**25. Setup Button**

Press the Setup Button to enter the Setup Menu.

**26. Up/Down/Left/Right & Enter Buttons**

Press the Up/Down/Left/Right Buttons to navigate the unit's menus.

Press the Enter Button to make selections on the unit.

**27. Title Button**

Press the Title Button to go to the title screen on a loaded DVD.

**28. Source Button**

Press the Source Button to switch between *DVD/CD, Radio, and Auxiliary Input Mode*.

**29. Zoom Button**

Press the Zoom Button to zoom in, up to 3 times the original size of the DVD.

**30. Slow Button**

Press the Slow Button to view the currently playing DVD in slow motion. (Slow Settings: 1/2, 1/4, 1/6, and 1/8 speed)

**31. Step Button**

Press the Step Button to skip through the current DVD one frame at a time.

**32. Stop Button**

Press the Stop Button to stop a DVD or CD during play.

**33. Rew/M- & F.FWD/M+ Buttons**

Press the Rewind & Fast Forward Buttons to rewind and fast forward through a loaded DVD or CD.

Press the M- and M+ Buttons to cycle through the saved radio stations.

**34. Mute Button**

Press the Mute Button to mute the volume of the unit.

**35. Open/Close Button**

 
Press the Open/Close Button open or close the disc drawer.

**36. Number Keypad****37. Volume Buttons**

Press the Volume Buttons to adjust the volume of the unit.

**38. Menu Button**

Press the Menu Button to access the loaded DVD's menu.

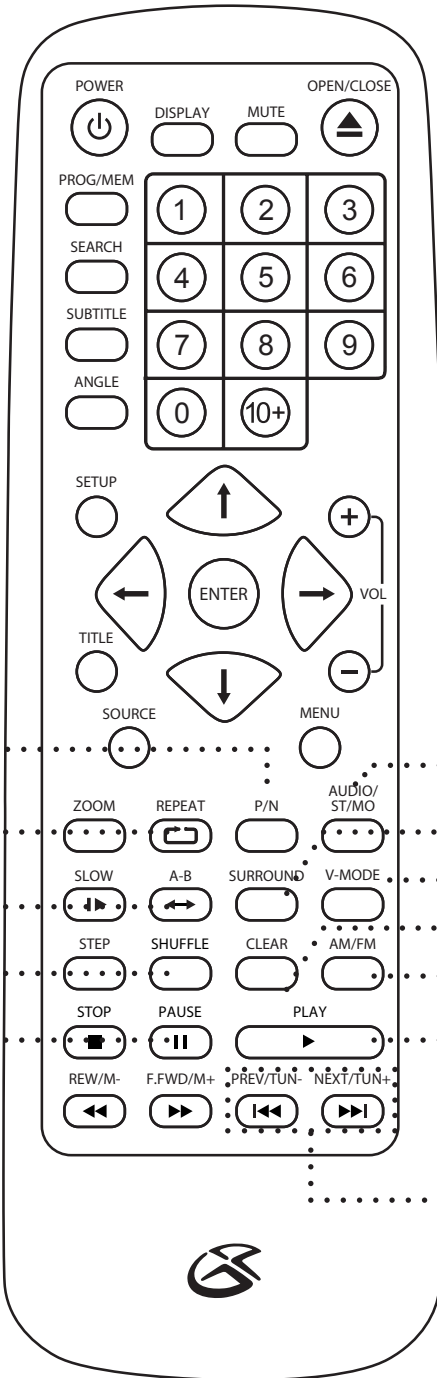

39	.....	44
40	.....	45
41	.....	46
42	.....	47
43	.....	48
	.....	49
	.....	50



**39. P/N Button**

Press the P/N Button to switch the TV Mode between PAL, NTSC, and Auto.

---

**40. Repeat Button**

Press the Repeat Button once to repeat the current chapter or track, twice to repeat the current title or album, and three times to turn the repeat function off.

---

**41. A-B Button**

Press the A-B Button to repeat a specified section of a DVD. Press once to create a starting point (A), and press a second time to create an ending point (B). Press the A-B Button a third time to turn the AB Repeat Function off.

---

**42. Shuffle Button**

Press the Shuffle Button to play chapters or tracks in a random order.

---

**43. Pause Button**

Press the Pause Button to pause a DVD or CD during play.

---

**44. Audio/ST/Mono Button**

Press the Audio Button switch between the DVD's different audio options.

---

Press the ST/Mono Button to switch between stereo and mono modes when listening to the radio.

---

**45. Surround Button**

Press the Surround Button to turn the surround sound off or on.

---

**46. V-Mode Button**

Press the V-Mode Button to adjust the unit's video mode.

---

**47. Clear Button**

Press the Clear Button to clear numbers added from the Number Keypad.

---

**48. AM/FM Button**

Press the AM/FM Button to switch between AM and FM radio when in *Radio Mode*.

---

**49. Play Button**

Press the Play Button to play a loaded CD or DVD.

---

**50. Prev/Tun- & Next/Tun+ Buttons**

Press the Previous & Next Buttons to skip between tracks or chapters on loaded CDs or DVDs.

---

Press the Tun- & Tun+ Buttons to tune the AM or FM radio.

---

### GREEN INITIATIVE

#### Environmental Commitment to ‘Protect for Today and Sustain for Tomorrow’

2009 marks the official launch of DPI, Inc.’s corporate campaign for a greener and cleaner world. DPI and its four brands, iLive, WeatherX, Capri, and GPX, are building upon environmental initiatives introduced at all of their facilities to help formulate and sustain significant and important conservation efforts within its manufacturing and marketing communities. In addition to targeting and selecting energy efficient product features, and structuring ‘green office’ procedures, other initial program efforts include:

- Reduction of all packaging sizes
- Recyclable plastics for clamshell packages, with a plan to eventually replace plastic with recyclable paper
- Recycled fiber board in place of the polyfoam in packing boxes
- Recycled plastics in place of the virgin material in product construction

### INTERNATIONAL SUPPORT

To download this User’s Guide in English, Spanish, or French, visit the support section at [www.gpx.com](http://www.gpx.com).

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en [www.gpx.com](http://www.gpx.com).

Pour télécharger ce guide de l’utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez [www.gpx.com](http://www.gpx.com).

### SERVICE INFORMATION

Address: 2116 Carr Street, St. Louis MO, 63106

Phone: 1-314-621-2881

Fax: 1-314-588-1805

Email: [prodinfo@gpx.com](mailto:prodinfo@gpx.com)

Parts Email: [partsinfo@dpi-global.com](mailto:partsinfo@dpi-global.com)

Website: [www.gpx.com](http://www.gpx.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>