


Hamilton Beach®

Percolator

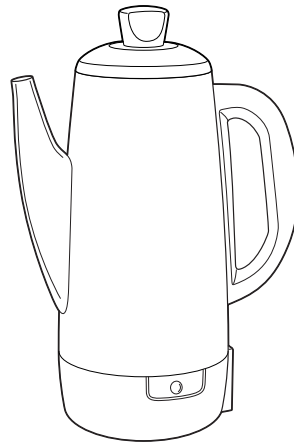

English 2
USA: 1-800-851-8900
Canada : 1-800-267-2826

840107700

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs. Care must be taken, as burns can occur from touching hot parts or from spilled, hot liquid.
3. To protect against fire, electric shock, and injury to persons do not place cord, plug or percolator in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when the percolator is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
6. Percolator must be operated on a flat surface away from the edge of counter to prevent accidental tipping.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer assistance number for information on examination, repair, or mechanical adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electrical shock or injury to persons.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces, including stove.
11. Be certain cover is securely in place during perk cycle and when serving coffee. Scalding may occur if cover is removed during perk cycle.
12. Do not place percolator on or near a hot gas or electric burner or in a heated oven.

13. Always attach plug to appliance first, then plug cord into wall outlet. To disconnect percolator, remove plug from wall outlet, then unplug from percolator.
14. Warning: To reduce the risk of fire or electric shock, do not remove the bottom cover. No user serviceable parts are inside. Repair should be done by authorized service personnel only.
15. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS!

CONSUMER SAFETY INFORMATION

This appliance intended for household use only.

This appliance is equipped with a grounded-type 3-wire cord (3-prong plug). This type of plug will only fit into an electrical outlet made for a 3-prong plug. This is a safety feature intended to help reduce the risk of electrical shock. If the plug should fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the grounding pin by modifying the plug in any way.

 
The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a longer cord. If a longer cord is necessary an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the percolator. Care must be taken to arrange the extension cord so that it will not drape over the counter-top or tabletop where it can be pulled on by children or accidentally tripped over.

To avoid an electrical circuit overload, do not use another high wattage appliance on the same circuit with your percolator.

To reduce risk of electrical shock, do not immerse the percolator in water.

Parts and Features

1. Lid
2. Spreader
3. Basket
4. Heating Well
5. Ready Light
6. Stem
7. Detachable Cord

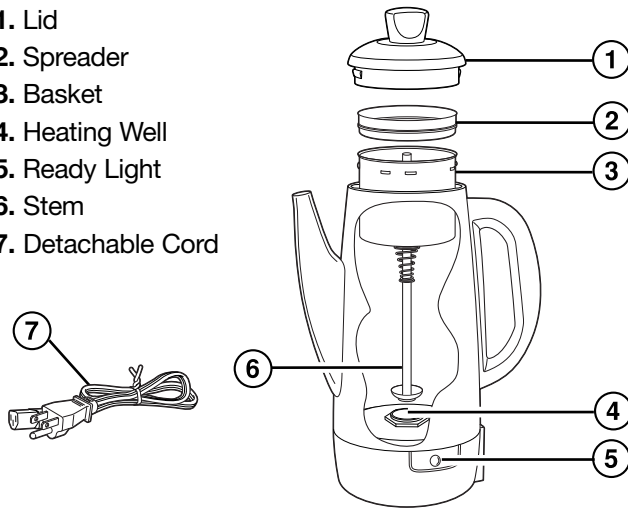

To Make Coffee

Before First Use: Clean the percolator by following the steps in "How To Clean."

1. To make coffee, remove lid, spreader, basket, and stem. Fill with cold water to desired level as indicated by numbered servings on inside of percolator.
2. Wet basket interior to keep small coffee grounds from sifting through basket. Place basket on stem. Hold top of stem and place stem and basket into heating unit well.
IF THE STEM IS NOT SEATED PROPERLY IN THE HEATING WELL, THE PERCOLATOR WILL NOT PERK.

4

To Make Coffee (cont.)

3. Measure percolator-type ground coffee into basket. Avoid getting coffee grounds in the stem. Refer to the Coffee Making Chart that follows. Spread coffee evenly in basket. Place spreader on basket.
4. Place lid onto percolator until it snaps closed. **Scalding may occur if the lid is removed during the brewing cycle.**
5. Plug cord into the percolator then plug the cord into electrical outlet. The unit automatically turns on.
6. The percolator will stop automatically when the coffee has finished brewing, and the Ready light will glow. Allow about 1 minute per cup for brewing time.
7. The percolator will remain at serving temperature until it is unplugged.
8. When finished serving coffee, unplug the percolator from the electrical outlet. Then remove cord from the percolator.

Coffee Making Chart

Water Level	Amount of Ground Coffee
12 cups	8 to 12 tablespoons
10 cups	8 to 10 tablespoons
8 cups	6 to 8 tablespoons
6 cups	5 to 6 tablespoons
4 cups	4 to 5 tablespoons
2 cups	3 tablespoons

5

NOTE: We recommend using coffee that has been ground specifically for use in a **percolator-type** coffee maker. Although, coffee marked "For All Coffee Makers" is acceptable. If using a coffee grinder and whole beans, percolator coffee should be a coarse grind. A finely ground coffee may cause the coffee basket to overflow.

To Heat Water

Use heated water to make instant coffee, hot cocoa, or tea.

1. To heat water, remove cover, basket and stem. Fill percolator with cold water to desired level as indicated by numbered servings on inside of percolator or water window.
2. Place basket on stem. Hold top of stem and place stem and basket into heating unit well. (Using the stem and basket will speed heating time.) Place spreader on basket.
3. Place lid on percolator until it snaps closed. Plug in percolator and let go through complete perk cycle. Water is hot when Ready light glows.

 
How to Clean

1. After each use, unplug cord from outlet then remove cord from the percolator. Let cool before cleaning.
2. Remove lid, basket, spreader, and stem. Wash these in hot, soapy water. (These parts can also be placed in dishwasher.) Do not put percolator in dishwasher.

How to Clean (cont.)

3. Rinse all parts thoroughly and dry. Store with cover off.

NOTE: Make sure the washer at bottom of stem remains loose. If coffee grounds lodge in this area, remove them under running water or with a wooden pick then rinse and dry.

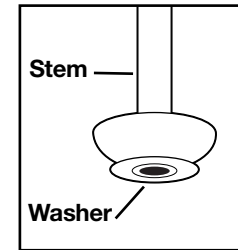

4. Fill the percolator half-full with hot water. Add a drop of liquid dishwashing detergent and wash the inside of the percolator. Use a sponge and clean the inside of the heating unit well. This part must be properly cleaned to maintain the proper operation of the percolator. Do not immerse percolator in water.
5. Drain the soapy water then fill the percolator with hot water to rinse. Pour soapy water through spout to clean the spout. Repeat with another hot water rinse. Dry.
6. Clean outside of percolator with a damp cloth. Do not use abrasive scouring pads or cleansers.

To Remove Mineral Deposits and Build-Up

If the percolator is used daily follow these instructions every other week. Fill the percolator with 6 cups cold water and 6 cups white vinegar. Assemble with stem, basket, spreader, and lid.

Plug in and let go through the perk cycle. When perking has stopped let sit another 15 minutes. Unplug and drain the percolator. Let cool then clean according to "How To Clean."

Customer Service

If you have a question about your percolator, call our toll-free customer service number. Before calling, please note the model, type, and series numbers and fill in that information below. These numbers can be found on the bottom of your percolator. This information will help us answer your question much more quickly.

MODEL: _____ **TYPE:** _____ **SERIES:** _____

LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship for a period of two (2) years for Hamilton Beach Portfolio products or one (1) year for Hamilton Beach products from the date of original purchase, except as noted below. During this period, we will repair or replace this product, at our option, at no cost. THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED. There is no warranty with respect to the following, which may be supplied with this product: glass parts, glass containers, cutter/strainer, blades, and/or agitators. This warranty extends only to the original consumer purchaser and does not cover a defect resulting from abuse, misuse, neglect, use for commercial purposes, or any use not in conformity with the printed directions. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model, series, and type numbers ready for operator to assist you.)

CUSTOMER SERVICE NUMBERS

In the U.S. 1-800-851-8900

In Canada 1-800-267-2826

Web site address: www.hamiltonbeach.com

KEEP THESE NUMBERS FOR FUTURE REFERENCE!

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>