
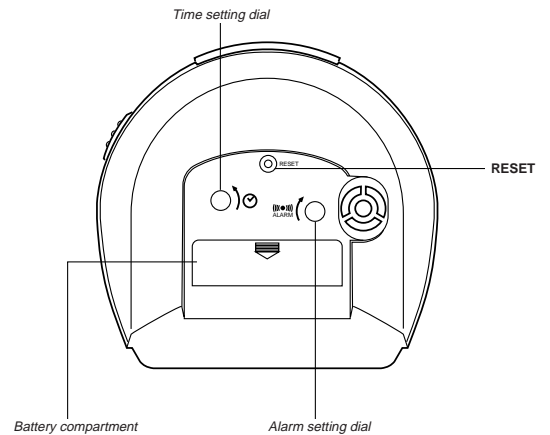


# TQ-450/550

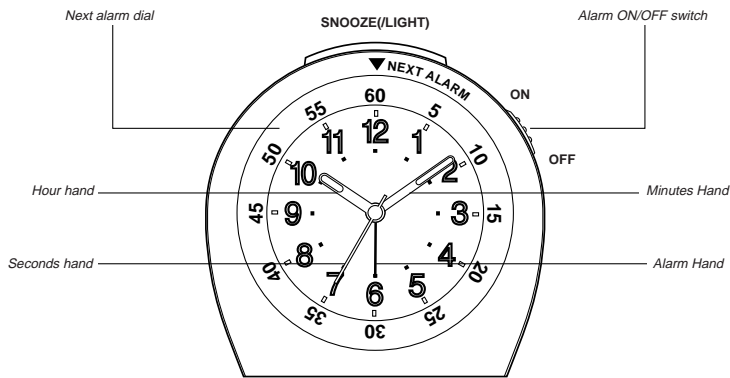

- The configuration of your clock may differ somewhat from that shown in the illustration.
- This clock employs a face that is designed to collect light and make figures on the display easier to read. (TQ-550 only)
- Pressing **SNOOZE(LIGHT)** illuminates the clock for about three seconds for easy reading of the time in the dark. (TQ-550 only)

## TO SET THE TIME

Rotate the Time setting dial to change the time setting.

- Be sure to always press **RESET** with a thin object after loading batteries.

## USING THE ALARM

This clock has two alarms. The 1st Alarm is the alarm that sounds when the current time reaches the alarm time you set. The Next Alarm sounds after passage of the time setting of the **NEXT ALARM** dial, starting from the point that the 1st alarm begins to sound. The Next Alarm also has a snooze feature.

The alarm on/off setting affects both the 1st Alarm and the Next Alarm. You cannot turn the 1st Alarm and Next Alarm on and off individually.

The Next Alarm sound is relatively louder than the 1st Alarm sound.

## TO SET THE ALARM

1. Rotate the Alarm setting dial in the direction indicated by the arrow marked on clock to move the alarm hand to the 1st Alarm time setting you want.
2. Rotate the **NEXT ALARM** dial from 1st Alarm to the Next Alarm setting you want to use.
  - You can set the Next Alarm to any time from 5 to 60 minutes, in 5-minute steps.
3. Set the Alarm ON/OFF switch to **ON**.
  - If the Alarm ON/OFF switch is already set to **ON**, always be sure to change its setting to **OFF** and then back to **ON** again after making alarm time setting changes.
  - Note that this clock does not distinguish between **AM** and **PM** times. If you set an alarm to wake up to in the morning, the alarm will sound again at the same time in the evening if you leave the Alarm ON/OFF switch in the **ON** position.

## TO USE THE ALARM

The 1st Alarm starts to sound when the current time reaches the time indicated by the alarm hand. The 1st Alarm stops sounding when you press **SNOOZE(LIGHT)** or after it has sounded for about one minute. After the amount of time set by the Next Alarm Dial passes, the Next Alarm starts to sound. Pressing **SNOOZE(LIGHT)** stops the Next Alarm sound for about five minutes, after which it starts to sound again. In all, the Next Alarm will sound seven times.

If you do not press **SNOOZE(LIGHT)** after the Next Alarm starts to sound, it will stop automatically after about one minute.

To deactivate the snooze feature so the alarm will not sound again, change the Alarm ON/OFF switch setting to **OFF**.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>