


Ashly PE Amplifier PNE-C2 Cobranet Module Field Installation

1) Remove the four screws from the standard input as shown.

2) Carefully pull out the installed standard input assembly, only as far as shown. Note the ribbon cable shown furthest left that is labelled "ST992". Gently remove this and the other two ribbon cables.

3) The PNE-C2 plugs are in the same general location as the three standard input plugs. Plug in the cable "ST992" first. Be sure to fully seat each connector, applying even pressure across the top. Do not stress the wires.

4) Gently guide the PNE-C2 module back into the amplifier, and fasten the four mounting screws.

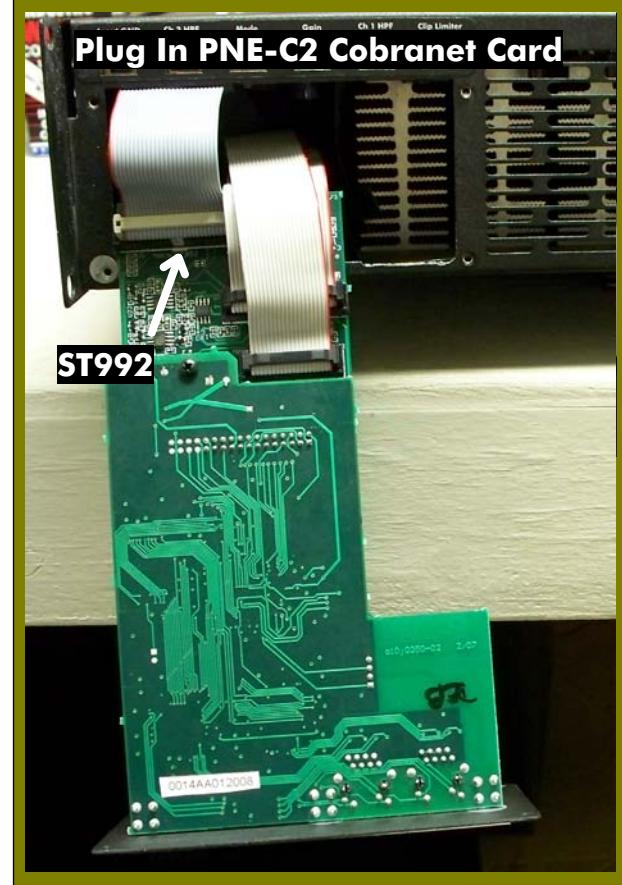

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>