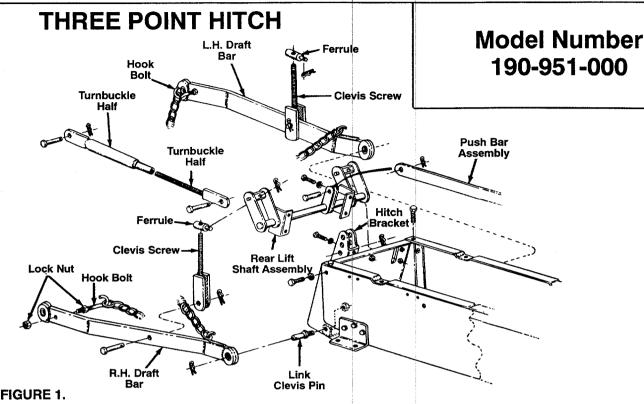
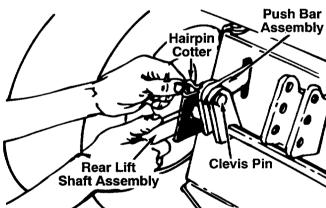
OWNER'S GUIDE





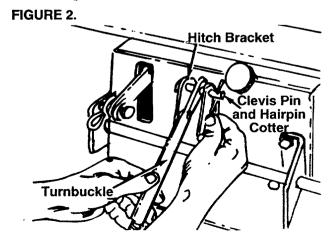


FIGURE 3.


THREE POINT HITCH ASSEMBLY

The three point hitch is needed for the rotary tiller, disc, cultivator and moldboard plow. To use the mowing deck, snow thrower or snow blade, it is not necessary to install the three point hitch.

- 1. Raise the lift shaft assembly until the hole lines up with the slot in the push bar assembly. See fig-
- 2. Secure with clevis pin and hairpin cotter provided in the hardware pack.
- 3. Assemble the two draft bars to the link clevis pins in the frame of the tractor with two hairpin cotters.


NOTE: Refer to figure 1 to determine right and left hand draft bars.

- 4. Thread the ferrule onto the clevis screw until approximately a half inch of thread is showing above the ferrule.
- 5. Attach the ferrules to the rear lift shaft assembly and secure with two hairpin cotters.
- Attach the lower end of the clevis screw to the draft bars with the two clevis pins and hairpin cotters
- 7. Screw the two halves of the center turnbuckle together. Attach either end to any hole in the hitch bracket mounted in the center of the rear frame of the tractor with a clevis pin and hairpin cotter. See figure 3.

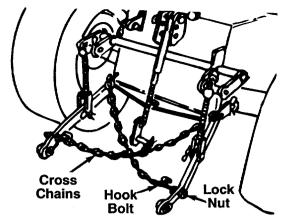

- Screw one hex nut all the way on to each of the hook bolts.
- 9. Insert the hook bolt through the inside of the draft bars. Secure with a second nut. Do not tighten.
- 10. Fasten the chains to the hooks welded on the draft bars. Cross the chains over and attach to the opposite hook bolts. See figure 4.
- 11. Tighten the outside nuts on the hook bolts until there is approximately one inch of play in the center of the chains.

NOTE: Pull the chains to make them as tight as possible.

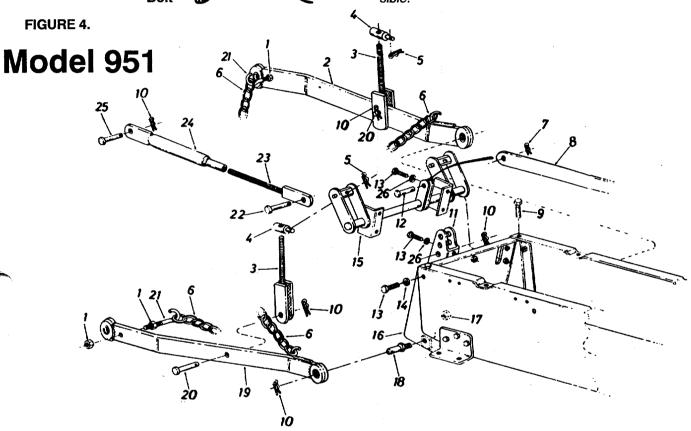

PARTS LIST FOR MODEL 951 THREE POINT HITCH

REF. NO.	PART NO.	CODE	DESCRIPTION	REF. NO.	PART NO.	CODE	DESCRIPTION
1 2 3 4 5 6 7 8 9 10	712-0290 13130A 13138 711-0649 714-0147 713-0148 714-0470 13709 710-0216 714-0117 13026		Hex Cent. L-Nut 7/16-14 Thd. Draft Bar Ass'y.—L.H. Clevis Screw Ass'y. Clevis Pin Hitch Pin Clip Chain—20 Links Cotter Pin 1/8" Dia. x 1.25"* Push Bar Ass'y. Hex Bolt 3/8-16 x .75" Lg.* Hairpin Cotter Hitch Brkt.	14 15 16 17 18 19 20 21 22 23 24	736-0217 13135 13196 712-0923 711-0497 13129A 711-0225 711-0639 711-0299 711-0636 749-0238		L-Wash. 3/8" I.D.—H.D.* Rear Lift Shaft Ass'y. Hitch Plate Ass'y. Hex Cent. L-Nut 5/8-18 Thd. Link Clevis Pin Draft Bar Ass'y.—R.H. Clevis Pin .63" Dia. x 1.66" Hitch Chain Hook Clevis Pin .63" Dia. x 2.4" Lg. Clevis Screw Clevis Tubing
12 13	711-0654 710-0216	:	Clevis Pin Hex Bolt 3/8-16 x .75" Lg.*	25 26	711-0299 736-0217		Clevis Pin .63" Dia. x 2.4" Lg. L-Wash. 3/8" I.D.—H.D.

For Replacement Parts, Contact:
SERVICE DEPARTMENT • P.O. BOX 368022 • CLEVELAND, OHIO 44136-9722

FORM NO. 770-6807 R940517 Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com