




Dell SE2722H/SE2722HX Monitor

User's Guide

Monitor Model: SE2722H/SE2722HX
Regulatory Model: SE2722Hc



-  **NOTE: A NOTE indicates important information that helps you make better use of your computer.**
-  **CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.**
-  **WARNING: A WARNING indicates a potential for property damage, personal injury, or death.**

Copyright © 2021 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2021 – 06

Rev. A01



Contents

| | |
|---|-----------|
| Safety instructions | 6 |
| About your monitor | 7 |
| Package contents | 7 |
| Product features | 9 |
| Identifying parts and controls | 10 |
| Front view | 10 |
| Back view | 11 |
| Side view | 12 |
| Bottom view | 12 |
| Monitor specifications | 13 |
| Resolution specifications | 15 |
| Preset display modes | 16 |
| Physical characteristics | 19 |
| Environmental characteristics | 20 |
| Plug and play capability | 21 |
| LCD monitor quality and pixel policy | 21 |
| Ergonomics | 22 |
| Handling and moving your display | 24 |
| Maintenance guidelines | 25 |
| Cleaning your monitor | 25 |
| Setting up the monitor | 26 |
| Connecting the stand | 26 |



| | |
|--|-----------|
| Connecting your monitor | 28 |
| Connecting the VGA Cable(Only for SE2722HX) and HDMI Cable | 28 |
| Organizing cables | 29 |
| Securing your monitor using Kensington lock (optional) | 30 |
| Removing the stand | 31 |
| Wall mounting (optional) | 33 |
| Operating your monitor | 34 |
| Turning on the monitor | 34 |
| Using the control buttons | 34 |
| Control buttons | 35 |
| Using the OSD lock function | 35 |
| Use the Lock menu to lock the button(s). | 35 |
| Use the front-panel control button to lock the button(s).. . . . | 36 |
| OSD controls | 38 |
| Using the On-Screen Display (OSD) menu | 39 |
| Accessing the OSD menu | 39 |
| Tilt Extension | 52 |
| Troubleshooting | 53 |
| Self-Test | 53 |
| Built-in diagnostics | 55 |
| Common problems | 57 |
| Product-specific problems | 60 |




Appendix. 61
 FCC notices (U.S. Only) and other regulatory information 61
 Contacting Dell. 61
 EU product database for energy label and product
 information sheet 61



Safety instructions

Use the following safety guidelines to protect your monitor from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure included in this document assumes that you have read the safety information that shipped with your monitor.

 **Before using the monitor, read the safety information that is shipped with your monitor and also printed on the product. Keep the documentation at a secure location for future reference.**

 **CAUTION: Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.**

- Place the monitor on a solid surface and handle it carefully. The screen is fragile and can be damaged if dropped or hit sharply.
- Always be sure that your monitor is electrically rated to operate with the AC power available in your location.
- Keep the monitor in room temperature. Excessive cold or hot conditions can have an adverse effect on the liquid crystal of the display.
- Connect the power cable from the monitor to a wall outlet that is near and accessible. See [Connecting your monitor](#).
- Do not place and use the monitor on a wet surface or near water.
- Do not subject the monitor to severe vibration or high impact conditions. For example, do not place the monitor inside a car trunk.
- Unplug the monitor when it is going to be left unused for an extended period of time.
- To avoid electric shock, do not attempt to remove any cover or touch the inside of the monitor.
- Read these instructions carefully. Keep this document for future reference. Follow all warnings and instructions marked on product.
- The equipment can be installed on wall or ceiling mounting in horizontal position.



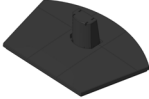




About your monitor




Package contents

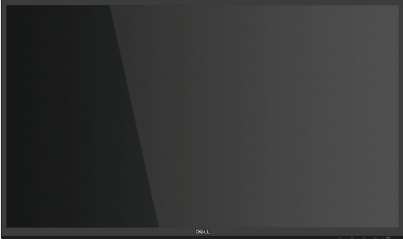Your monitor ships with the components shown in the table below. If any component is missing, contact Dell. For more information, see [Contacting Dell](#).

NOTE: Some items may be optional and may not ship with your monitor. Some features or media may not be available in certain countries.

| | |
|---|-----------------------------------|
|  | Display |
|  | Stand riser |
|  | Stand base |
|  | Power cable (varies by countries) |
|  | HDMI 1.4 cable |

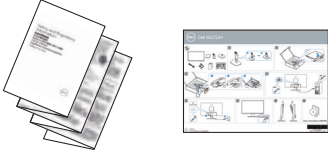

| | |
|---|---|
|  | VGA cable (only for SE2722HX) |
|  | VESA cover |
|  | <ul style="list-style-type: none">• Quick Setup Guide• Safety and Regulatory Information |



Product features

The Dell SE2722H/SE2722HX monitor has an active matrix, Thin-Film Transistor (TFT), Liquid Crystal Display (LCD), anti-static, and LED backlight. The monitor features include:

- 68.47 cm (27.0 in.) viewable area display (measured diagonally).
- 1920 x 1080 resolution, with full-screen support for lower resolutions.
- Easy and simple connectivity with legacy and new systems via HDMI.
- Supports 48 Hz to 75 Hz (HDMI) in FreeSync Mode.
- Supports AMD FreeSync™ technology,
- Plug and play capability if supported by your computer.
- On-Screen Display (OSD) adjustments for ease of setup and screen optimization.
- Removable stand and Video Electronics Standards Association (VESA™) 100 mm mounting holes for flexible mounting solutions.
- Security-lock slot.
- ≤0.3 W in Standby Mode.
- Supports Dell Display Manager.
- Optimize eye comfort with a TÜV-certified flicker-free screen.

⚠ WARNING: If provided with a 3-pin attachment plug on the power cord, plug the cord into a grounded (earthed) 3-pin outlet. Do not disable the power cord grounding pin, for example, by attaching a 2-pin adapter. The grounding pin is an important safety feature.


Please confirm the distribution system in building installation shall provide the circuit breaker rated 120/240V, 20A (maximum).

⚠ WARNING: The possible long-term effects of blue light emission from the monitor may cause damage to the eyes, including eye fatigue, digital eye strain, and so on. a TÜV-certified ComfortView is designed to reduce the amount of blue light emitted from the monitor to optimize eye comfort.



Identifying parts and controls

Front view

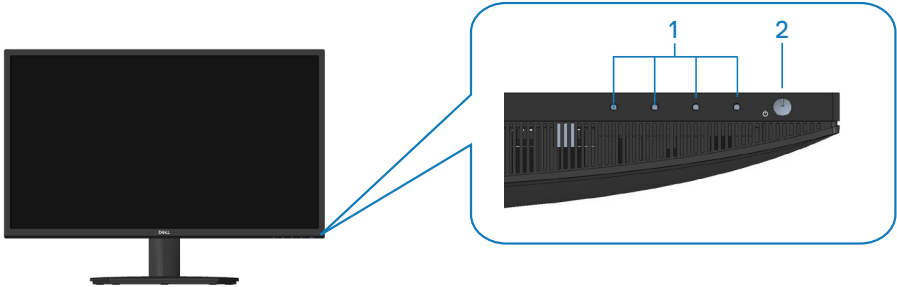


Control buttons

| Label | Description | Use |
|-------|--|---|
| 1 | Function buttons | To access the on-screen display (OSD) menu. (For more information, see Using the control buttons) |
| 2 | Power On/Off button (with LED indicator) | To turn the monitor on or off. Solid white light indicates that the monitor is turned on and functioning normally. Blinking white light indicates that the monitor is in Standby Mode. |



Back view

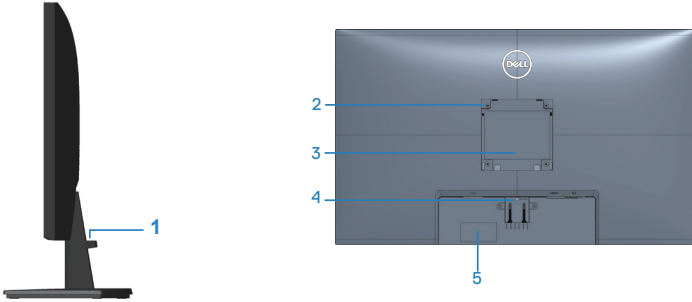

Back View with monitor stand

| Label | Description | Use |
|-------|---|---|
| 1 | Cable management slot | To organize cables. |
| 2 | VESA mounting holes (100mm x 100mm-behind the VESA cover) | Wall mount the monitor using VESA-compatible wall mount kit(100mm x 100mm). NOTE: Wall mount kit is not shipped with your monitor and is sold separately. |
| 3 | Regulatory information label | Lists the regulatory approvals. |
| 4 | Stand release button | Releases the stand from the monitor. |
| 5 | Regulatory label (including Barcode, serial number and Service Tag label) | Lists the regulatory approvals. Refer to this label if you need to contact Dell for technical support.The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information. |



Side view



Bottom view




Bottom view without monitor stand

| Label | Description | Use |
|-------|--------------------|---|
| 1 | Security-lock slot | Secure your monitor using a security lock (purchased separately) to prevent unauthorized movement of your monitor. See Securing your monitor using Kensington lock (optional) . |
| 2 | Power port | Connect the power cable |
| 3 | HDMI port | Connect your computer with HDMI cable. |
| 4 | VGA port | Connect your computer with VGA cable (purchased separately, only for SE2722HX). |



Monitor specifications

| | |
|------------------------------------|--|
| Model | SE2722H/SE2722HX |
| Screen type | Active matrix-TFT LCD |
| Panel type | Vertical Alignment |
| Viewable image | |
| Diagonal | 684.66 mm (27 in.) |
| Horizontal, Active Area | 596.74 mm (23.49 in.) |
| Vertical, Active Area | 335.66 mm (13.22 in) |
| Area | 2003.02 cm ² (310.54 in. ²) |
| Native resolution and refresh rate | 1920 x1080 at 75Hz (HDMI 1.4) |
| Pixel pitch | 0.3108 mm x 0.3108 mm |
| Pixel per inch (PPI) | 81 |
| Viewing angle | |
| Horizontal | 178° (typical) |
| Vertical | 178° (typical) |
| Luminance output | 250 cd/m ² (typical) |
| Contrast ratio | 3000 to 1 (typical) |
| Faceplate coating | Anti-glare with 3H hardness |
| Backlight | LED edgelight system |
| Response time (Gray to Gray) | Normal mode 8ms Fast mode 5ms Extreme mode 4ms  NOTE: The 4 ms gray-to-gray mode is achievable in the Extreme mode to reduce visible motion blur and increased image responsiveness. However this may introduce some slight and noticeable visual artifacts into the image. |
| Color depth | 16.7 million colors |
| Color gamut | NTSC CIE1976(84%) CIE1931(72%) |



| | |
|--|---|
| Connectivity | 1 x HDMI (ver 1.4) 1 x VGA |
| Bezel width (edge of monitor to active area) | |
| Top | 13.22 mm |
| Left/Right | 13.28 mm |
| Bottom | 16.44 mm |
| Adjustability | |
| Tilt | -5° to 21° |
| Swivel | N/A |
| Slant Adjust | N/A |
| Dell display manager compatibility | Easy Arrange and other key features |
| Security | Security-lock slot (cable lock optional purchase) |



Resolution specifications

| Model | SE2722H/SE2722HX |
|---------------------------|---|
| Horizontal scan range | 30 kHz to 83 kHz (automatic) |
| Vertical scan range | 56 Hz to 75 Hz (VGA) 48 Hz to 75 Hz (HDMI)(automatic) |
| Maximum preset resolution | 1920 x 1080 at 75 Hz (HDMI) 1920 x 1080 at 60 Hz (VGA) |

 **NOTE: This monitor supports AMD FreeSync™.**



Preset display modes

HDMI Preset display modes

| Display Mode | Horizontal Frequency (kHz) | Vertical Frequency (Hz) | Pixel Clock (MHz) | Sync Polarity (Horizontal / Vertical) |
|--------------|----------------------------|-------------------------|-------------------|---------------------------------------|
| 640 x 480 | 31.47 | 60.0 | 25.175 | -/- |
| 640 x 480 | 37.5 | 75.0 | 31.5 | -/- |
| 720 x 400 | 31.47 | 70.0 | 28.32 | -/+ |
| 800 x 600 | 37.88 | 60.0 | 40 | +/+ |
| 800 x 600 | 46.86 | 75.0 | 49.5 | +/+ |
| 1024 x 768 | 48.36 | 60.0 | 65 | -/- |
| 1024 x 768 | 60.02 | 75.0 | 78.75 | +/+ |
| 1152 x 864 | 67.5 | 75.0 | 108 | +/+ |
| 1280 x 1024 | 63.98 | 60.0 | 108 | +/+ |
| 1280 x 1024 | 79.98 | 75.0 | 135 | +/+ |
| 1600 x 900 | 60 | 60 | 108 | +/+ |
| 1920 x 1080 | 67.5 | 60 | 148.5 | +/+ |
| 1920 x 1080 | 83.89 | 75 | 174.5 | -/+ |



VGA Preset display modes

| Display Mode | Horizontal Frequency (kHz) | Vertical Frequency (Hz) | Pixel Clock (MHz) | Sync Polarity (Horizontal / Vertical) |
|---------------------|-----------------------------------|--------------------------------|--------------------------|--|
| 640 x 480 | 31.47 | 60.0 | 25.175 | -/- |
| 640 x 480 | 37.5 | 75.0 | 31.5 | -/- |
| 720 x 400 | 31.47 | 70.0 | 28.32 | -/+ |
| 800 x 600 | 37.88 | 60.0 | 40 | +/+ |
| 800 x 600 | 46.86 | 75.0 | 49.5 | +/+ |
| 1024 x 768 | 48.36 | 60.0 | 65 | -/- |
| 1024 x 768 | 60.02 | 75.0 | 78.75 | +/+ |
| 1152 x 864 | 67.5 | 75.0 | 108 | +/+ |
| 1280 x 1024 | 63.98 | 60.0 | 108 | +/+ |
| 1280 x 1024 | 79.98 | 75.0 | 135 | +/+ |
| 1600 x 900 | 60 | 60 | 108 | +/+ |
| 1920 x 1080 | 67.5 | 60 | 148.5 | +/+ |



Electrical specifications

| Model | SE2722H/SE2722HX |
|------------------------------------|--|
| Video input signals | HDMI 1.4, 600mV for each differential line,100 ohm input impedance per differential pair Analog RGB, 0.7 Volts +/-5%, positive polarity at 75 ohm input impedance |
| AC input voltage/frequency/current | 100 VAC to 240 VAC / 50 Hz or 60 Hz \pm 3 Hz / 1.6 A (max.) |
| Inrush current | 120 V: 30 A (max.) at 0°C (cold start) 240 V: 60 A (max.) at 0°C (cold start) |
| Power consumption | 0.3 W (Off mode) ¹ 0.3 W (Standby Mode) ¹ 20 W (On Mode) ¹ 24 W (Max.) ² 19 W (Pon) ³ 59.96 kWh (TEC) ⁵ |

¹ As defined in EU 2019/2021 and EU 2019/2013.

² Max brightness and contrast setting.

³ Pon: Power consumption of On Mode measured with reference to Energy Star test method.

TEC: Total energy consumption in kWh measured with reference to Energy Star test method.

This document is informational only and reflects laboratory performance. Your product may perform differently, depending on the software, components and peripherals you ordered and shall have no obligation to update such information.

Accordingly, the customer should not rely upon this information in making decisions about electrical tolerances or otherwise. No warranty as to accuracy or completeness is expressed or implied.



Physical characteristics

| | |
|---|--|
| Model | SE2722H/ SE2722HX |
| Signal cable type | <ul style="list-style-type: none"> • Digital: detachable, HDMI, 19 pins • Analog: detachable, D-Sub, 15 pins |
| Dimensions (with stand) | |
| Height | 459.21 mm (18.08 in.) |
| Width | 623.30 mm (24.54 in.) |
| Depth | 199.87 mm (7.87 in.) |
| Dimensions (without stand) | |
| Height | 369.61 mm (14.55 in.) |
| Width | 623.30 mm (24.54 in.) |
| Depth | 55.56 mm (2.19 in.) |
| Stand dimensions | |
| Height | 173.83 mm (6.84 in.) |
| Width | 290.07 mm (11.42 in.) |
| Depth | 199.87 mm (7.87 in.) |
| Weight | |
| Weight with packaging | 6.37 kg (14.04 lb) SE2722H 6.48 kg (14.29 lb) SE2722HX |
| Weight with stand assembly and cables | 4.63 kg (10.21 lb) SE2722H 4.74 kg (10.45 lb) SE2722HX |
| Weight without stand assembly (no cables) | 3.8 kg (8.38 lb) |
| Weight of stand assembly | 0.60 kg (1.32 lb) |
| Front-frame gloss | Black frame 2-4 gloss units |



Environmental characteristics

| | |
|---|---|
| Model | SE2722H/SE2722HX |
| Compliant Standards | |
| <ul style="list-style-type: none"> • RoHS-compliant • BFR/PVC reduce monitor (Its circuit boards are made from BFR/PVC-free laminates.) • Arsenic-free glass and Mercury-free for the panel only | |
| Temperature | |
| Operating | 0°C to 40°C (32°F to 104°F) |
| Non-operating | <ul style="list-style-type: none"> • Storage: -20°C to 60°C (-4°F to 140°F) • Shipping: -20°C to 60°C (-4°F to 140°F) |
| Humidity | |
| Operating | 10% to 80% (non-condensing) |
| Non-operating | <ul style="list-style-type: none"> • Storage 10% to 90% (non-condensing) • Shipping 10% to 90% (non-condensing) |
| Altitude | |
| Operating (maximum) | 5,000 m (16,400 ft) |
| Non-operating (maximum) | 12,192 m (40,000 ft) |
| Thermal dissipation | <ul style="list-style-type: none"> • 81.95 BTU/hour (maximum) • 68.29 BTU/hour (typical) |



Plug and play capability

You can install the monitor in any Plug and Play-compatible system. The monitor automatically provides the computer system with its Extended Display Identification Data (EDID) using Display Data Channel (DDC) protocols so the system can configure itself and optimize the monitor settings. Most monitor installations are automatic, you can select different settings if desired. For more information about changing the monitor settings, see [Operating your monitor](#).

LCD monitor quality and pixel policy

During the LCD Monitor manufacturing process, it is not uncommon for one or more pixels to become fixed in an unchanging state which are hard to see and do not affect the display quality or usability. For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at www.dell.com/pixelguidelines.



Ergonomics

 **CAUTION: Improper or prolonged usage of keyboard may result in injury.**


 **CAUTION: Viewing the monitor screen for extended periods of time may result in eye strain.**

For comfort and efficiency, observe the following guidelines when setting up and using your computer workstation:

- Position your computer so that the monitor and keyboard are directly in front of you as you work. Special shelves are commercially available to help you correctly position your keyboard.
- To reduce the risk of eye strain and neck/arm/back/shoulder pain from using the monitor for long periods of time, we suggest you to:
 1. Set the distance of the screen between 20 to 28 in. (50 - 70 cm) from your eyes.
 2. Blink frequently to moisten your eyes or wet your eyes with water after prolonged usage of the monitor.
 3. Take regular and frequent breaks for 20 minutes every two hours.
 4. Look away from your monitor and gaze at a distant object at 20 feet away for at least 20 seconds during the breaks.
 5. Perform stretches to relieve tension in the neck, arm, back, and shoulders during the breaks.
- Make sure that the monitor screen is at eye level or slightly lower when you are sitting in front of the monitor.
- Adjust the tilt of the monitor, its contrast, and brightness settings.
- Adjust the ambient lighting around you (such as overhead lights, desk lamps, and the curtains or blinds on nearby windows) to minimize reflections and glare on the monitor screen.
- Use a chair that provides good lower-back support.
- Keep your forearms horizontal with your wrists in a neutral, comfortable position while using the keyboard or mouse.
- Always leave space to rest your hands while using the keyboard or mouse.
- Let your upper arms rest naturally on both sides.
- Ensure that your feet are resting flat on the floor.




- When sitting, make sure that the weight of your legs is on your feet and not on the front portion of your seat. Adjust your chair's height or use a footrest if necessary to maintain a proper posture.
- Vary your work activities. Try to organize your work so that you do not have to sit and work for extended periods of time. Try to stand or get up and walk around at regular intervals.
- Keep the area under your desk clear of obstructions and cables or power cords that may interfere with comfortable seating or present a potential trip hazard.

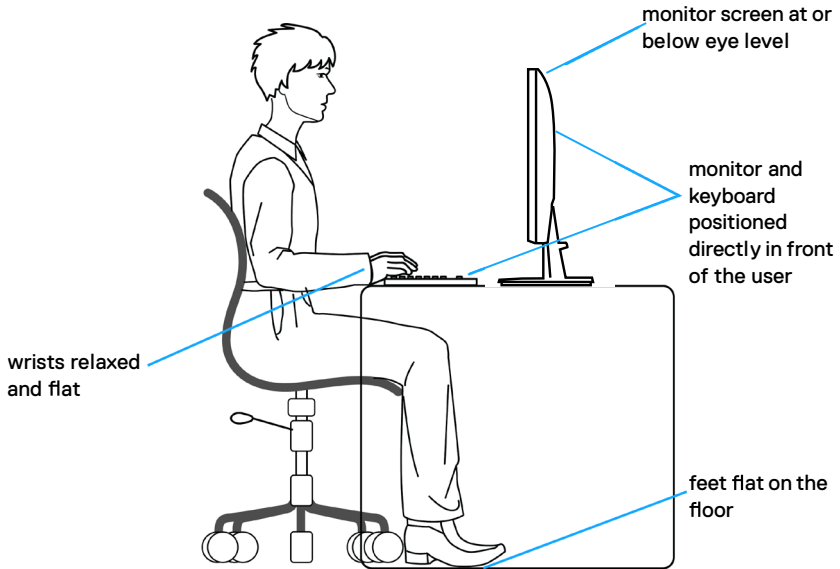


Handling and moving your display

To ensure the monitor is handled safely when lifting or moving it, follow the guidelines mentioned below:

- Before moving or lifting the monitor, turn off your computer and the monitor.
- Disconnect all cables from the monitor.
- Place the monitor in the original box with the original packing materials.
- Hold the bottom edge and the side of the monitor firmly without applying excessive pressure when lifting or moving the monitor.

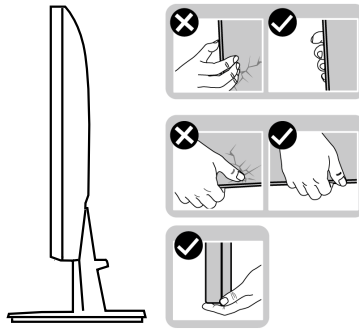


- When lifting or moving the monitor, ensure the screen is facing away from you and do not press on the display area to avoid any scratches or damage.

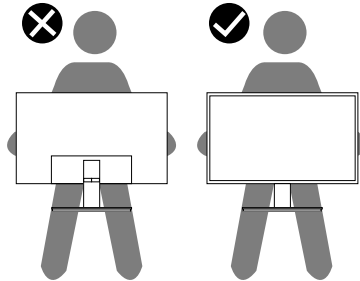

- When transporting the monitor, avoid any sudden shock or vibration to it.
- When lifting or moving the monitor, do not turn the monitor upside down while holding the stand base or stand riser. This may result in accidental damage to the monitor or cause personal injury.



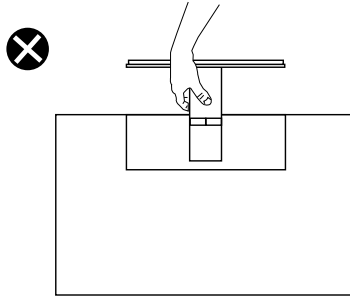

Maintenance guidelines

Cleaning your monitor

⚠ WARNING: Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.

⚠ CAUTION: Read and follow the [Safety instructions](#) before cleaning the monitor.

For best practices, follow the instructions in the list below while unpacking, cleaning or handling your monitor:


- To clean your screen, lightly dampen a soft, clean cloth with water. If possible, use a special screen-cleaning tissue or solution suitable for the anti-static coating. Do not use benzene, thinner, ammonia, abrasive cleaners or compressed air.
- Use a lightly-dampened cloth to clean the monitor. Avoid using detergent of any kind as some detergents leave a milky film on the monitor.
- If you notice white powder when you unpack your monitor, wipe it off with a cloth.
- Handle your monitor with care as the black-colored monitor may get scratched and show white scuff marks.
- To help maintain the best image quality on your monitor, use a dynamically changing screen saver and turn off your monitor when not in use.



Setting up the monitor


Connecting the stand

 **NOTE:** The stand is detached when the monitor is shipped from the factory.


 **NOTE:** The following procedure is applicable for the stand that shipped with your monitor. If you are connecting a third-party stand, see the documentation that shipped with the stand.

To attach the monitor stand:


1. Follow the instructions on the flaps of packaging box to remove the stand from the top cushion that secures it.
2. Connect the stand base to the stand riser.

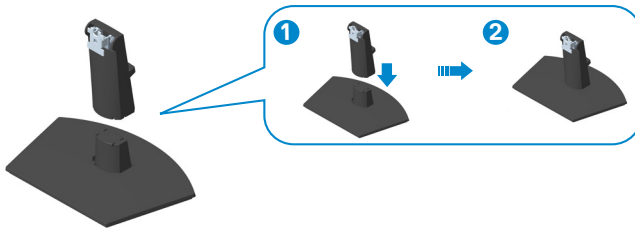


3. Slide the tabs on the stand assembly into the slots on the monitor and press the stand assembly down to snap it into place.

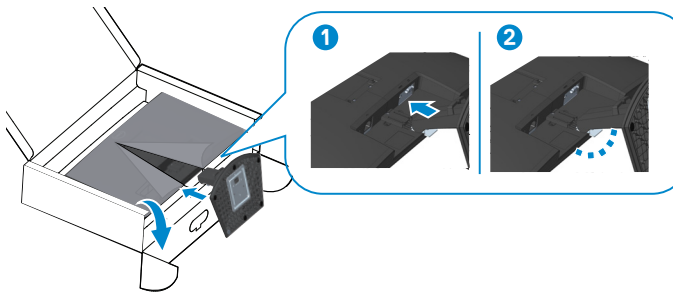

4. Open the monitor protective cover, install the VESA screw cover.

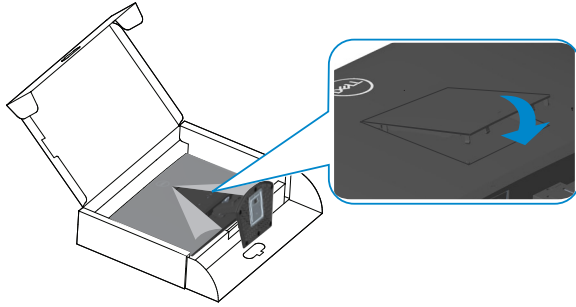

5. Place the monitor in an upright position.

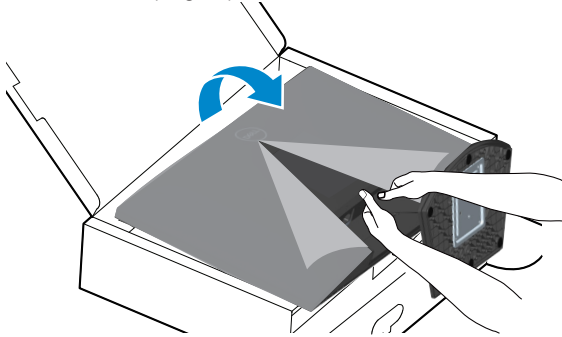

Connecting your monitor


⚠ WARNING: Before you begin any of the procedures in this section, follow the [Safety instructions](#).

📎 NOTE: Do not connect all cables to the monitor at the same time. It is recommend to route the cables through the cable-management slot before you connect them to the monitor.


To connect your monitor to the computer:

1. Turn off your computer and disconnect the power cable.
2. Connect the VGA cable (for SE2722HX) and HDMI cable from your monitor to the computer.

Connecting the VGA Cable(Only for SE2722HX) and HDMI Cable

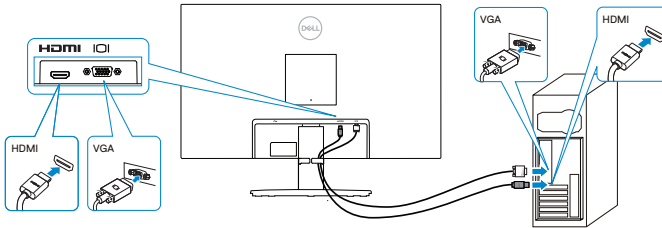


3. Connect the power cables from your computer and monitor into a wall outlet.

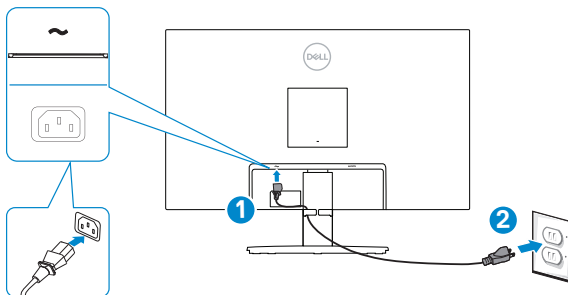

Organizing cables

Use cable management slot on stand assembly to route the cables connected to your monitor.

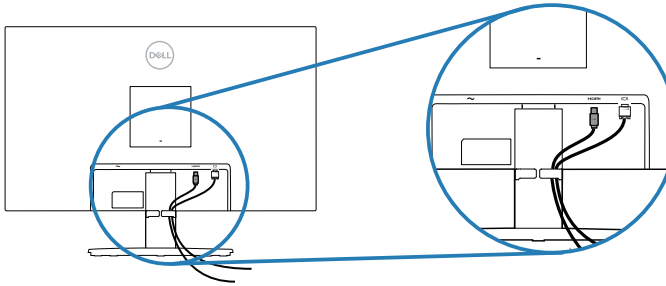

4. Turn on the Monitor.




Securing your monitor using Kensington lock (optional)

You can fasten the monitor using a Kensington security lock to a fixed object that could support the weight of the monitor to prevent it from falling accidentally.

The security lock slot is located at the bottom of the monitor. (See [Security-lock slot](#))

For more information on using the Kensington lock (purchased separately), see the documentation that is shipped with the lock.

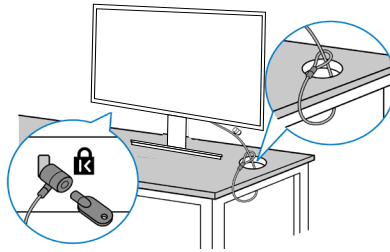

Secure your monitor to a table using the Kensington security lock.



NOTE: The image is for the purpose of illustration only. Appearance of the lock may vary.




Removing the stand


-  **NOTE:** To prevent scratches on the screen when removing the stand, ensure that the monitor is placed on a soft and clean surface.
-  **NOTE:** The following procedure is applicable only for the stand that shipped with your monitor. If you are connecting a third-party stand, see the documentation that shipped with the stand.

To remove the stand:


1. Place the monitor on a soft cloth or cushion at the edge of the desk.

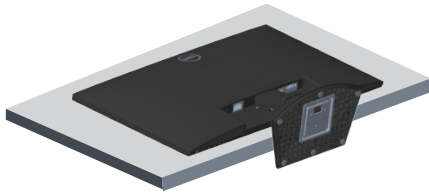


2. Tilt the stand downwards to access to the release button.

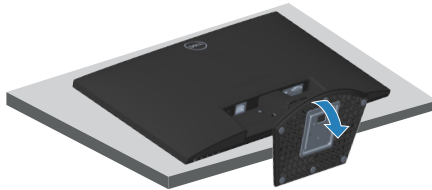


3. Using a long screwdriver press the release button.

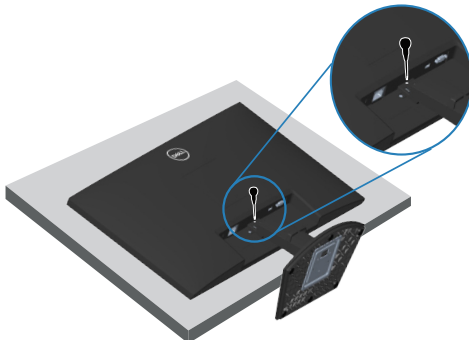

4. While keeping the release button pressed, push the stand out.

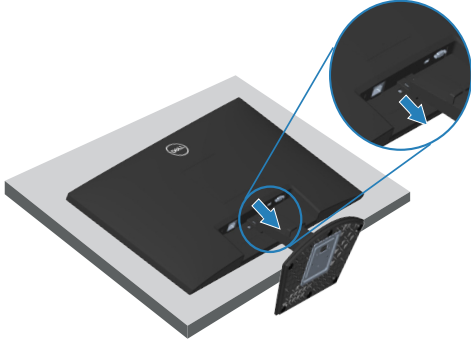


Wall mounting (optional)

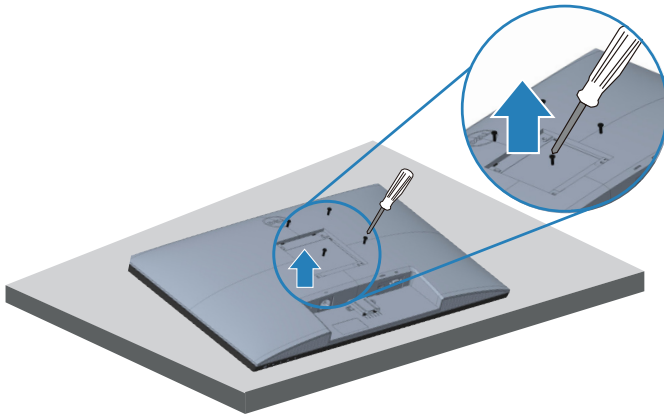


(Screw dimension: M4 x 10 mm).

See the documentation that shipped with the VESA-compatible wall mounting kit.

1. Place the display on a soft cloth or cushion at the edge of the desk.
2. Remove the stand. See [Removing the stand](#) .
3. Remove the four screws that secure the display back cover.
4. Remove VESA cover.
5. Install the mounting bracket from the wall mounting kit to the display.
6. To mount the monitor on the wall, see the documentation that shipped with the wall mounting kit.

 **NOTE: For use only with UL or CSA or GS-listed wall mount bracket with minimum weight/load bearing capacity of 14.72 kg.**

 **NOTE: When using the display, fasten the LCD to a wall using a cord or chain that can support the weight of the monitor in order to prevent the monitor from falling. Installing must be done by a qualified technician , and please contact your supplier for more information.**



Operating your monitor

Turning on the monitor

Press the  button to turn on the monitor.








Using the control buttons

Use the control buttons at the bottom edge of the monitor to adjust the image being displayed.



Control buttons

The following table describes the control buttons:


| Control Buttons | Description |
|---|---|
| 1  Preset mode | Use this button to choose from a list of preset modes. |
| 2  Brightness/Contrast | For direct access to the Brightness and Contrast menu. |
| 3  Menu | To launch the On-Screen Display (OSD) menu, or to access the list of items / options of a menu item. For more information, see Accessing the OSD menu . |
| 4  Exit | To exit or return to the OSD main menu. |
| 5  Power button (with power-status light) | To turn the monitor on or off. Solid white light indicates the monitor is turned on and functioning normally. Blinking white light indicates the monitor is in Standby Mode. |

Using the OSD lock function


You can lock the front-panel control buttons to prevent access to the OSD menu and/or power button.


Use the Lock menu to lock the button(s).

1. Select one of the following options.

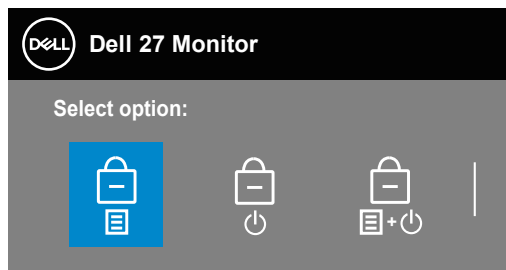

2. The following message appears.

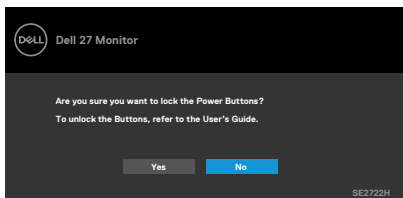


3. Select Yes to lock the buttons. Once locked, pressing any control button will display the lock icon 





Use the front-panel control button to lock the button(s).

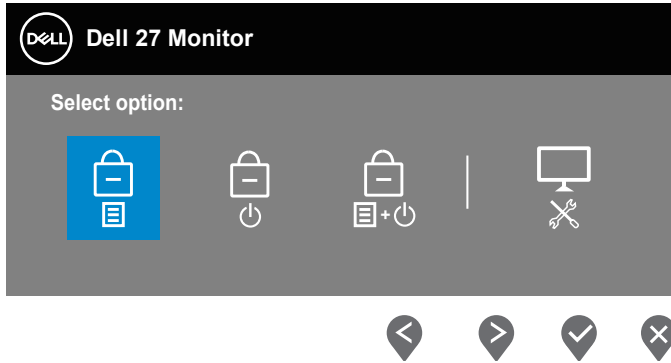

1. Press and hold Button 4 for four seconds, a menu appears on the screen.
2. Select one of the following options:








| | Control Buttons | Description |
|---|--|--|
| 1 |  | Select this option to lock OSD menu function. |
| | Menu Buttons lock | |
| 2 |  | Use this option to lock power button. This will prevent the user to turn off the monitor using the power button. |
| | Power Button lock | |
| 3 |  | Use this option to lock OSD menu and power button to turn off the monitor. |
| | Menu and Power Buttons lock | |
| 4 |  | Use this option to run the built-in diagnostics, see Built-in diagnostics |
| | Built-in Diagnostics | |

To unlock the button(s).


Press and hold **Built-in diagnostics** button (**button 4**) for four seconds until a menu appears on the screen. The following table describes the options to unlock the front-panel control buttons.



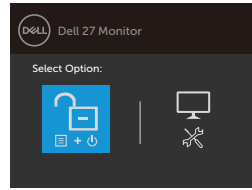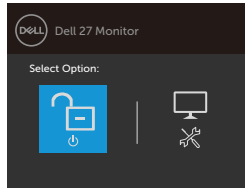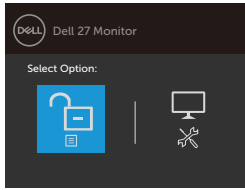



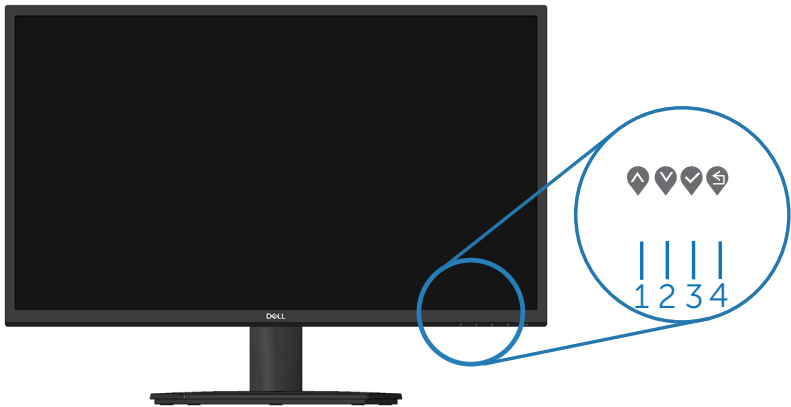

OSD controls

Use the buttons on the bottom edge of the monitor to adjust the image settings.





| Control Buttons | Description |
|--|---|
| 1  Up | Use the Up button to increase values or move up in a menu. |
| 2  Down | Use the Down button to decrease values or move down in a menu. |
| 3  OK | Use the OK button to confirm your selection in a menu. |
| 4  Back | Use the Back button to go back to the previous menu. |




Using the On-Screen Display (OSD) menu









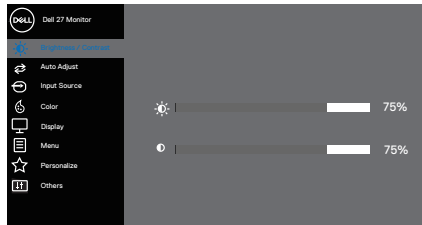


Accessing the OSD menu

 **NOTE:** Any changes you make are automatically saved when you move to another menu, exit the OSD menu, or wait for the OSD menu to close automatically.


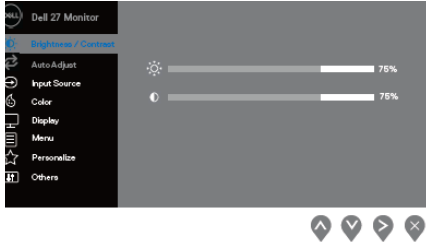




1. Press the  button to display the OSD main menu.

Main menu for HDMI input



2. Press the  and  buttons to move between the setting options. As you move from one icon to another, the option is highlighted.
3. Press the  or  button once to activate the highlighted option.
4. Press  and  button to select the desired parameter.
5. Press  and then use the  and  buttons, according to the indicators on the menu, to make your changes.
6. Select the  to return to previous menu or  to accept and return to previous menu.



| Icon | Menu and Submenus | Description |
|---|-----------------------------|---|
|  | Brightness/ Contrast | <p>Use this option to control the brightness or contrast settings.</p>  |
| | Brightness | <p>Brightness adjusts the luminance of the backlight. Press the  button to increase the brightness and press the  button to decrease the brightness (min. 0 / max. 100).</p> |
| | Contrast | <p>Adjust the brightness first, and then adjust the contrast only if further adjustment is necessary. Press the  button to increase the contrast and press the  button to decrease the contrast (min. 0 / max. 100). The contrast function adjusts the degree of difference between darkness and lightness on the monitor screen.</p> |





Auto Adjust


Use this option to activate automatic setup and adjust menu.




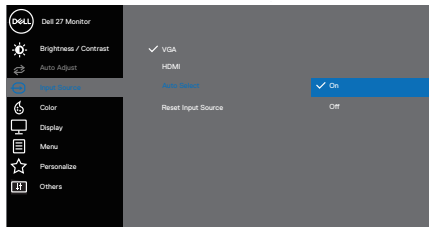




The following dialog appears on a black screen as the monitor self-adjusts to the current input:

Auto Adjustment in Progress...

Auto Adjust allows the monitor to self-adjust to the incoming video signal. After using Auto Adjustment, you can further tune your monitor by using the Pixel Clock (Coarse) and Phase (Fine) controls under Display.

 **NOTE: Auto Adjust does not occur if you press the button while there are no active video input signals or attached cables. This option is only available when you are using the analog(VGA) connector.**






| | | |
|---|----------------------------------|--|
|  | <p>Input Source</p> | <p>Use the input source menu to select between the different video signals that may be connected to your monitor. one VGA and one HDMI input</p>  |
| | <p>VGA</p> | <p>Push  to select the VGA input source when using. VGA connector.</p> |
| | <p>HDMI</p> | <p>Push  to select the HDMI input source when using. HDMI connector.</p> |
| | <p>Auto Select</p> | <p>Select Auto Select to scan for available input signals.</p> |
| | <p>Reset Input Source</p> | <p>Select this option to restore default Input Source.</p> |
|  | <p>Color</p> | <p>Use color to adjust the color setting mode.</p>  |
| | <p>Preset Modes</p> | <p>When you select preset modes, you can choose Standard, ComfortView, Movie, FPS, RTS, RPG, Warm, Cool, or Custom color from the list.</p> <ul style="list-style-type: none"> • Standard: Loads the monitor's default color settings. This is the default preset mode. • ComfortView: Decreases the level of blue light emitted from the screen to make viewing more comfortable for your eyes. |





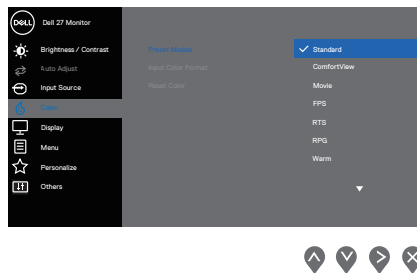







NOTE: To reduce the risk of eye strain and neck/arm/back/shoulders pain from using the monitor for long periods of time, we suggest that you:

- Set the screen about 20~28 inches (50~70 cm) from your eyes.
- Blink frequently to moisten or lubricate your eyes.
- Take regular 20-minute breaks every two hours.
- Look away from your monitor and gaze at a distant object at 20 feet away for at least 20 seconds during the breaks.
- Perform stretches to relieve tension in the neck/arm/back/shoulders during the breaks.
- **Movie:** Loads color settings ideal for movies.
- **FPS:** Loads color settings ideal for First-Person Shooter games.
- **RTS:** Loads color settings ideal for Real-Time Strategy games.
- **RPG:** Loads color settings ideal for Role-Playing games.
- **Warm:** Increases the color temperature. The screen appears warmer with a red/yellow tint.
- **Cool:** Decreases the color temperature. The screen appears cooler with a blue tint.
- **Custom Color:** Allows you to manually adjust the color settings. Press the ◀ and ▶ buttons to adjust the three colors (R, G, B) values and create your own preset color mode.


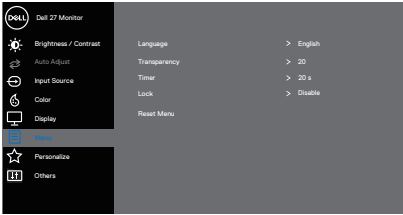















| | |
|----------------------------------|--|
| <p>Input Color Format</p> | <p>Allows you to set the video input mode to:</p> <ul style="list-style-type: none"> • RGB: Select this option if your monitor is connected to a computer or a media player that supports RGB output. • YCbCr/YPbPr*: Select this option if your media player supports only YCbCr/YPbPr output. <div data-bbox="501 341 920 563" data-label="Image"> </div> <p style="text-align: right;"> ▲ ▼ ✓ ⌂ </p> <p>*When VGA input is selected.</p> |
| <p>Hue</p> | <p>This feature can shift the color of the video image to green or purple. This is used to adjust the desired flesh tone color. Use ▲ or ▼ to adjust the hue from 0 to 100.</p> <p>Press ▲ to increase the green shade of the video image.</p> <p>Press ▼ to increase the purple shade of the video image.</p> <p> NOTE: Hue adjustment is available only when you select Movie and Game mode.</p> |
| <p>Saturation</p> | <p>This feature can adjust the color saturation of the video image. Use ▲ or ▼ to adjust the saturation from 0 to 100.</p> <p>Press ▼ to increase the monochrome appearance of the video image.</p> <p>Press ▲ to increase the colorful appearance of the video image.</p> <p> NOTE: Saturation adjustment is available only when you select Movie and Game mode.</p> |
| <p>Reset Color</p> | <p>Resets your monitor's color settings to the factory default.</p> |


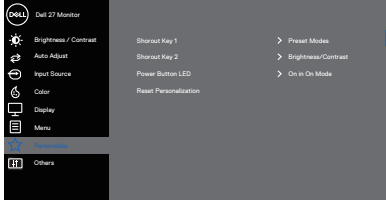

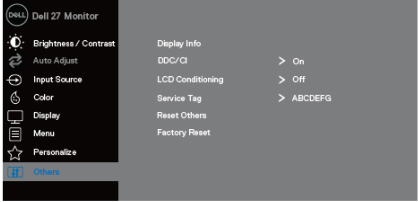


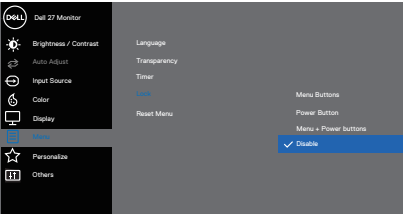

| | |
|--|---|
| <p>Display</p> | <p>Use the display to adjust image.</p>   |
| <p>Aspect Ratio</p> | <p>Adjusts the image ratio to 16:9, 4:3</p> |
| <p>Horizontal Position (VGA input only)</p> | <p>Use  or  to move image left and right. Minimum is '0' (-). Maximum is '100' (+).</p> |
| <p>Vertical Position (VGA input only)</p> | <p>Use  or  to move image up and down. Minimum is '0' (-). Maximum is '100' (+).</p> |
| <p>Sharpness</p> | <p>This feature can make the image look sharper or softer. Use  or  to adjust the sharpness from 0 to 100.</p> |
| <p>Pixel Clock (VGA input only)</p> | <p>The Pixel Clock feature enables you to adjust image quality on your monitor to your preference. Use  or  buttons to adjust for best image quality.</p> |
| <p>Phase (VGA input only)</p> | <p>If satisfactory results are not obtained using the Phase adjustment, use the Pixel Clock (coarse) adjustment and then use Phase (fine), again.</p> |
| <p>Response Time</p> | <p>Allow you to select between Normal (8 ms), Fast(5 ms),Extreme(4 ms).</p> |
| <p>Reset Display</p> | <p>Select this option to restore default display settings.</p> |






| | | |
|---|----------------------------|--|
|  | <p>Menu</p> | <p>Select this option to adjust the settings of the OSD, such as, the languages of the OSD, the amount of time the menu remains on screen and so on.</p>  <p style="text-align: right;">     </p> |
| | <p>Language</p> | <p>Language options set the OSD display to one of the eight languages (English, Spanish, French, German, Brazilian Portuguese, Russian, Simplified Chinese, or Japanese).</p> |
| | <p>Transparency</p> | <p>Select this option to change the menu transparency by pressing the  and  buttons from 0 to 100.</p> |
| | <p>Timer</p> | <p>OSD hold time: sets the length of time the OSD will remain active after the last time you pressed a button.</p> <p>Use  or  to adjust the slider in 1 second increments, from 5 to 60 seconds.</p> |
| | <p>Lock</p> | <p>Controls user access to adjustments. User can select one of the following: Menu Buttons, Power Button, Menu + Power Buttons, Disable.</p>  <p style="text-align: right;">     </p> |
| | <p>Reset Menu</p> | <p>Reset all OSD settings to the factory preset values.</p> |




| | | |
|--|------------------------------|--|
|  | Personalize | <p>Personalize frequently use features using the Shortcut keys, configure Power Button LED or Reset Personalization.</p>   |
| | Shortcut Key 1 | <p>Select one of the following: Preset Modes, Brightness/Contrast, Auto Adjust, Input Source or Aspect Ratio, and set it as shortcut key 1. .</p> |
| | Shortcut Key 2 | <p>Allow you to select one of the following: Preset Modes, Brightness/Contrast, Auto Adjust, Input Source, Aspect Ratio, to set the shortcut key 2.</p> |
| | Power Button LED | <p>Allows you to set the power LED indicator On in On Mode or Off in On Mode to save energy.</p> |
| | Reset Personalization | <p>Reset all settings under the personalize menu to the default setting.</p> |
|  | Others |   |

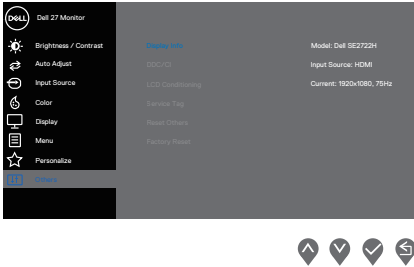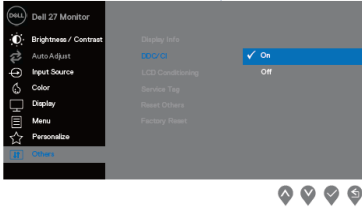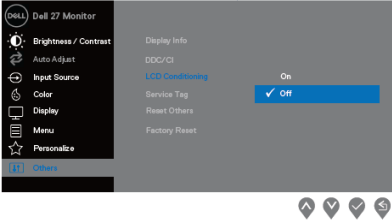

| | |
|--------------------------------|---|
| <p>Display Info</p> | <p>Press to display the information about the display.</p>  |
| <p>DDC/CI</p> | <p>DDC/CI (Display Data Channel/Command Interface) allows you to adjust the monitor settings using software on your computer. Select Off to turn off this feature.</p> <p>Enable this feature for best user experience and optimum performance of your monitor.</p>  |
| <p>LCD Conditioning</p> | <p>Helps to reduce minor cases of image retention. Depending on the degree of image retention, the program may take some time to run. To start LCD conditioning, select on.</p>  |

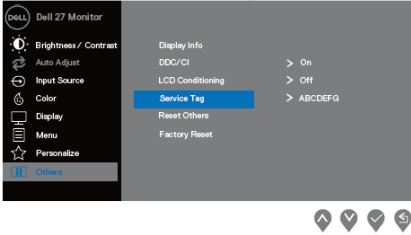


| | |
|-----------------------------|---|
| <p>Service Tag</p> | <p>Display the Service Tag number of the monitor.</p>  <p>The screenshot shows the 'Dell 27 Monitor' OSD menu. The left sidebar contains options: Brightness / Contrast, Auto Adjust, Input Source, Color, Display, Menu, Personalize, and Others. The 'Others' option is selected. The main menu area shows: Display Info, DDC/CI (> On), LCD Conditioning (> Off), Service Tag (> ABCDEFG), Reset Others, and Factory Reset. Navigation arrows are visible at the bottom right of the screen.</p> |
| <p>Reset Others</p> | <p>Reset all settings under the Others setting menu to the factory default.</p> |
| <p>Factory Reset</p> | <p>Reset all settings to the factory default</p> |





OSD warning messages


Before the DDC/CI function is disabled, the following message is displayed.

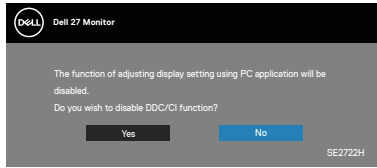

When the monitor enters Standby Mode, the following message appears.

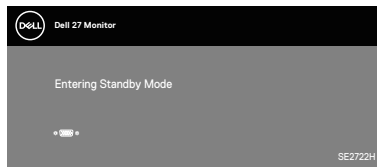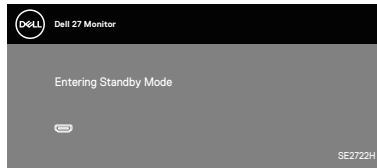

If VGA or HDMI cable is not connected, a floating dialog box as shown below appears. The monitor will enter Standby Mode after 4 minutes if left at this state.

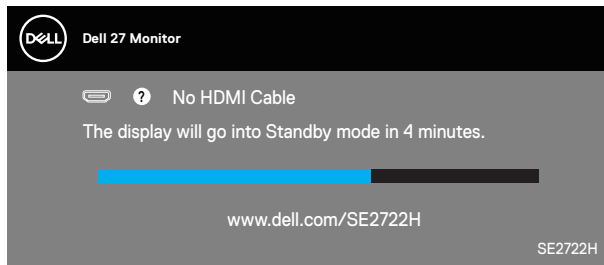



or





Dell 27 Monitor

  No VGA Cable

The display will go into Standby mode in 4 minutes.




www.dell.com/SE2722H

SE2722H

See [Troubleshooting](#) for more information.



Tilt Extension

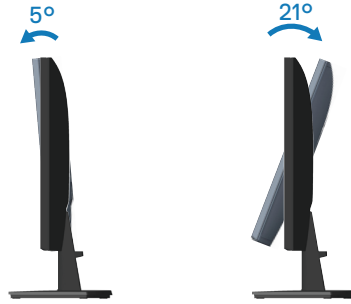

 **NOTE:** The stand is detached when the monitor is shipped from the factory.



Troubleshooting


 **WARNING:** Before you begin any of the procedures in this section, follow the [Safety instructions](#).

Self-Test


Your monitor provides a self-test feature that allows you to check if your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

1. Turn off both your computer and the monitor.
2. Disconnect all video cables from the monitor. This way, the computer doesn't have to be involved.
3. Turn on the monitor.

If the monitor is working correctly, it detects that there is no signal and one of the following message appears. While in self-test mode, the power LED remains white.

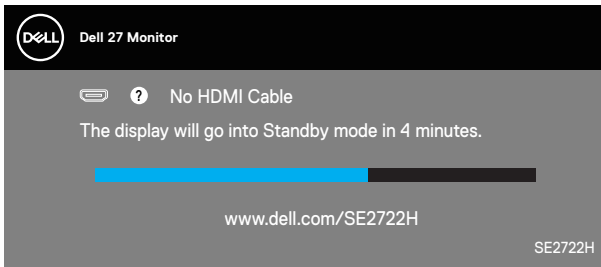

OR

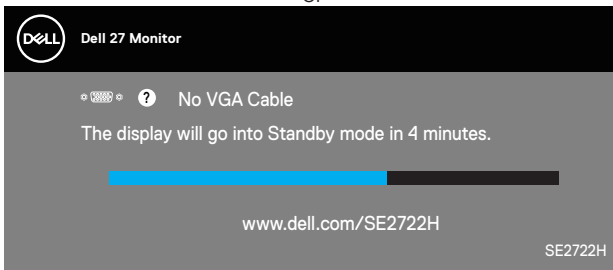

 **NOTE:** This box also appears during normal system operation, if the video cable is disconnected or damaged.



4. Turn Off your monitor and reconnect the video cable; then turn on your computer and the monitor.


If your monitor remains dark after you reconnect the cables, check your video controller and computer.



Built-in diagnostics


Your monitor has a built-in diagnostic tool that helps you determine if any screen abnormality you experience is an inherent problem with your monitor, or with your computer and video card.


NOTE: You can run the built-in diagnostics only when the video cable is unplugged and the monitor is in self-test mode.

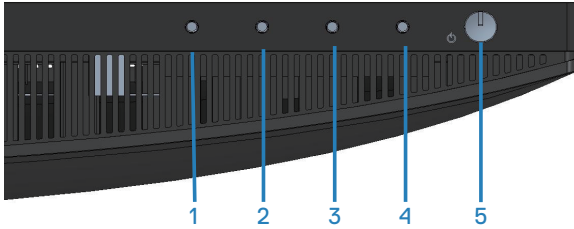


To run the built-in diagnostics:

1. Ensure that the screen is clean (no dust particles on the surface of the screen).
2. Unplug the video cable(s) from the back of the computer or monitor. The monitor then goes into the self-test mode.
3. Press and hold the Exit button (button 4) for four seconds to enter the OSD lock/unlock menu.

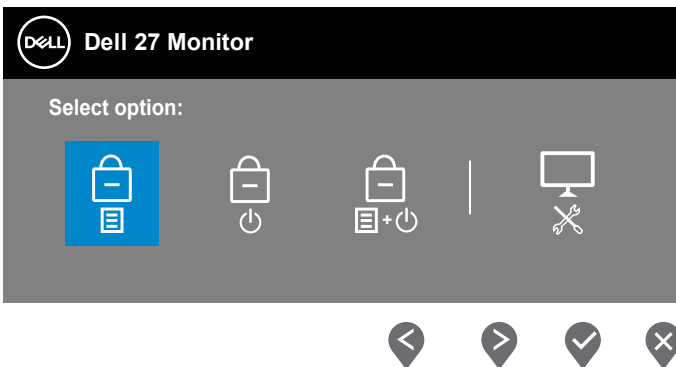

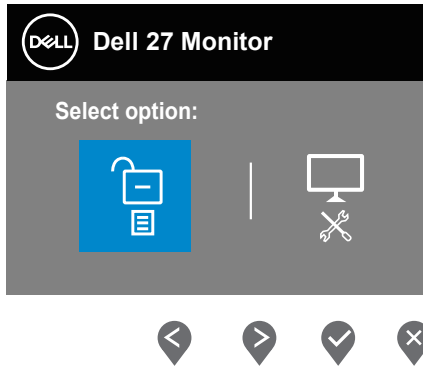

4. Select the  icon to run the built-in diagnostics.
5. Carefully inspect the screen for abnormalities.
6. Press the Up button (button 1) on the back cover again. The color of the screen changes to grey.
7. Inspect the display for any abnormalities.
8. Repeat step 6 and 7 to inspect the display in red, green, blue, black, white and text pattern screens.

The test is complete when the text pattern screen appears. To exit, press the Up button (button 1) again.

If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.



Common problems

The following table contains general information about common monitor problems you might encounter and the possible solutions:

| Common Symptoms | Possible Solutions |
|------------------------|--|
| No Video/Power LED off | <p>Ensure that the video cable connecting the monitor and the computer is properly connected and secure.</p> <ul style="list-style-type: none">• Verify that the power outlet is functioning properly using any other electrical equipment.• Ensure that the power button is pressed.• Ensure that the correct input source is selected via the Input Source menu. |
| No Video/Power LED on | <ul style="list-style-type: none">• Increase brightness and contrast controls using the OSD.• Perform monitor self-test feature check.• Check for bent or broken pins in the video cable connector.• Run the built-in diagnostics.• Ensure that the correct input source is selected via the Input Source menu. |
| Poor Focus | <ul style="list-style-type: none">• Eliminate video extension cables.• Reset the monitor to Factory Settings (Factory Reset).• Change the video resolution to the correct aspect ratio. |
| Shaky/Jittery Video | <ul style="list-style-type: none">• Reset the monitor to Factory Settings (Factory Reset).• Check environmental factors.• Relocate the monitor and test in another room. |
| Missing Pixels | <ul style="list-style-type: none">• Cycle power On-Off.• Pixel that is permanently Off is a natural defect that can occur in LCD technology.• For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: www.dell.com/pixelguidelines. |



| | |
|---------------------------|---|
| Stuck-on Pixels | <ul style="list-style-type: none"> • Cycle power On-Off. • Pixel that is permanently off is a natural defect that can occur in LCD technology. • For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: www.dell.com/pixelguidelines. |
| Brightness Problems | <ul style="list-style-type: none"> • Reset the monitor to Factory Settings (Factory Reset). • Adjust brightness & contrast controls via OSD. |
| Geometric Distortion | <ul style="list-style-type: none"> • Reset the monitor to Factory Settings (Factory Reset). • Adjust horizontal & vertical controls via OSD. |
| Horizontal/Vertical Lines | <ul style="list-style-type: none"> • Reset the monitor to Factory Settings (Factory Reset). • Perform monitor self-test feature check and determine if these lines are also in self-test mode. • Check for bent or broken pins in the video cable connector. • Run the built-in diagnostics. |
| Synchronization Problems | <ul style="list-style-type: none"> • Reset the monitor to Factory Settings (Factory Reset). • Perform monitor self-test feature check to determine if the scrambled screen appears in self-test mode. • Check for bent or broken pins in the video cable connector. • Restart the computer in the safe mode. |
| Safety Related Issues | <ul style="list-style-type: none"> • Do not perform any troubleshooting steps. • Contact Dell immediately. |
| Intermittent Problems | <ul style="list-style-type: none"> • Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. • Reset the monitor to Factory Settings (Factory Reset). • Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode. |
| Missing Color | <ul style="list-style-type: none"> • Perform monitor self-test feature check. • Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. • Check for bent or broken pins in the video cable connector. |



| | |
|---|---|
| Wrong Color | <ul style="list-style-type: none"> • Try different Preset Modes in Color settings OSD. Adjust R/G/B value in Custom Color in Color settings OSD. • Change the Input Color Format to RGB or YCbCr/YPbPr in the Color settings OSD. • • Run the built-in diagnostics. |
| Image retention from a static image left on the monitor for a long period of time | <ul style="list-style-type: none"> • Set the screen to turn off after a few minutes of screen idle time. These can be adjusted in Windows Power Options or Mac Energy Saver setting. • Alternatively, use a dynamically changing screensaver. |
| Video Ghosting or Overshooting | <ul style="list-style-type: none"> • Change the Response Time in the Display OSD to Normal, Fast or Extreme depending on your application and usage. |



Product-specific problems

| Specific Symptoms | Possible Solutions |
|---|--|
| Screen image is too small | <ul style="list-style-type: none">• Check the Aspect Ratio setting in the Display settings OSD.• Reset the monitor to Factory Settings (Factory Reset). |
| Cannot adjust the monitor with the buttons on the bottom of the panel | <ul style="list-style-type: none">• Turn Off the monitor, unplug the power cord, plug it back, and then turn On the monitor.• Check if the OSD menu is locked. If yes, press and hold the Exit button (button 4) for four seconds to unlock. |
| No Input Signal when user controls are pressed | <ul style="list-style-type: none">• Check the signal source. Ensure the computer is not in Standby Mode by moving the mouse or pressing any key on the keyboard.• Check if the video cable is plugged in properly. Disconnect and reconnect the video cable if necessary.• Reset the computer or video player. |
| The picture does not fill the entire screen | <ul style="list-style-type: none">• Due to different video formats (aspect ratio) of DVDs, the monitor may display in full screen.• Run the built-in diagnostics. |



Appendix

 **WARNING: Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.**

For information on safety instructions, see the **Safety Environment and Regulatory Information (SERI)**.

FCC notices (U.S. Only) and other regulatory information

For FCC notices and other regulatory information, see the regulatory compliance website located at www.dell.com/regulatory_compliance.

Contacting Dell

For customers in the United States, call 800-WWW-DELL (800-999-3355).

 **NOTE: If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.**

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area.

- Online technical assistance — www.dell.com/support/monitors
- Contacting Dell — www.dell.com/contactdell

EU product database for energy label and product information sheet

SE2722H : <https://eprel.ec.europa.eu/qr/471652>

SE2722HX : <https://eprel.ec.europa.eu/qr/471677>





Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>